



Nikon Coolpix 7900 SIM Card Replacement

To detail where the Memory Card is located and how to remove it.

Written By: Kaky Payne



Step 1 — SIM Card



- Push up on the covering to open.

Step 2



- Push on the Memory Card to eject it.

To reassemble your device, follow these instructions in reverse order.