



Nikon Coolpix AW130 Back Panel Replacement

If the LCD screen is cracked or the back wheel buttons are faulty, it is necessary to remove the back panel.

Written By: Lauren Stepp



This document was generated on 2019-09-16 03:26:17 PM (MST).

INTRODUCTION

This guide provides instruction for safely exposing the LCD screen and internal guts of the Nikon Coolpix AW130.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Battery



- Using your thumb and pointer finger, open the card/battery hatch by pressing the center button of the wheel and turning the entire wheel to the left.

 When reassembling, you must turn this wheel to the right until it clicks.

Step 2



- You should feel the door begin to loosen. Carefully pull the hatch open.

Step 3




- Push the yellow battery/charger compartment tab up using your thumb nail.

Step 4



- After pressing the yellow tab, the battery should loosen.
- Slowly pull the battery completely out.

Step 5 — Back Panel

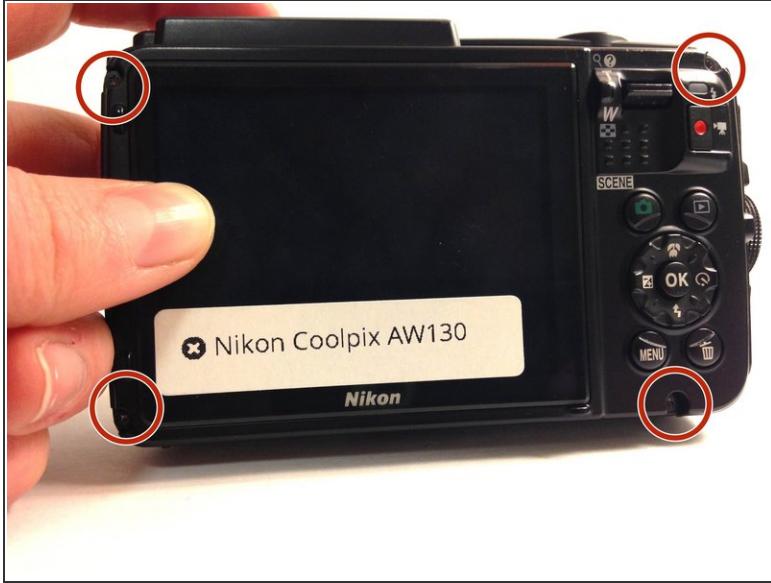

- Using the T5 Torx screwdriver, remove all four 4mm screws.

Step 6



- Using a Phillips #000 screwdriver, remove the single 3mm screw found inside the battery/charging compartment.

Step 7



- Remove the upper cover (connected by glue) and unscrew the single Philips screw.

Step 8



- Remove two Philips screws from the bottom cover, lift gently the cover and remove the single Philips screw under it.

Step 9



- Carefully remove the back cover from the camera body.

To reassemble your device, follow these instructions in reverse order.