



# Nikon Coolpix AW130 Map/Wi-Fi/Action Buttons Replacement

Since the Nikon Coolpix AW130 is often used outdoors, muck and grime often cause the map/wi-fi/action buttons to become "sticky." Replacing these buttons is a simple fix.

Written By: Lauren Stepp



This document was generated on 2019-09-21 11:22:55 AM (MST).

## INTRODUCTION

These three buttons supply the Nikon Coolpix AW130 with its supplementary features such as instantaneous sharing and location services. Nevertheless, they can become easily dirtied by underwater adventures and off-roading.

### TOOLS:

- Tweezers (1)
- Metal Spudger (1)

## Step 1 — Battery



- Using your thumb and pointer finger, open the card/battery hatch by pressing the center button of the wheel and turning the entire wheel to the left.

 When reassembling, you must turn this wheel to the right until it clicks.

## Step 2



- You should feel the door begin to loosen. Carefully pull the hatch open.

## Step 3



- Push the yellow battery/charger compartment tab up using your thumb nail.

## Step 4



- After pressing the yellow tab, the battery should loosen.
- Slowly pull the battery completely out.

## Step 5 — Map/Wi-Fi/Action Buttons



- Using the spudger, pry the plastic button face from the camera body.

 The sharp edges of the spudger could cut you or pierce an exposed battery.

## Step 6



- Using tweezers from the precision tweeler set, remove the buttons from the larger plastic piece.

## Step 7



- Using tweezers from the precision tweezer set, remove the silicon backing from the buttons.
- From there, the buttons should dislodge from their plastic casing.

To reassemble your device, follow these instructions in reverse order.