



# Nikon Coolpix B700 Button Assembly Replacement

Remove the button assembly on a Nikon Coolpix B700.

Written By: Carlos Salgado



## INTRODUCTION

This guide shows how to replace the assembly of the shutter button/mode selector dial/buttons. This assembly can be replaced if any of the buttons malfunction or are faulty. The back cove and bracket need to be removed before removing the button assembly.

### TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- Metal Spudger (1)
- Tweezers (1)

## Step 1 — Back Frame Assembly



- Use the Phillips screwdriver to remove the two 5.5mm screws on the left side of the camera.

## Step 2



- Use the Phillips screwdriver to remove the seven 5.5mm screws from the bottom of the camera.

## Step 3



- Use the Phillips screwdriver to remove the two 5.5mm screws on the right side of the camera.
- Open the HDMI flap to remove a 5.5mm screw.

 Don't forget to replace the hidden screw under the HDMI flap during reassembly.

## Step 4




- Use the Phillips screwdriver to remove the two 5.5mm screws under the LCD panel.

## Step 5





- Open the flash assembly and insert the spudger into the slot under the flash unit and twist.
- While twisting, pry apart the shell to split the camera in half.

## Step 6

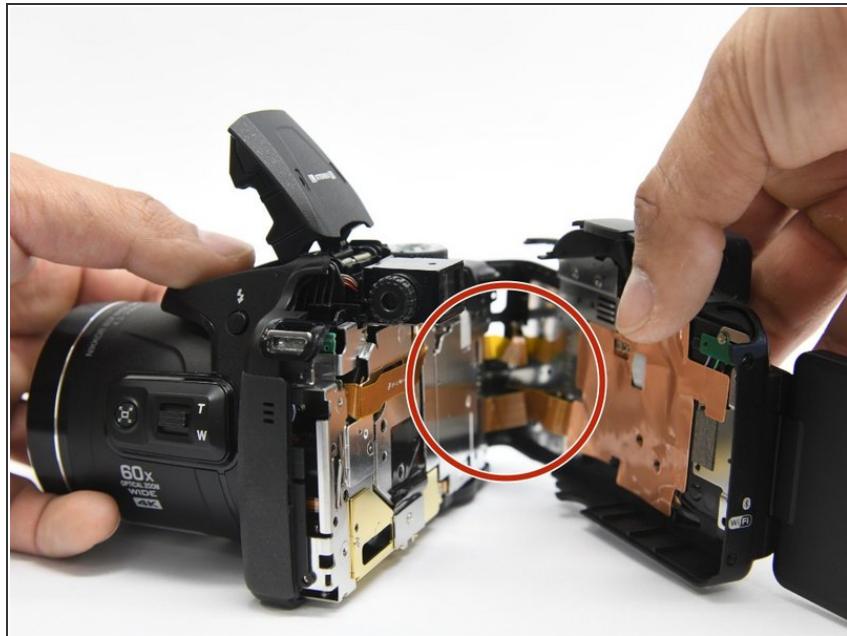

Be careful not to damage the ribbons that connect the halves together.


## Step 7

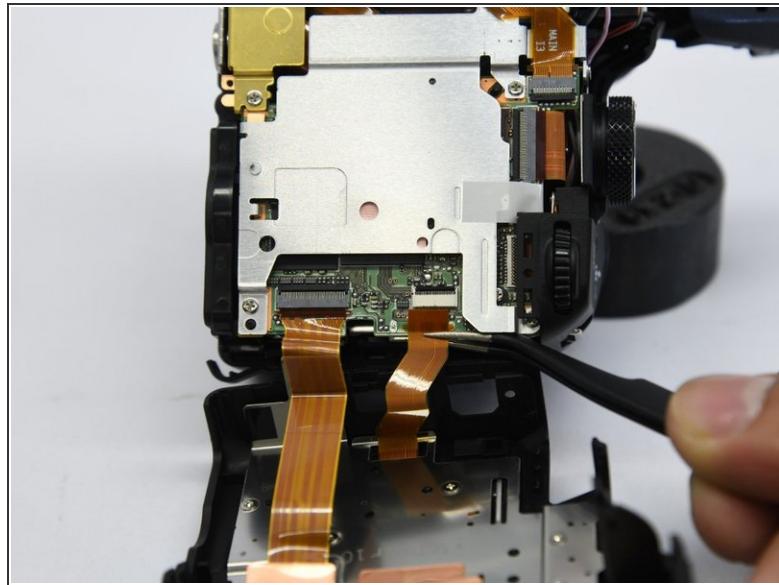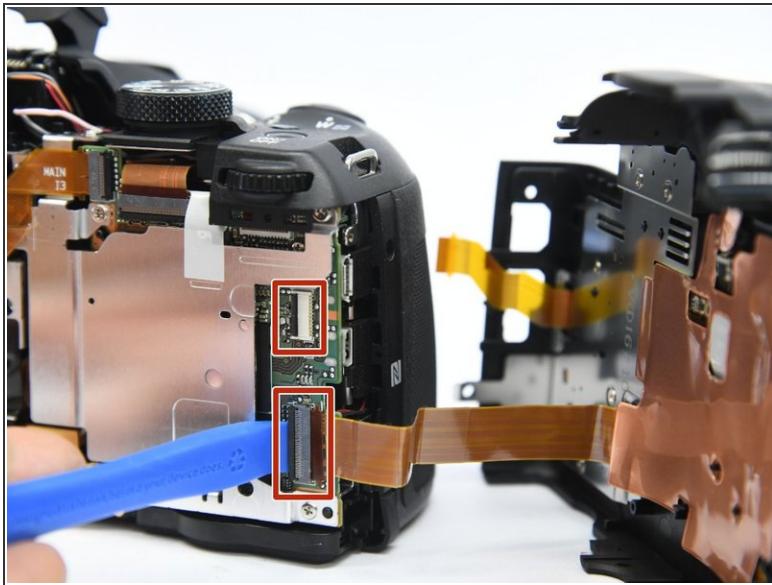

- Place the pry tool under the black latch. Lift gently until the latch flips up.
- Gently pull the ribbon away from the latch.

**⚠** Be gentle when taking ribbons out and apart because they are fragile.

## Step 8 — Button Assembly

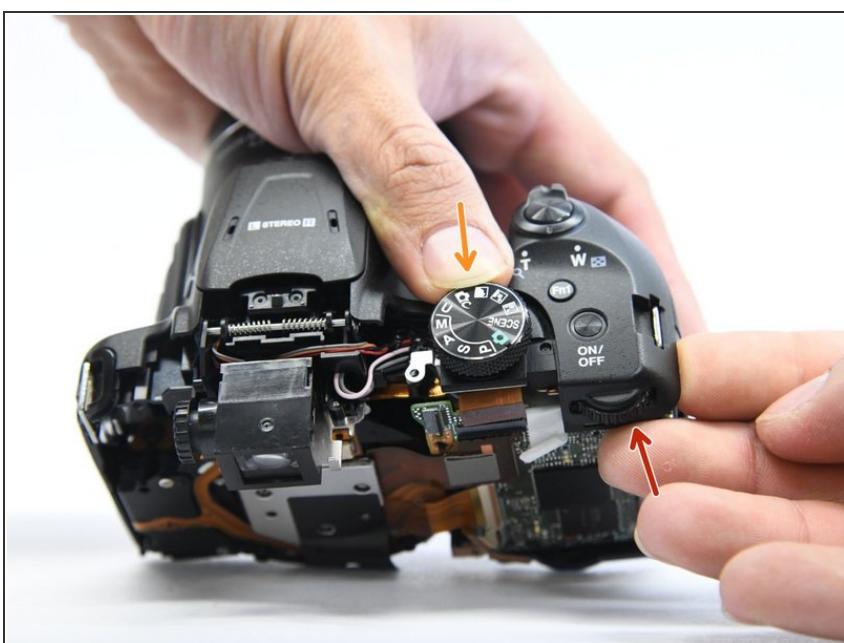

- Lift the corner under the power button up.
- While at the same time pushing the selector knob back.

## Step 9



- This should remove the entire assembly from the camera housing.

To reassemble your device, follow these instructions in reverse order.