




Nikon Coolpix B700 LCD Screen Replacement

How to replace the LCD Screen for a Nikon Coolpix B700.

Written By: Carlos Salgado

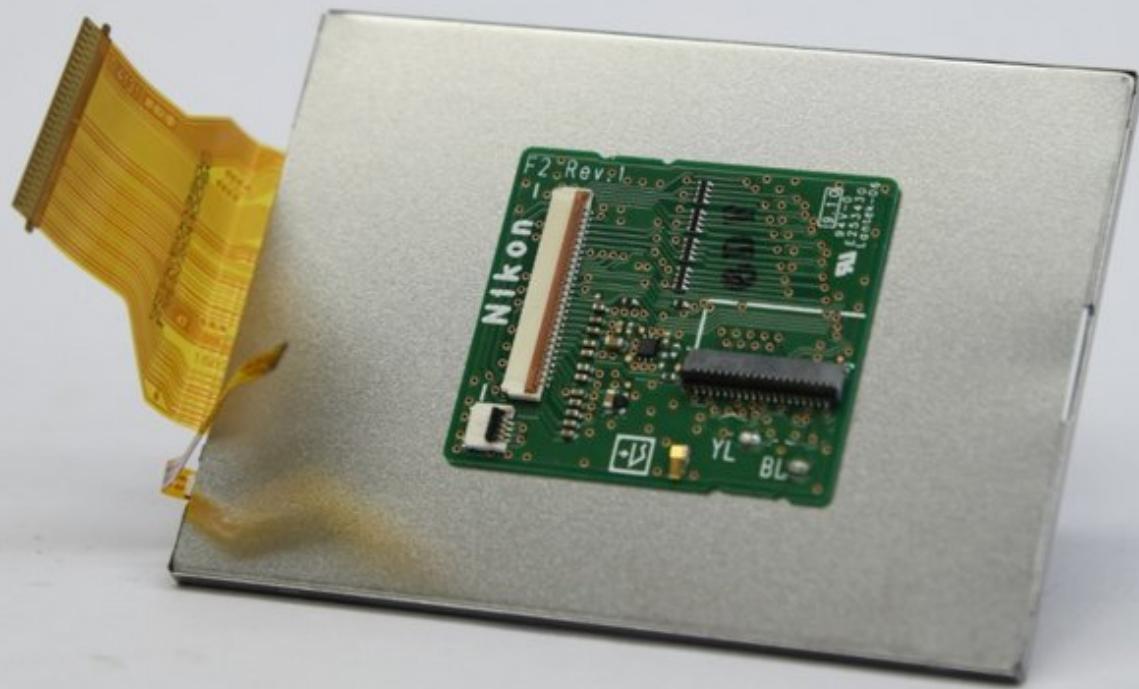

INTRODUCTION

The LCD screen can be easily replaced without removing any other parts from the device. If the LCD screen is cracked or the backlight is inoperable, refer to this replacement guide.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Jimmy](#) (1)

Step 1 — LCD Screen



- Use a Phillips screwdriver to remove the two 3.5mm screws at the top and bottom of the LCD Screen.

Step 2

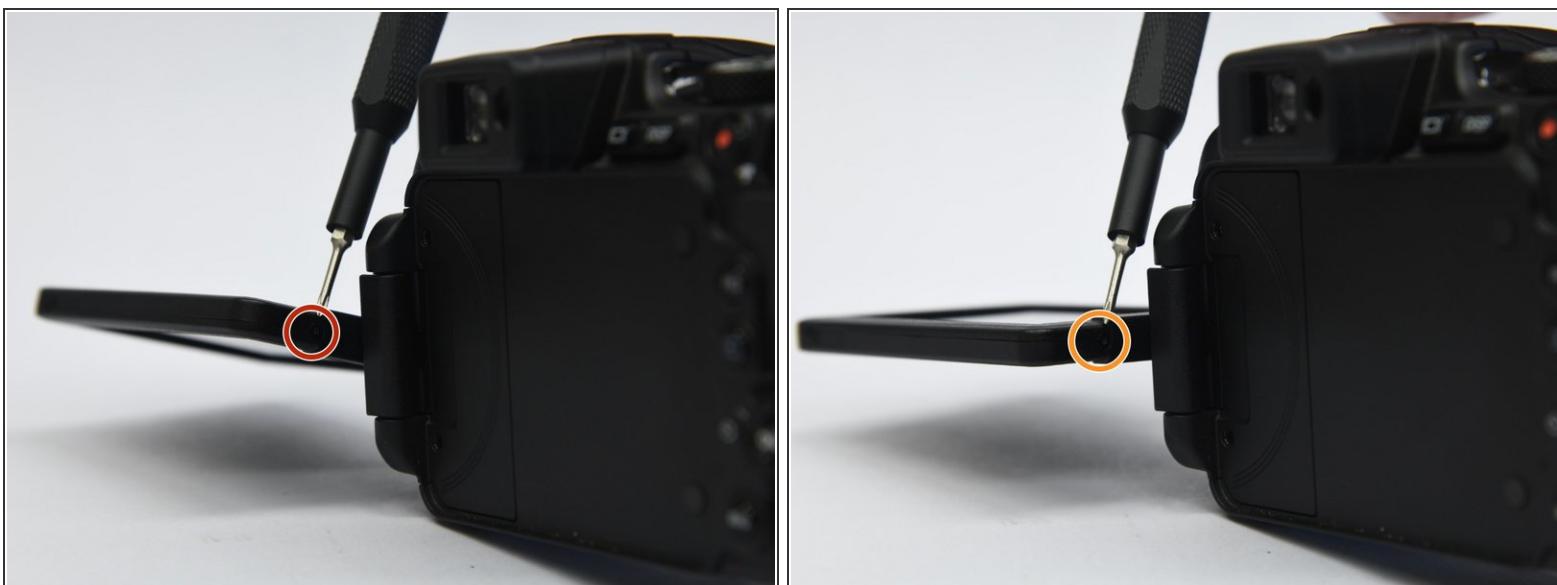


- Use a Phillips screwdriver to remove the two 3.5mm screws on both sides of the side of the screen.

Step 3




- Use a metal spudger to pry open the LCD cover. Then slide it down the length of the screen until the cover comes apart.

Step 4

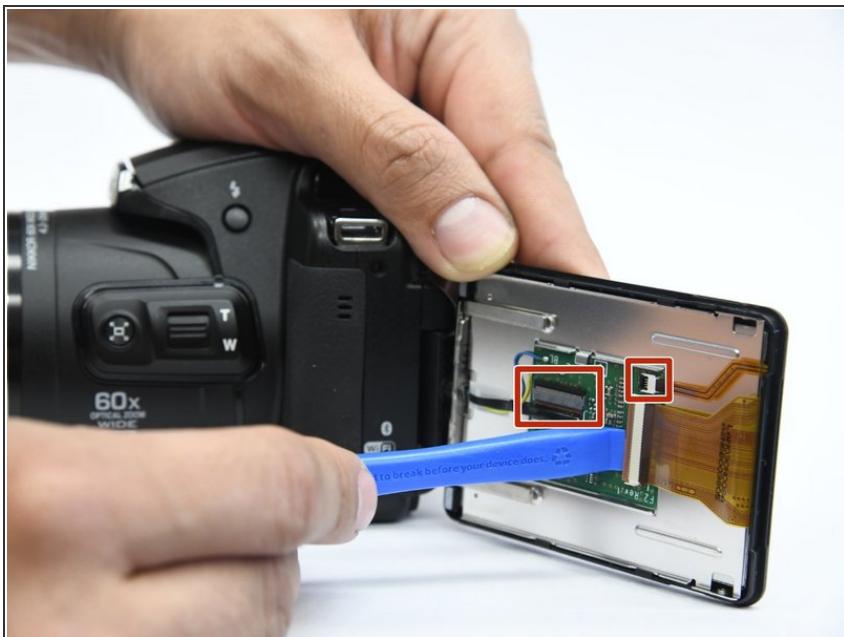

- Use the pry tool and slide it under the black tab and lift up gently. Do this again for the other two ZIF tabs.

Step 5

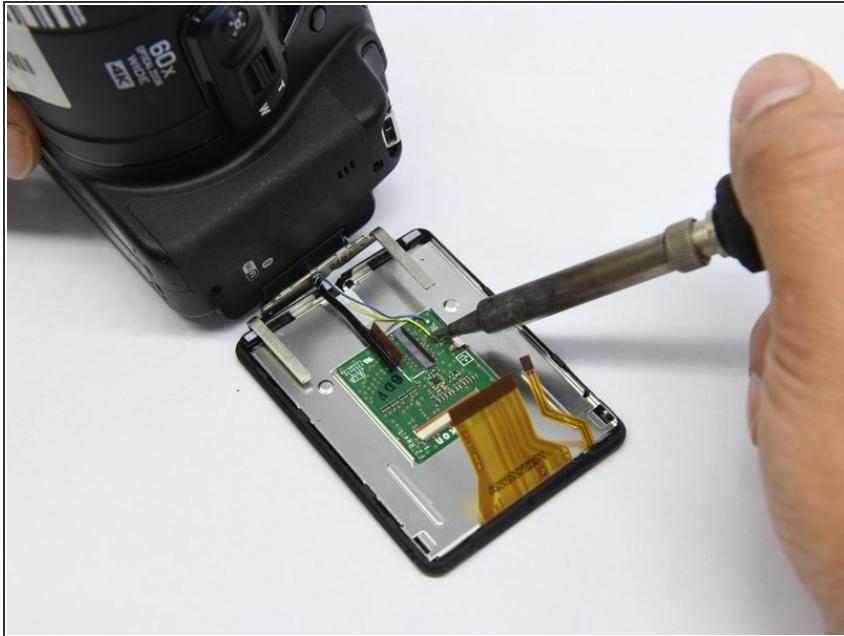

- Use the solder gun and desolder the yellow and blue wires.

Step 6



- Use the jimmy and slide it in between the LCD screen and lift out the LCD Screen.

To reassemble your device, follow these instructions in reverse order.