



# Nikon Coolpix E5700 Battery Replacement

Use this guide to replace your battery.

Written By: Raana



## INTRODUCTION

This guide will walk you through the necessary steps to access the battery in the Nikon Coolpix E5700.

## Step 1 — Battery



- Use your finger tip to slide the battery release tab toward the battery symbol on the E5700.
- Open the battery door.

## Step 2



- Pull the battery out of the E5700.

*(i)* It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

To reassemble your device, follow these instructions in reverse order.