




Nikon Coolpix E5700 Speaker Replacement

Locating and removing the speaker of the Nikon Coolpix E5700

Written By: Kyle Sitton

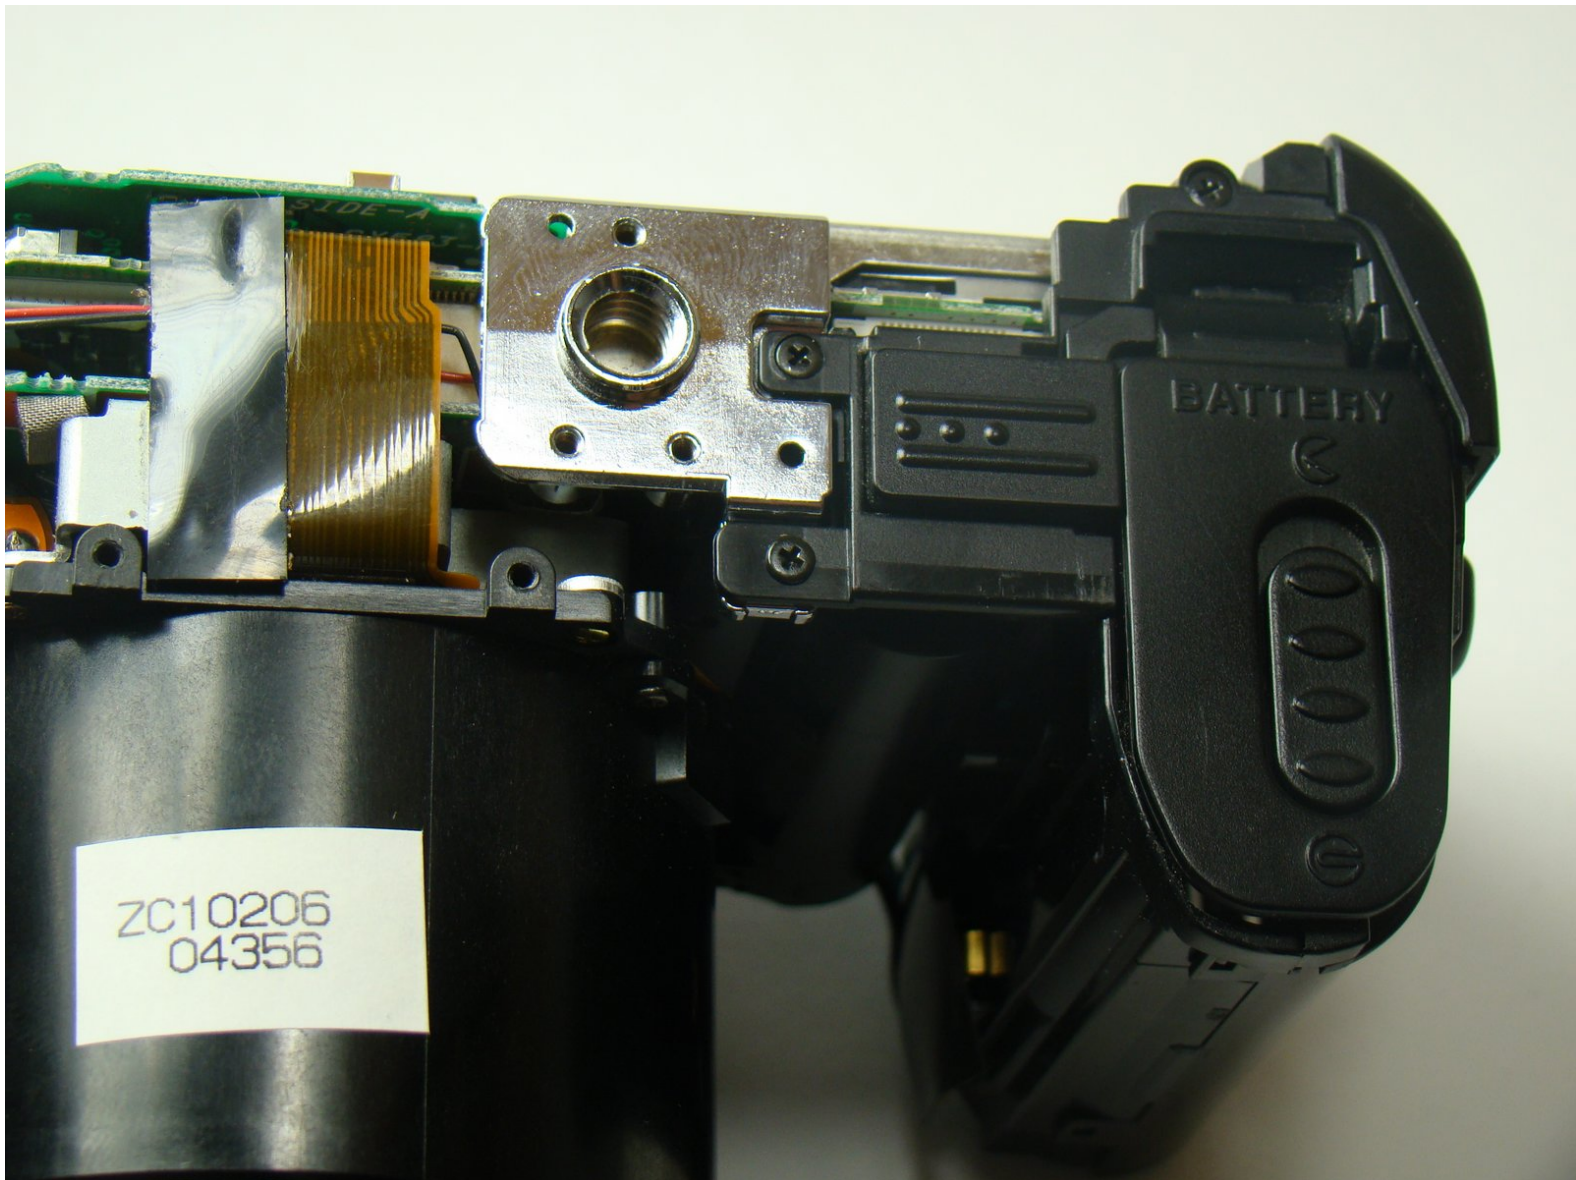

INTRODUCTION

This guide will walk you through the necessary steps to remove the speaker in the Nikon Coolpix E5700.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Use your finger tip to slide the battery release tab toward the battery symbol on the E5700.
- Open the battery door.

Step 2



- Pull the battery out of the E5700.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

Step 3 — Back Panel



- Turn to the bottom of the camera.
- Remove the two Phillips screws located directly below the back monitor

Step 4



- Turn the camera to the side with the memory card slot and open the compartment for the CF card.
- Remove the top two Phillips screws closest to the back panel.

Step 5





- Turn to the back of the camera.
- Remove the top most Phillips screw on the back panel.

Step 6



- Turn to the last side of the back panel.
- Remove the Phillips screw below the eyepiece.
- Remove the Phillips screw located above the speaker.



Step 7

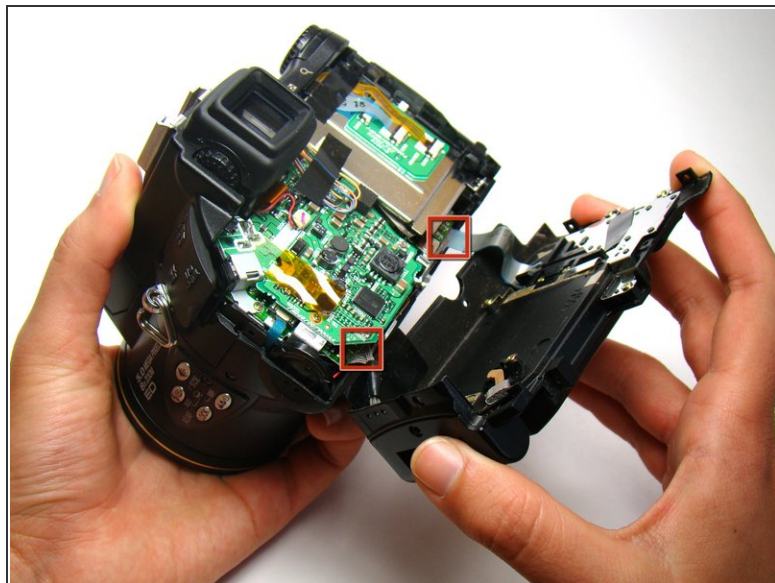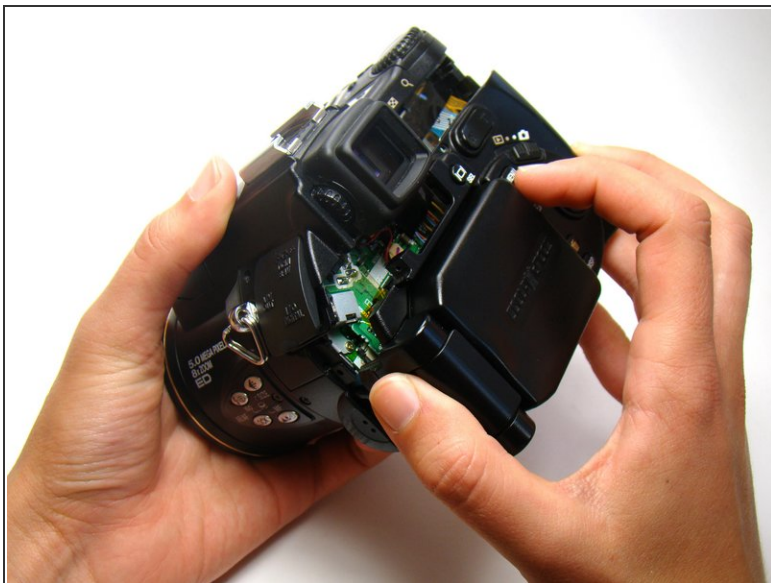

- Gently begin to remove the back panel.

⚠ Caution: There are two bundles of wires connecting the back panel to the camera. Be sure not to pull too hard and yank these out.

Step 8

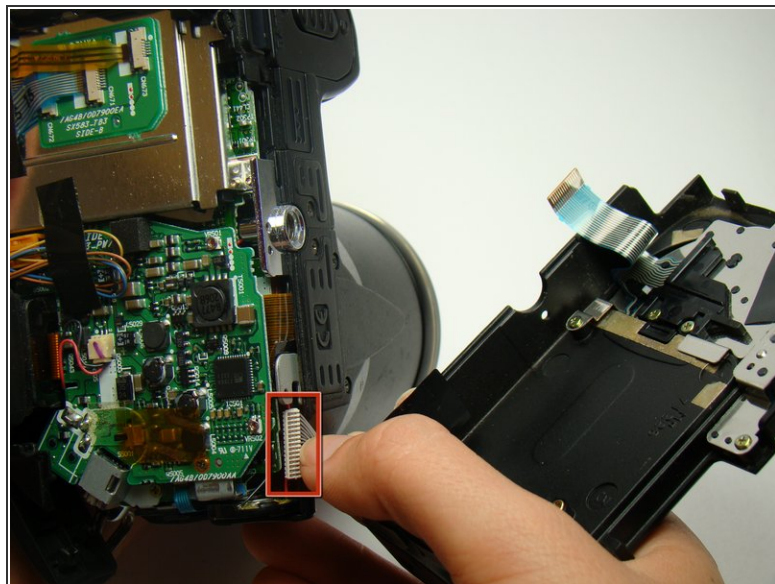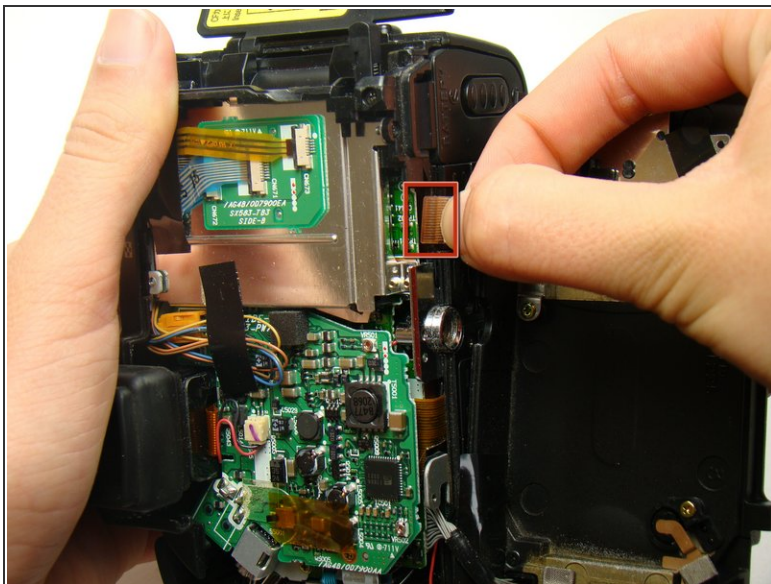


- Now gently unplug the two wires at the bottom of the panel.

Step 9 — Top Cover



- Finish pulling away the back panel.
- Turn the camera to its non-grip side.
- Remove the Phillips screw located above the strap holder.

Step 10

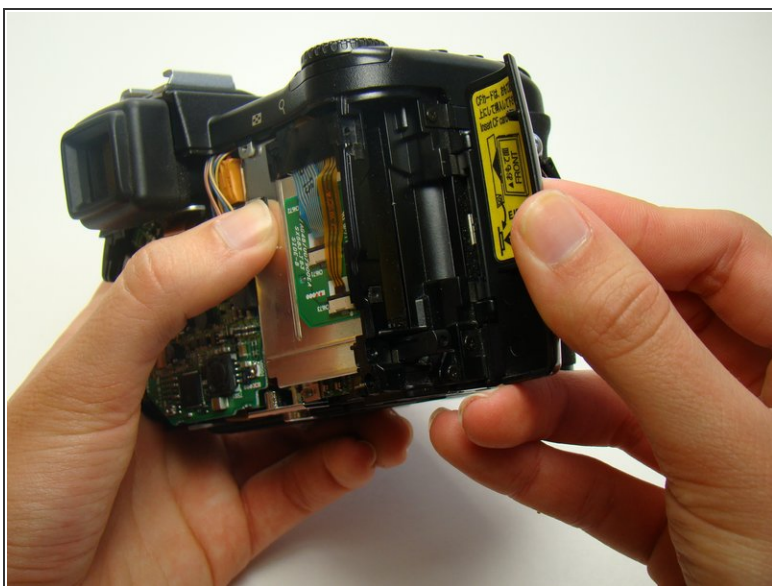

- Open the CF card slot.
- Remove the Phillips screw near the top of the camera.

Step 11



- Turn to the front of the camera.
- Lift up the corner of the grip pad nearest to the flash bulb.
- Remove the Phillips screw underneath the grip pad.

Step 12



- Lift up the flash bulb container.
- Remove the two Phillips screws located near the base of the section.

Step 13




- Open the battery compartment.
- Remove the Phillips screw located at the bottom of the battery compartment.

Step 14




- Begin to lift the top cover from the rest of the camera.
- ⚠ Be careful when doing this because many wires are connecting the top piece to the camera. Pulling too hard may pull these wires out.

Step 15

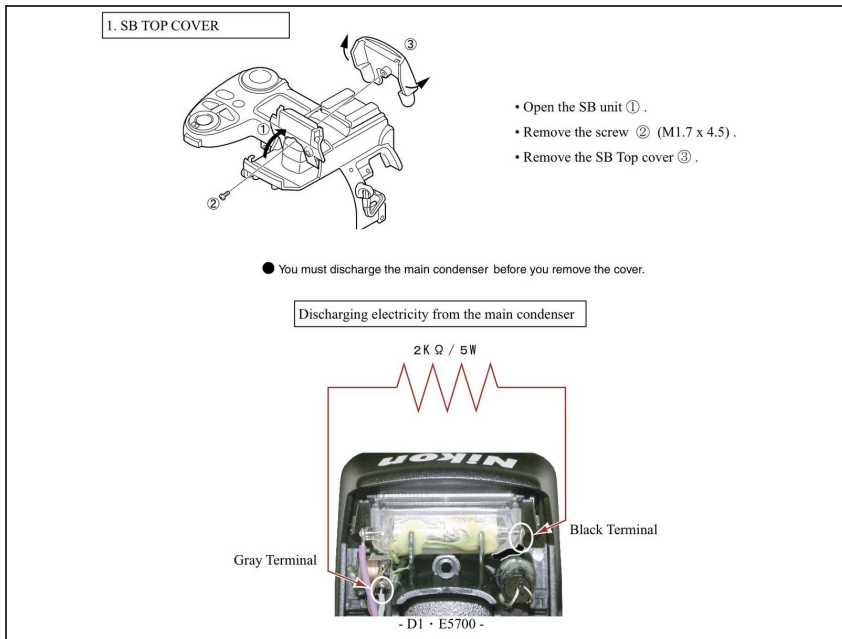

- In order to pull the top panel without removing the flash unit. You must remove the flash top cover, taking away the screw under the bulb (see image). then gently remove the plastic top cover. **IMPORTANT:** discharge the condenser as soon as possible (the flash wires are now exposed, and dangerous).

Step 16

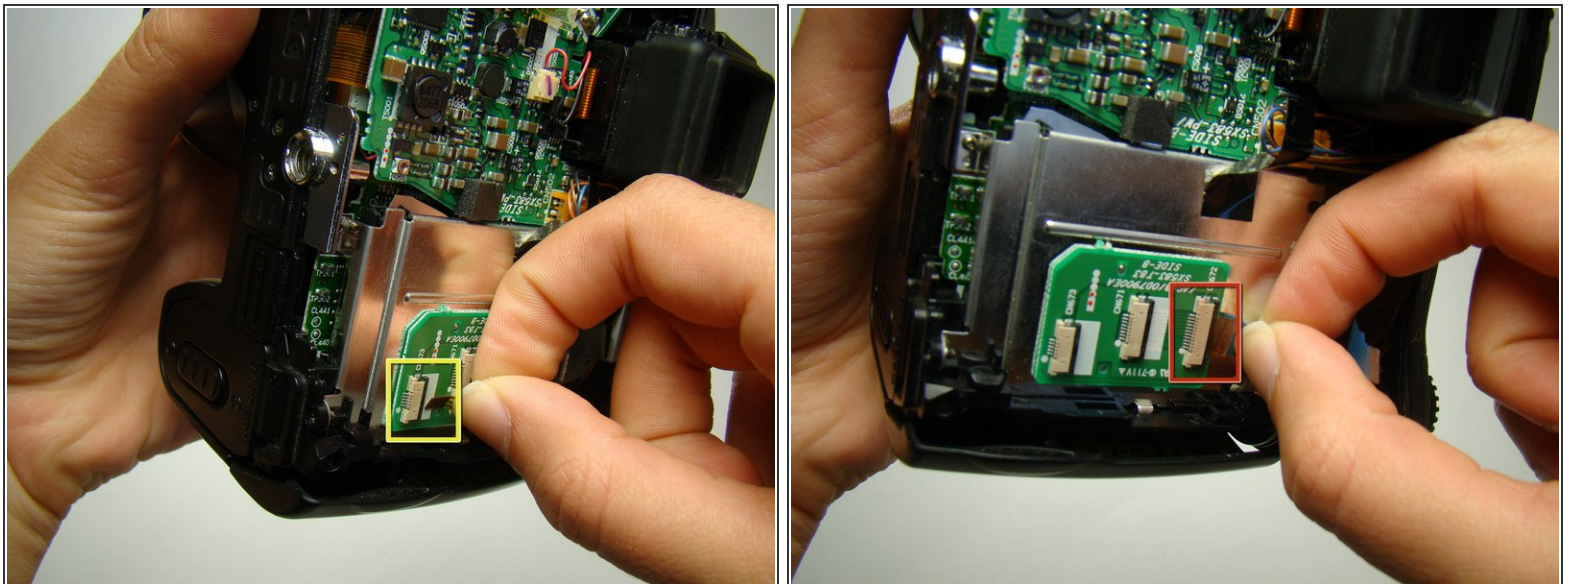



- Unplug the orange ribbon wire from the back of the camera.
- Unplug the two blue ribbon wires from the back of the camera.

Step 17




- Remove the Phillips screws on both sides of the flash bulb mount.

Step 18

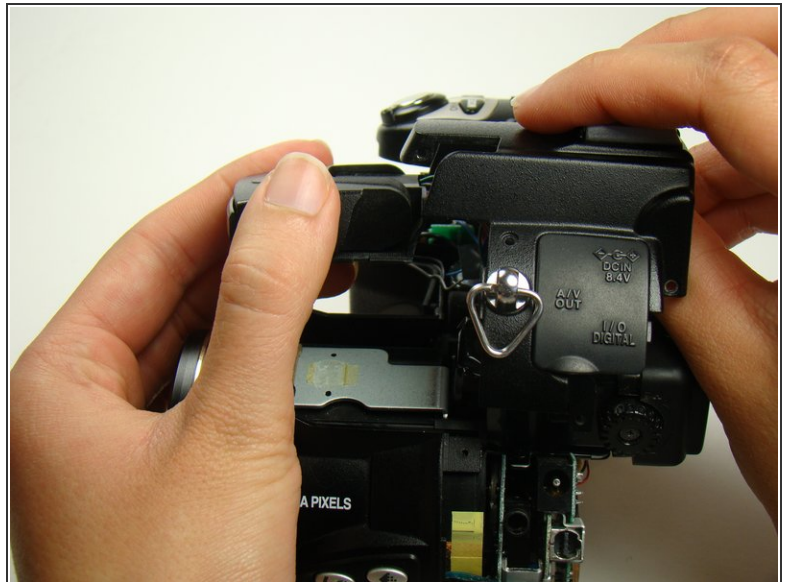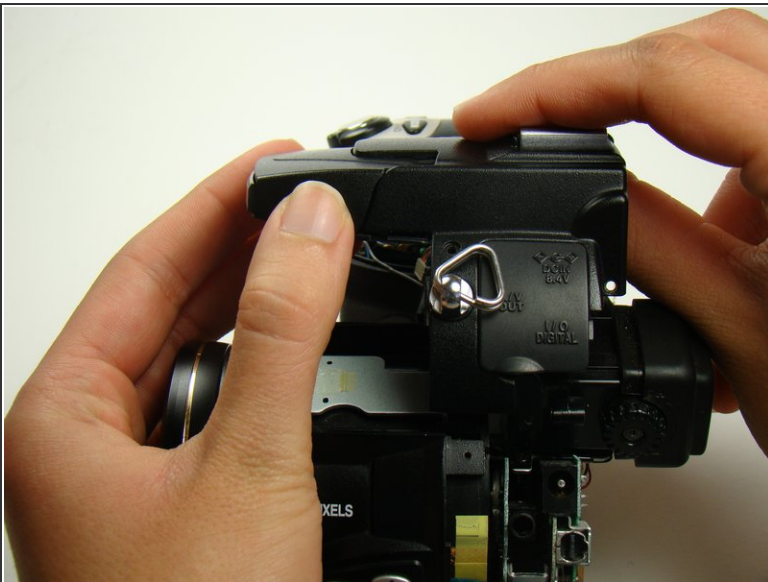

- Lift the top panel up and pull the flash bulb housing away from the rest of the top panel.
- ⓘ Note: The top panel will be difficult to separate from the flash bulb housing. Place your hands as shown in the picture and push upward with your thumb while holding the flash bulb housing stationary

Step 19

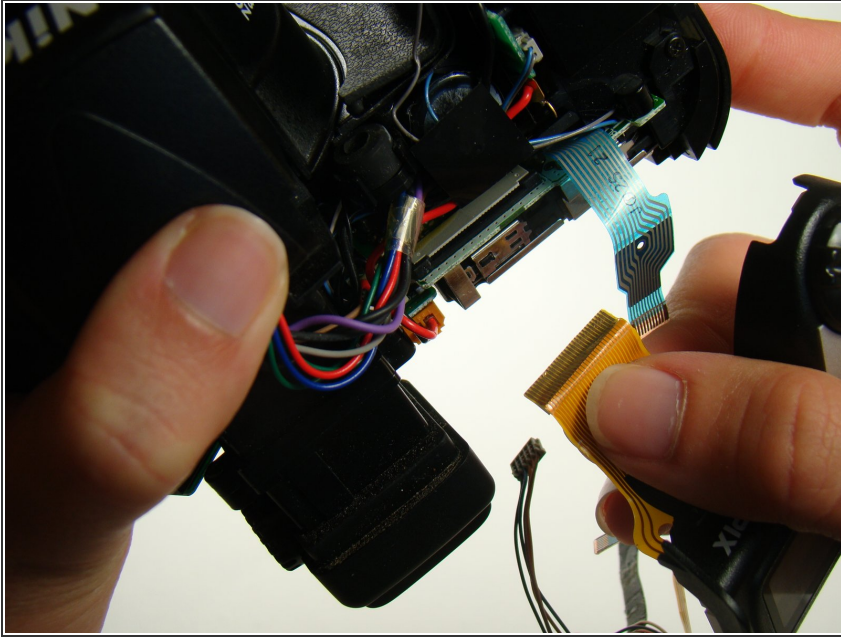

- Unplug the orange ribbon and the other wires and finish carefully removing the top panel.

Step 20 — Front Cover



- Remove all four of the screws on the bottom of the camera.

Step 21




- Remove the two Phillips screws located underneath the CF card cover.

Step 22




- Remove the two screws on the left side of the camera.

Step 23

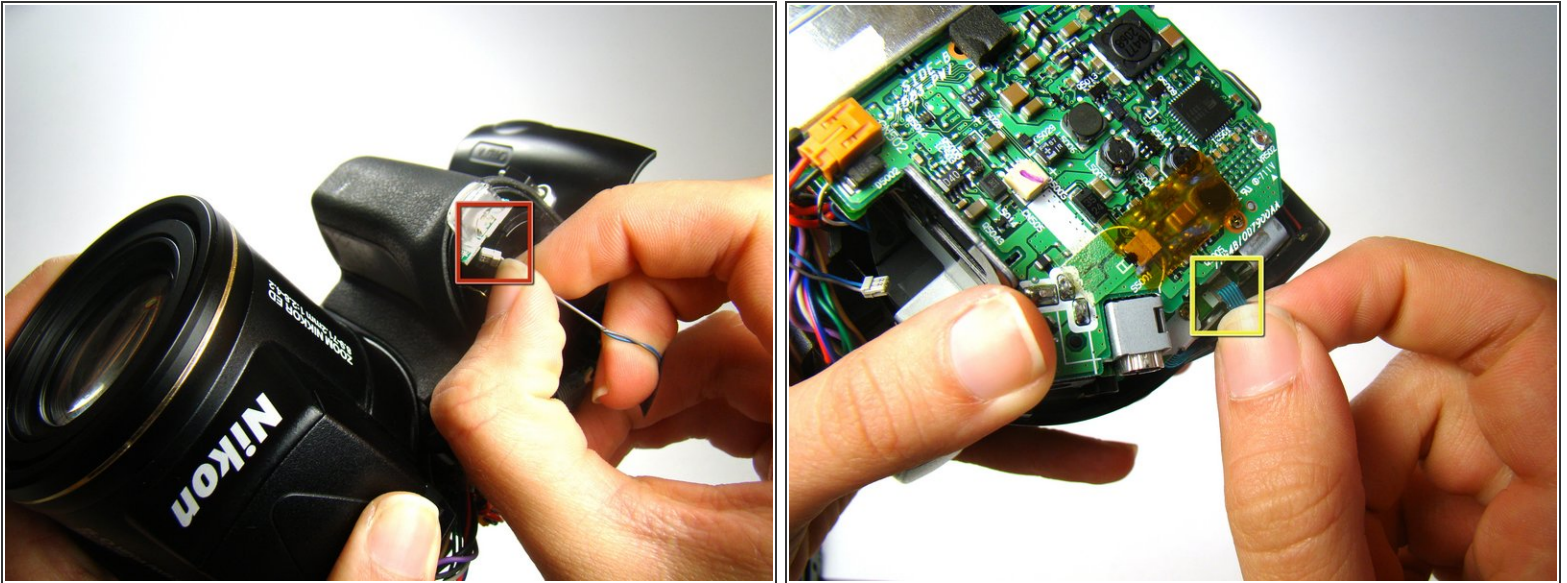

- Unplug the blue and grey set of wires near the top of the grip.
- Unplug the blue ribbon wire located at the bottom-left side of the camera.

Step 24

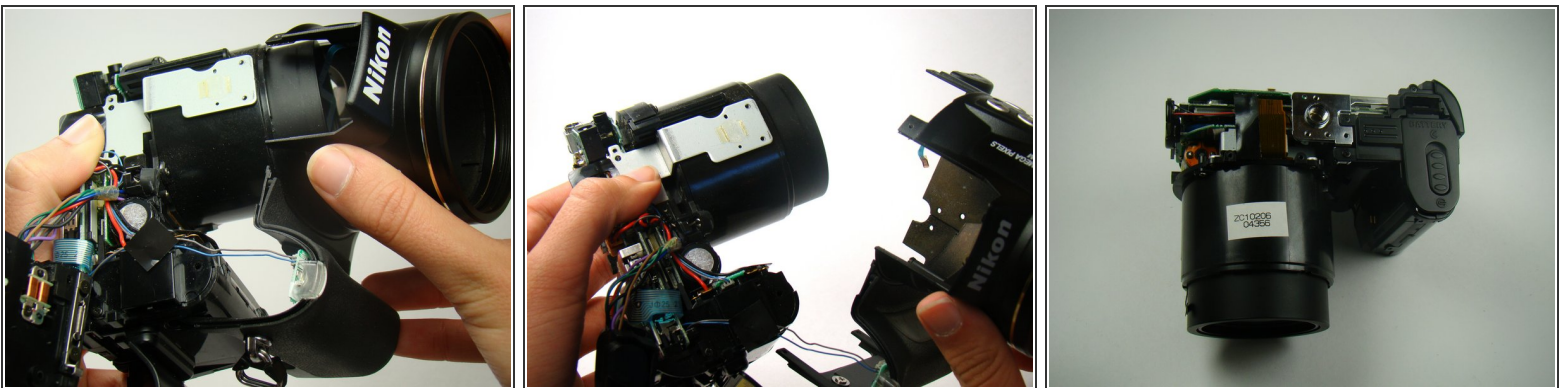

- Remove the front cover slowly.

⚠ Be sure that the front cover is not attached to anything or caught on anything when pulling it away from the rest of the camera.

Step 25 — Speaker





- Remove the two screws on the bottom of the camera near the tripod mount.

Step 26




- Remove the silver tripod mount by sliding it towards the speaker.

Step 27

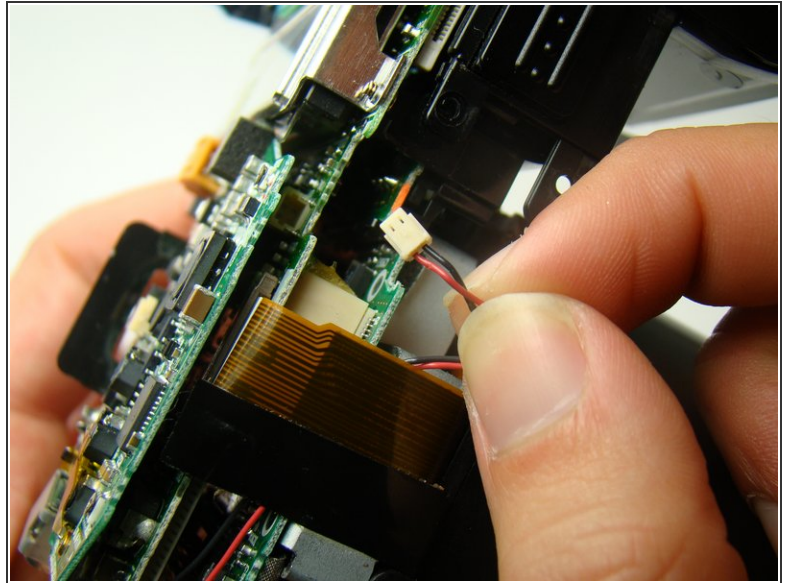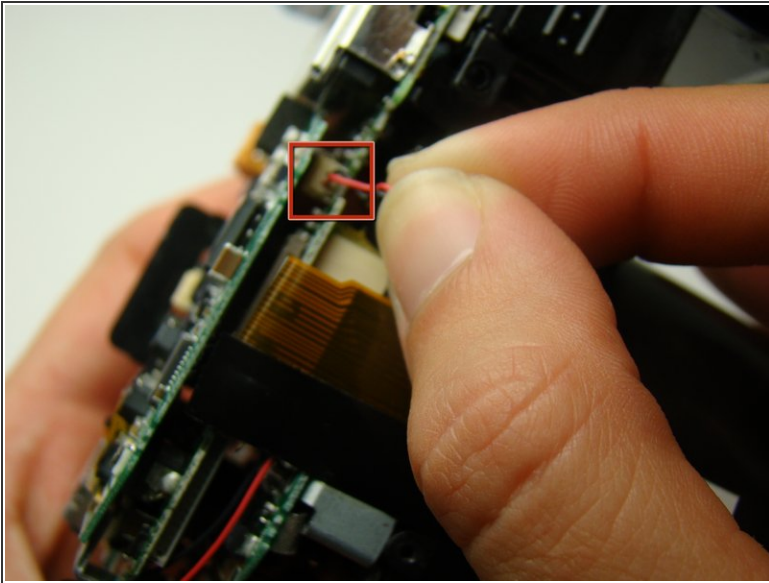


- Unplug the red and black wire couple at the bottom of the camera.

Step 28

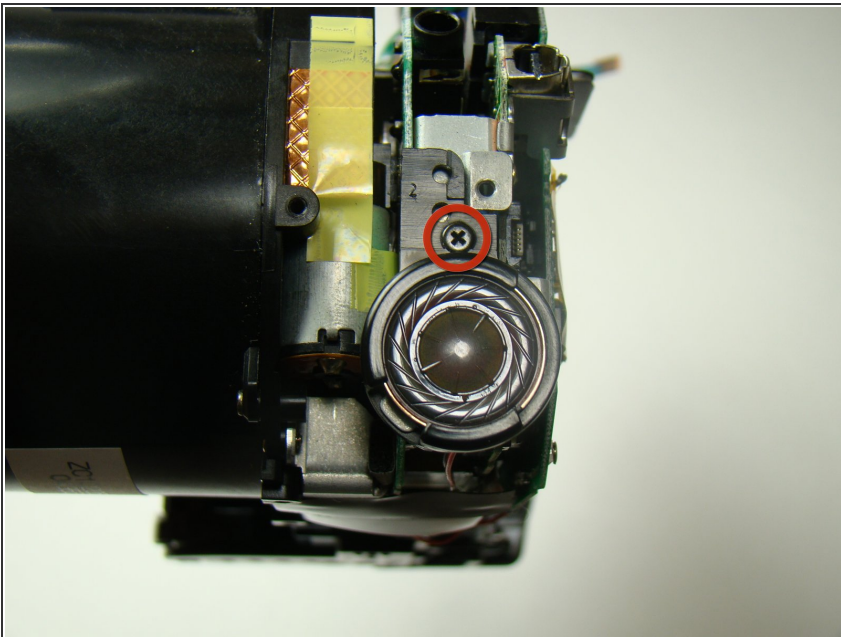

- Remove the screw above the speaker

Step 29

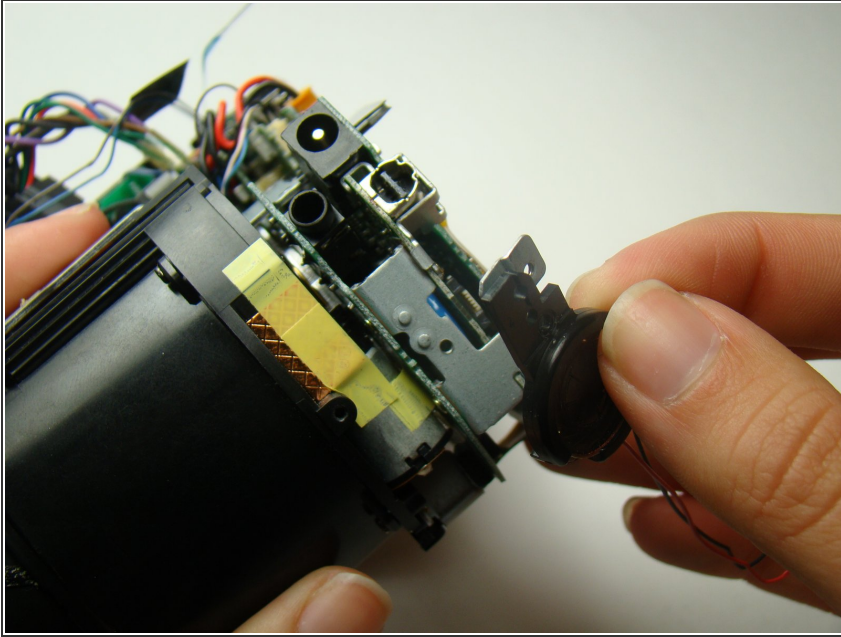

- Separate the plastic housing of the speaker and the speaker from the rest of the camera

To reassemble your device, follow these instructions in reverse order.