



# Nikon Coolpix L26 Camera Back Cover Replacement

How to take off the back cover of your Nikon Coolpix L26 camera.

Written By: Sadie



## INTRODUCTION

To repair these parts of the camera, you will need to use a screwdriver and a spudger tool. This guide is necessary if you want to repair other parts of the camera such as the LCD screen. There are many screws in this camera, so always check to make sure you found all of them as you work on it.

### TOOLS:

- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Back Cover



- Remove the batteries from the battery compartment by sliding the white battery compartment switch up and then move the panel toward the right.

## Step 2



- Using the Phillips #000 screwdriver, unscrew the two 2mm screws next to the battery compartment on the right side of the camera.

## Step 3



- Unscrew the two 2mm screws on the opposite side.

## Step 4



- Flip over the rubber AV cover at the bottom of the camera. Unscrew the last two 2mm screws on the bottom of the camera.

## Step 5



- Using your hands, open the camera slightly by using the indentation above the camera compartment.

## Step 6



- Wedge the flat end of the spudger in between the front and back cover. Carefully push the spudger downward, which will lift the back cover off the camera.

## Step 7



- Gently pull the cover off the camera.

To reassemble your device, follow these instructions in reverse order.