



Nikon Coolpix L32 Memory Card Replacement

Replacing the memory card from the Nikon Coolpix L32 to add storage.

Written By: Weston Phillips



This document was generated on 2019-10-03 02:22:47 PM (MST).

INTRODUCTION

The guide will show how to properly replace a memory card from the Nikon Coolpix L32 camera.

Step 1 — Memory Card



- Slide the lock button on the battery compartment away from you while sliding the battery compartment door to the right to open the battery compartment door.

Step 2



- Push in the memory card until you hear a "click" noise, remove the old one and install the new one
- When the new memory card is being installed make sure to hear a "click" noise once again

To reassemble your device, follow these instructions in reverse order.