



# Nikon Coolpix L330 Battery Replacement

This guide will assist you on how to remove the batteries and replace them in Nikon Coolpix L330.

Written By: Rabiaah A



## INTRODUCTION

If your camera does not power on, then most likely you would have to replace your batteries. Follow instruction on this guide to remove your old batteries and replace them.

## Step 1 — Battery



- Make sure to turn off your camera before replacing the batteries.
- Turn the camera upside down so you can see the battery chamber.

## Step 2



- Push the battery chamber lock to the right to open it.
- Slide the cover down to unhook the battery door.

**(i)** The inner battery housing has orientation stickers to show the way in which the batteries should be placed.

## Step 3



- Remove the old batteries from the battery chamber.
- Replace the batteries with new ones.

To reassemble your device, follow these instructions in reverse order.