



Nikon Coolpix L810 Flash Replacement

Replace the flash from your Nikon Coolpix L810.

Written By: Emilio Mena



INTRODUCTION

Is your flash not lighting up? This guide will show you how to replace the flash from your camera.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Flash



- Remove two 5 mm Phillips #000 screws below the flash component.

(i) In order to complete this step the flash must be open. To open the flash press the button located above the lens on the leftward side of the camera.

Step 2



- Use blue plastic opening tool to pry open the casing for the flash.

Step 3



- Remove the plastic casing surrounding the flash.

Step 4



- Pull the wires connecting the flash out of the camera.

Step 5



- Unsolder the wires that connect the flash component.

To reassemble your device, follow these instructions in reverse order.