


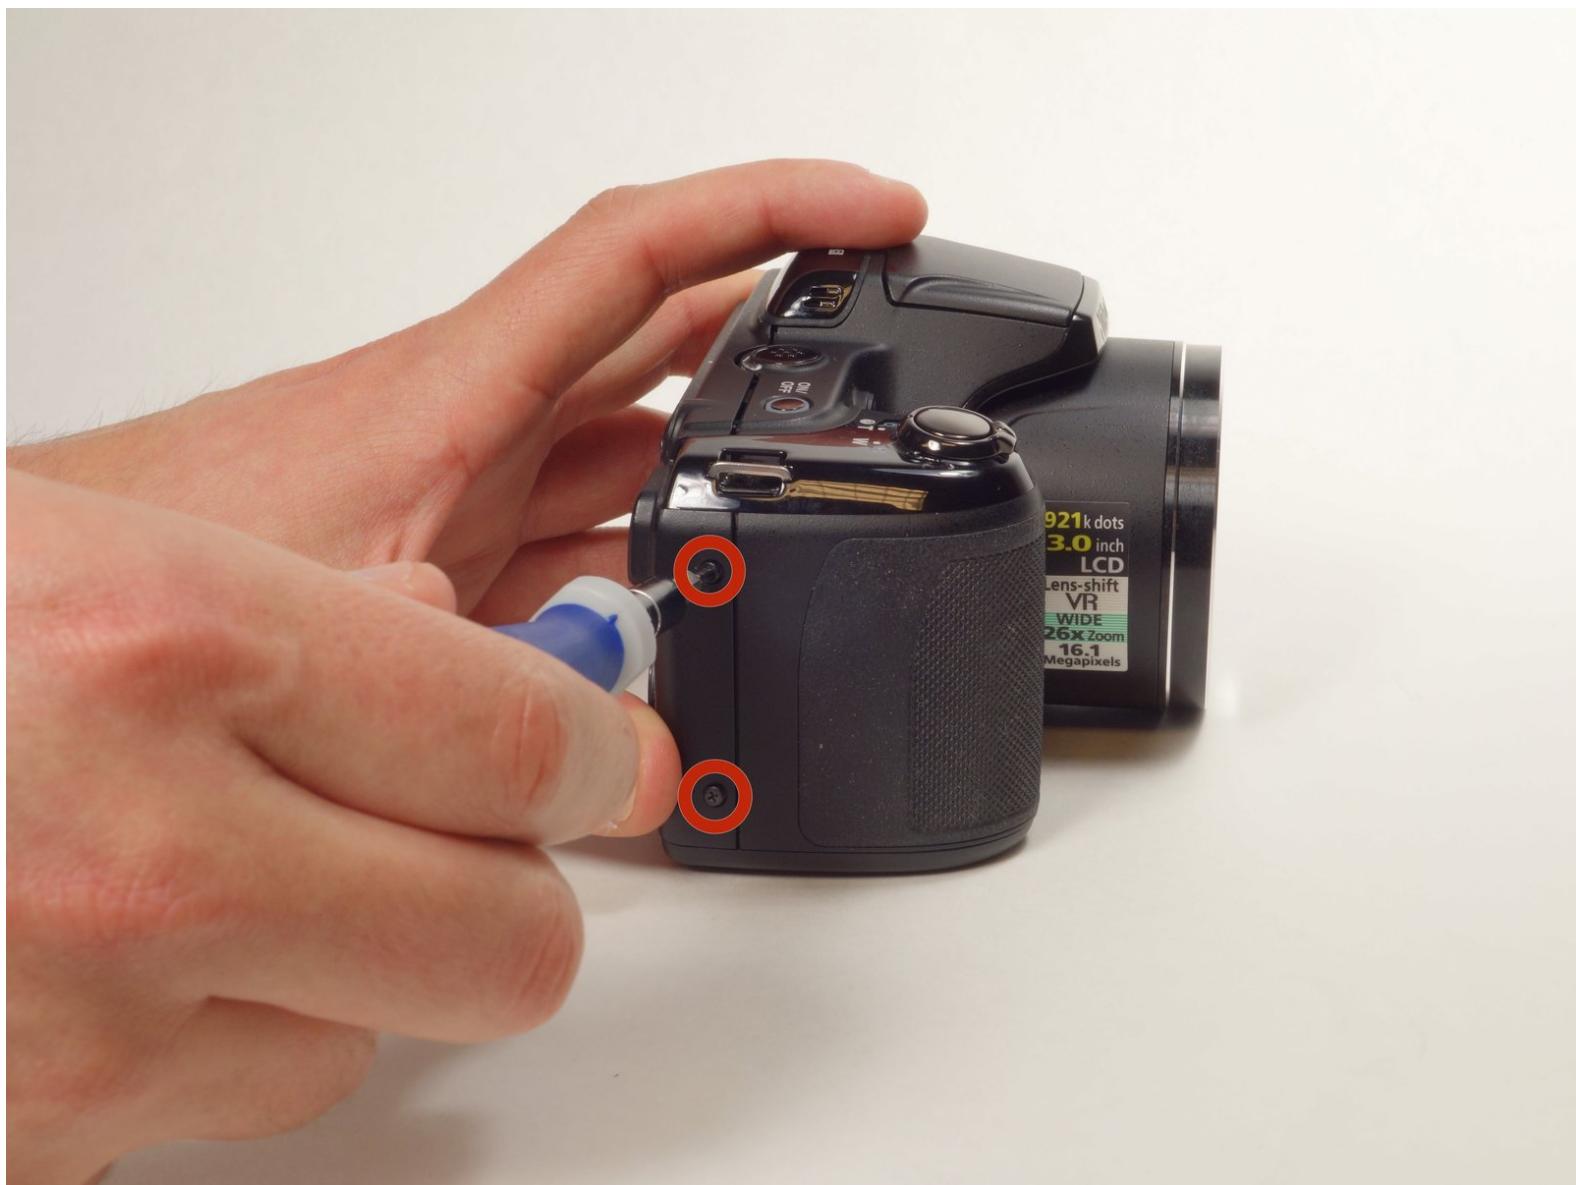

Nikon Coolpix L810 LCD Replacement

Remove the LCD screen from your Nikon Coolpix L810.

Written By: Emilio Mena




INTRODUCTION

Is your LCD screen not displaying anything or is displaying a corrupted image? Follow this guide to replace the LCD screen.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — LCD

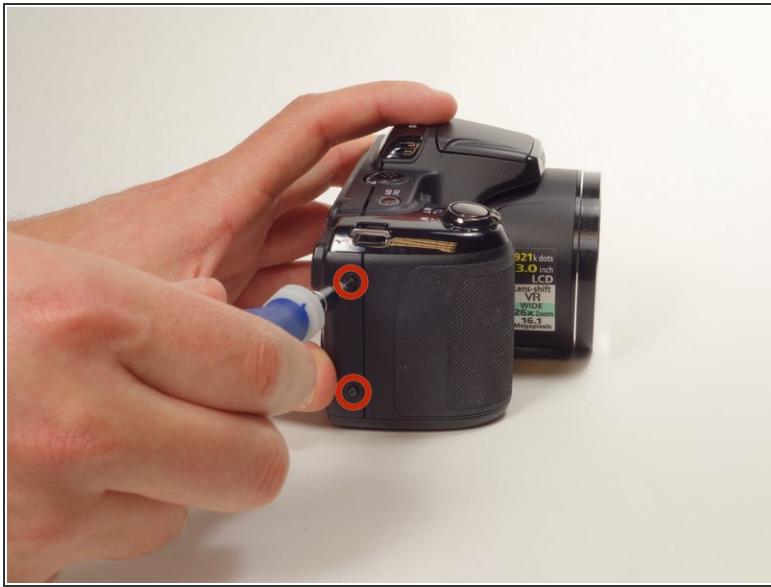

- Remove two 5 mm Phillips #000 screws on the right hand side of the camera located near the power button.
- Use of precision tweezers to help remove loosened screws is suggested.

Step 2



- Remove two 5 mm Phillips #000 screws near the audio/video inputs on the opposite side near the flash component.

This document was generated on 2019-09-18 10:29:26 AM (MST).

Step 3




- Remove three 5 mm Phillips #000 screws on the bottom end of the camera.

Step 4




- Carefully detach the back side of the camera by lifting both ends, with moderate force wobble until loosened enough to remove.

Step 5

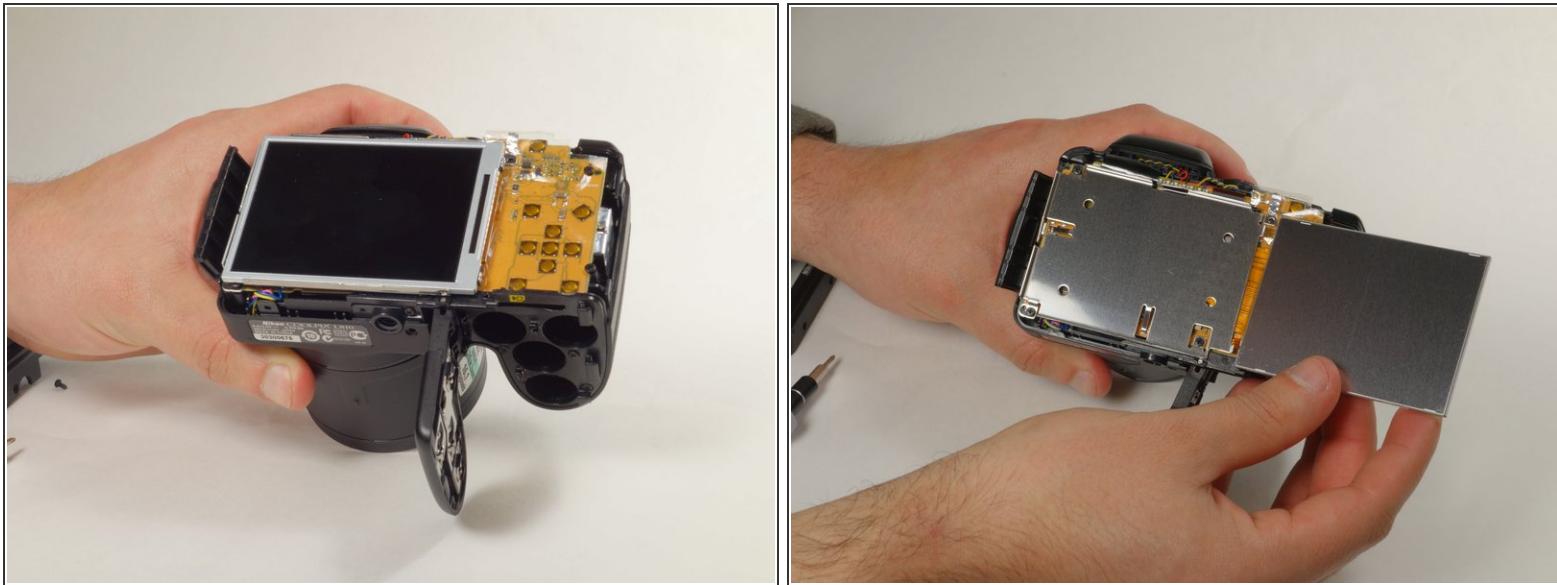

- With the LCD screen facing towards you, flip the screen to the right.



Step 6

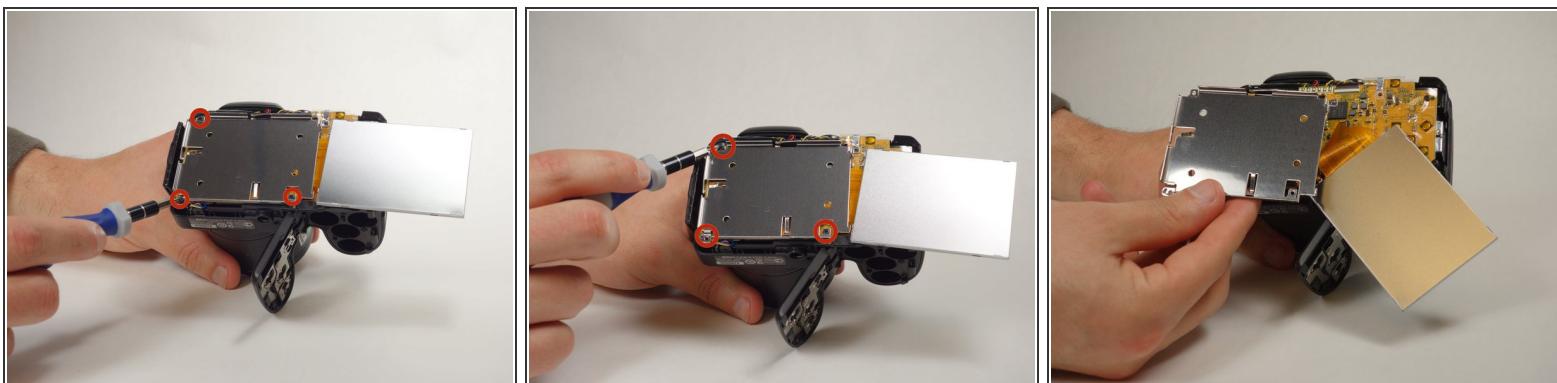

- Remove three 5 mm Phillips #000 screws located on the bracket.

⚠ Hold the camera with the lens facing downward to prevent the bracket from falling off once all screws are removed.

Step 7

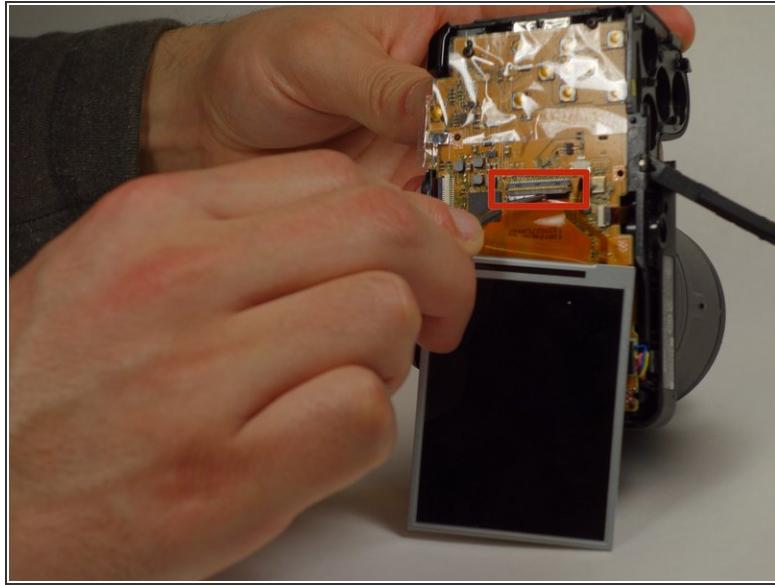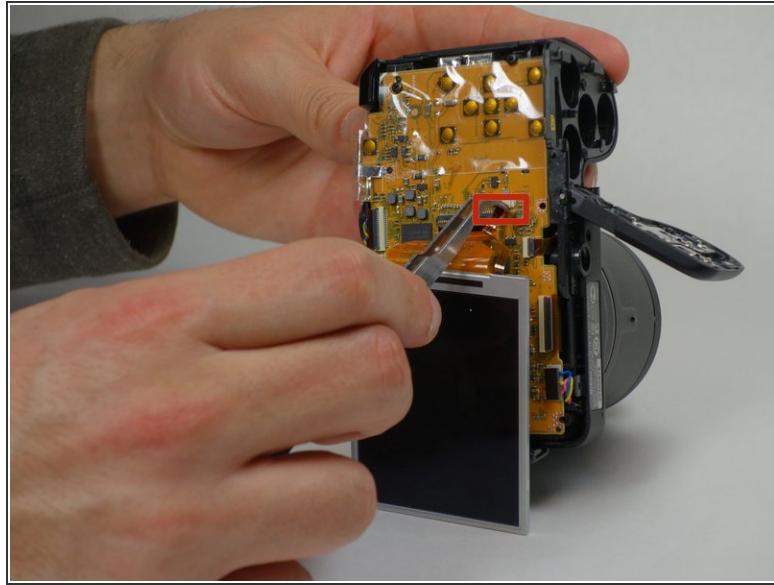

- Disconnect the ribbons that connect the LCD screen to the camera gently using precision tweezers or fingers.

To reassemble your device, follow these instructions in reverse order.