




Nikon Coolpix L840 Buttons Replacement

This guide will show you how to replace the buttons next to the LCD screen

Written By: Abraham Lozano

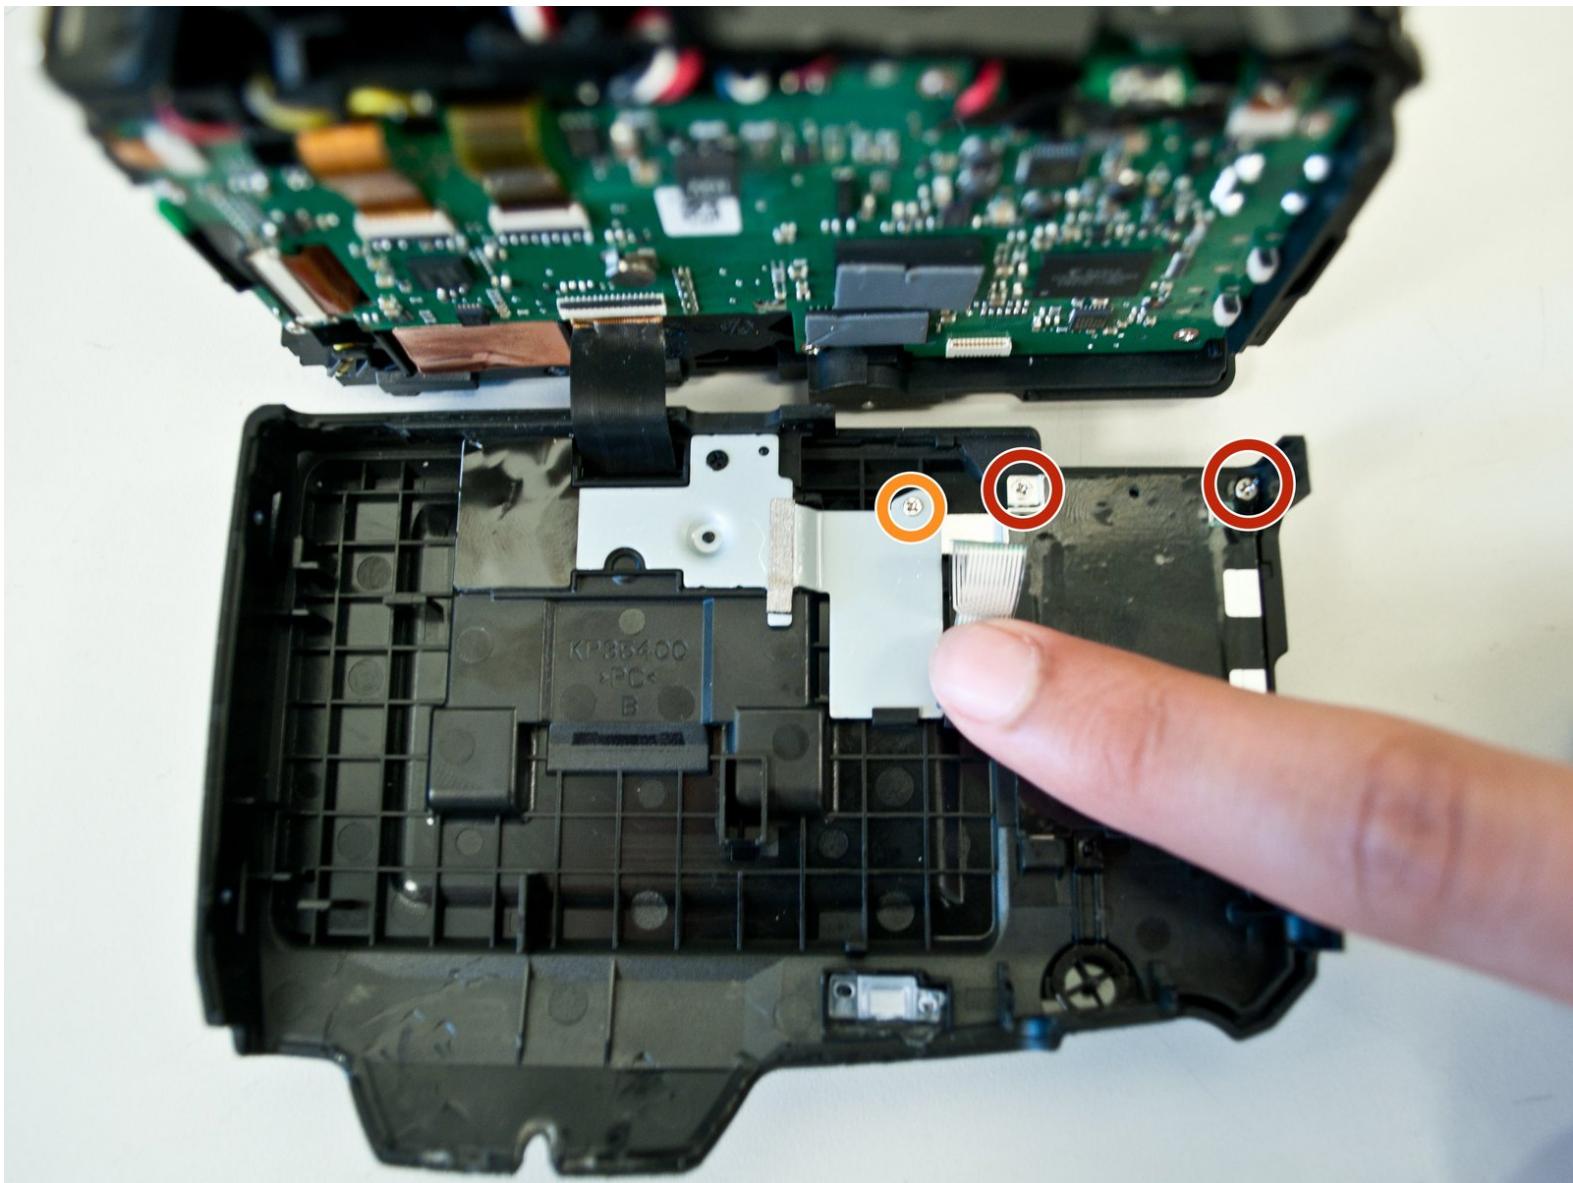

INTRODUCTION

This guide details the steps required to replace buttons on the back face of the camera. Please use this guide only when a specific button is not working. When the problem involves other parts of the camera or all of the buttons, you may need to [replace a component of the circuit board](#).

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Motherboard



- Unscrew all eight black, 4mm screws with a Philips 000. (The top-most screw shown in the third image can be accessed by lifting the cover flap off.)



Step 2



- Pry case open with a metal spludger by slipping the spludger between the back and front case of the camera and wiggling the spludger forwards and backwards.


 Be careful not to damage the inner components of the camera when slipping the spludger into the camera.

Step 3

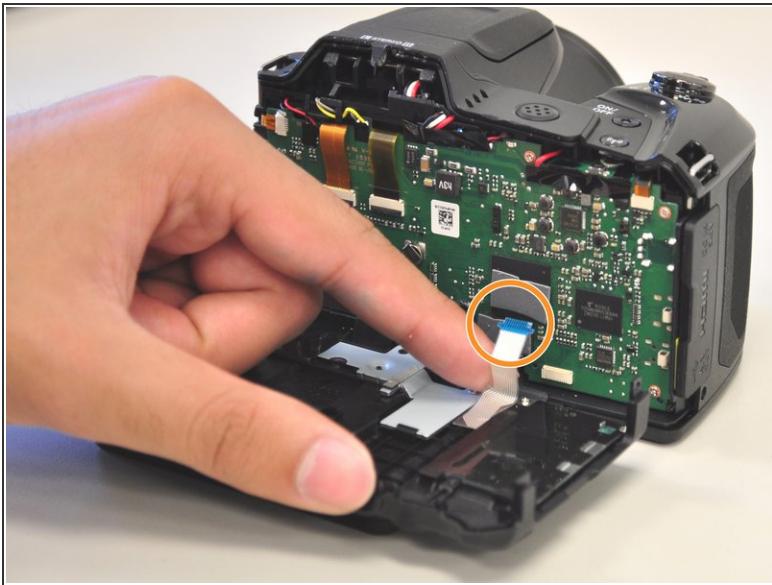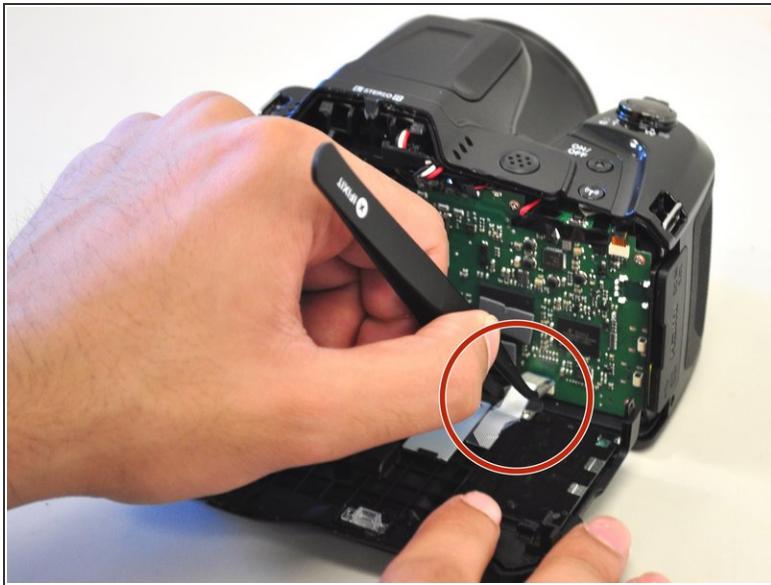


- Carefully unhook the silver strip with tweezers. Get a grasp of the sides of the silver strip with the tweezers, and pull upwards and out.
- The strip may also be identified by its blue tip, which becomes more visible once pulled out.

Step 4 — Buttons

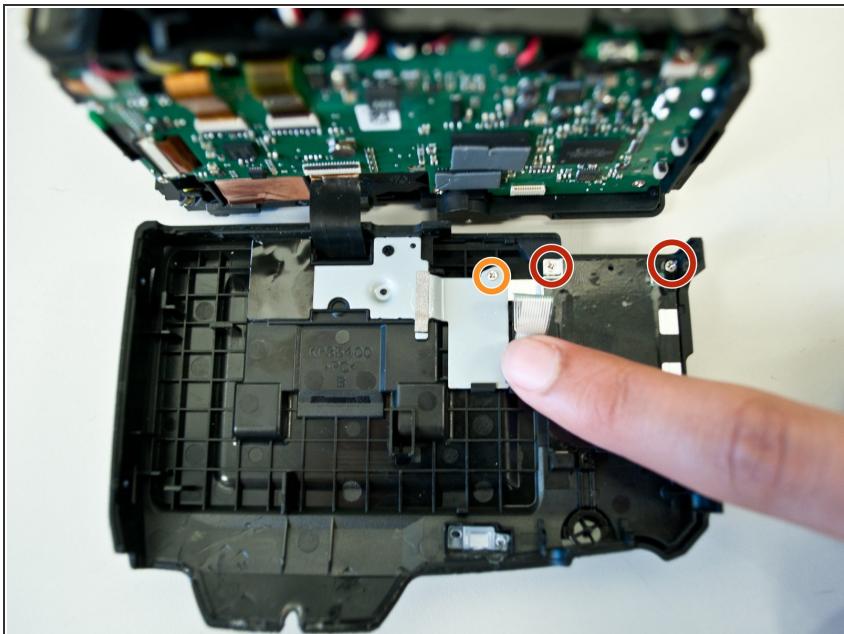


- Unscrew the two, right-most, 2 mm screws with a Philips 000.
- Unscrew the left-most, 4 mm screw with a Philips 000.

Step 5

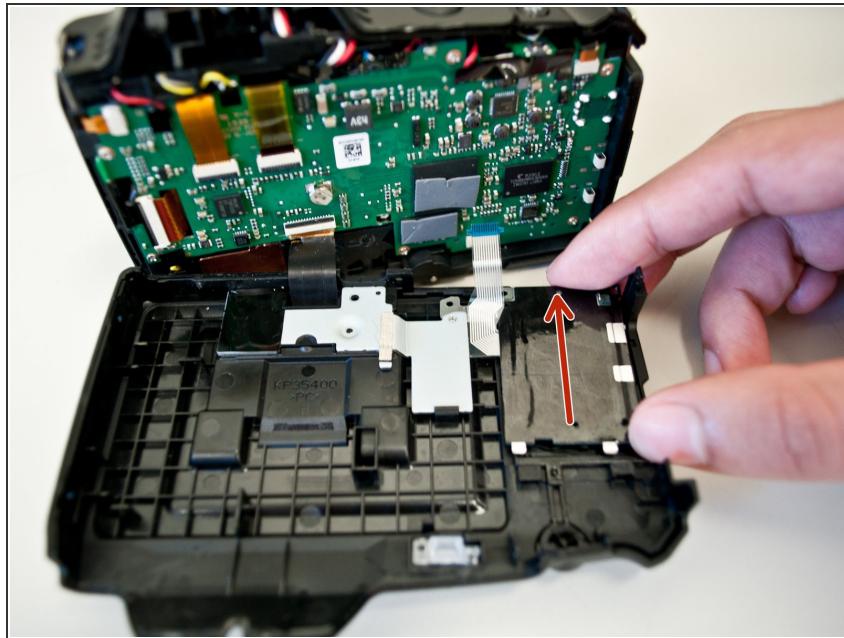

- Slide off the button panel in the marked direction.

Step 6

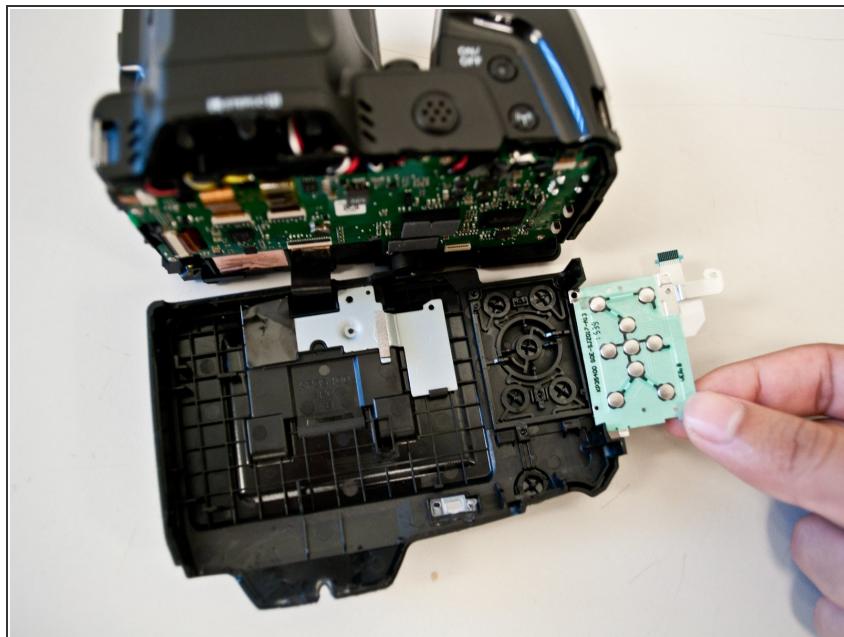

- Flip to the front side of the button panel to access the button sensors.

To reassemble your device, follow these instructions in reverse order.