




# Nikon Coolpix L840 Lanyard Ring Replacement

Is your camera's lanyard ring broken? Here's a replacement guide.

Written By: Abraham Lozano

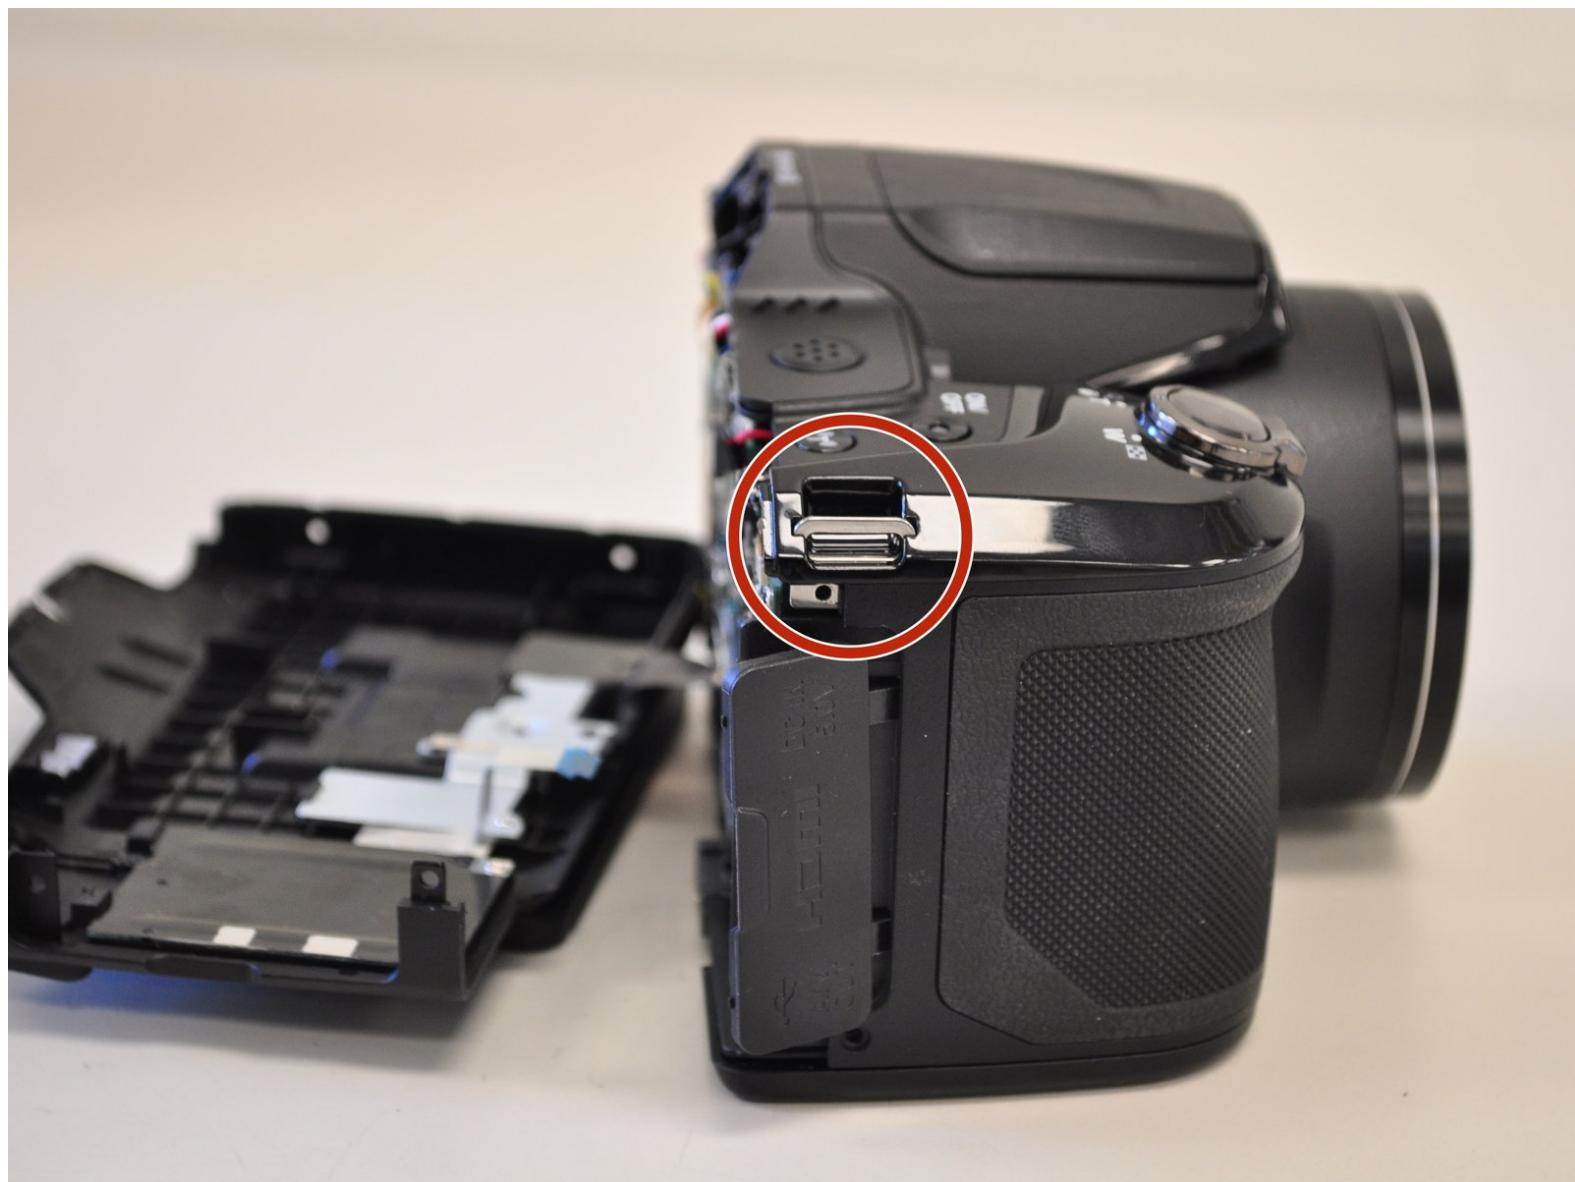

## INTRODUCTION

This guide details the steps required to replace the lanyard ring.

### TOOLS:

- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Metal Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Motherboard



- Unscrew all eight black, 4mm screws with a Philips 000. (The top-most screw shown in the third image can be accessed by lifting the cover flap off.)



## Step 2



- Pry case open with a metal spludger by slipping the spludger between the back and front case of the camera and wiggling the spludger forwards and backwards.


 Be careful not to damage the inner components of the camera when slipping the spludger into the camera.

## Step 3

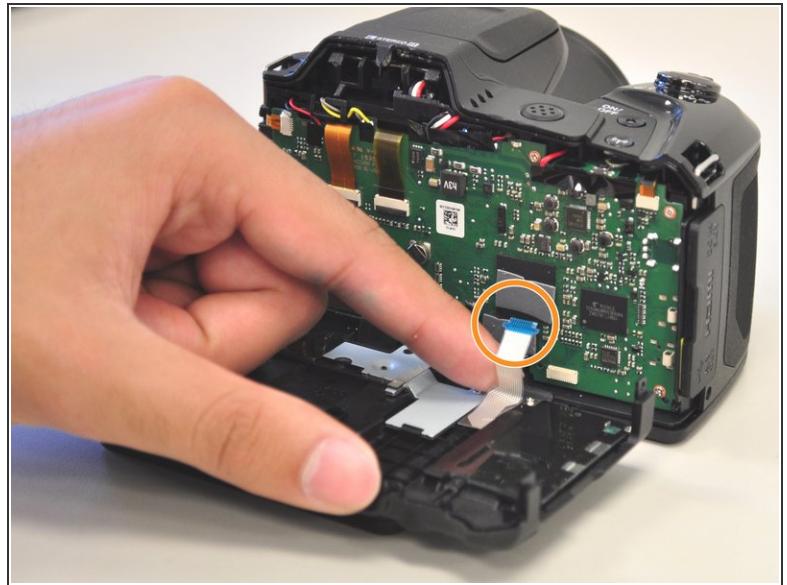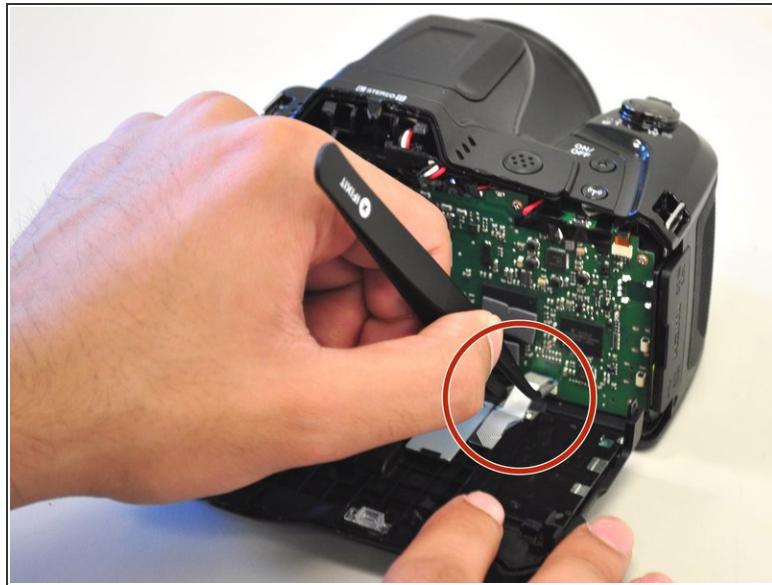

- Carefully unhook the silver strip with tweezers. Get a grasp of the sides of the silver strip with the tweezers, and pull upwards and out.
- The strip may also be identified by its blue tip, which becomes more visible once pulled out.

## Step 4 — Lanyard Ring

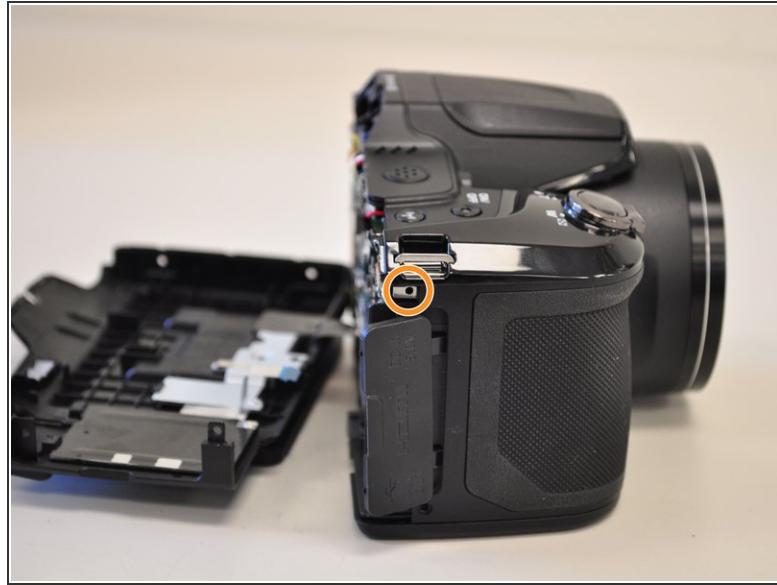

- Identify lanyard ring.
- Unscrew the 4 mm black screw with a Philips 000.

## Step 5



- Insert a metal spludger (or another sturdy tool with a thin tip) into the hole of the lanyard ring and lift the ring upwards and out of the camera.

To reassemble your device, follow these instructions in reverse order.