



Nikon Coolpix P100 Back Buttons Replacement

This guide will show you how to partially replace the back button of the Nikon Coolpix P100.

Written By: Nghiem Ngo



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Buttons



- Turn the front of the camera toward you.

Step 2



- On the left side of the camera, using a Phillips #00 Precision Screwdriver, remove the two screws.

Step 3



- On the right side of the camera, remove the first visible screw.

Step 4



- Lift the HDMI and A/V OUT cover to access the hidden screw.

Step 5



- Flipping the camera upside down, remove the seven marked screws.

Step 6




- Remove the two screws hidden underneath the display panel.

Step 7



- Using a plastic opening tool, gently loosen up the sides of the camera.


Step 8

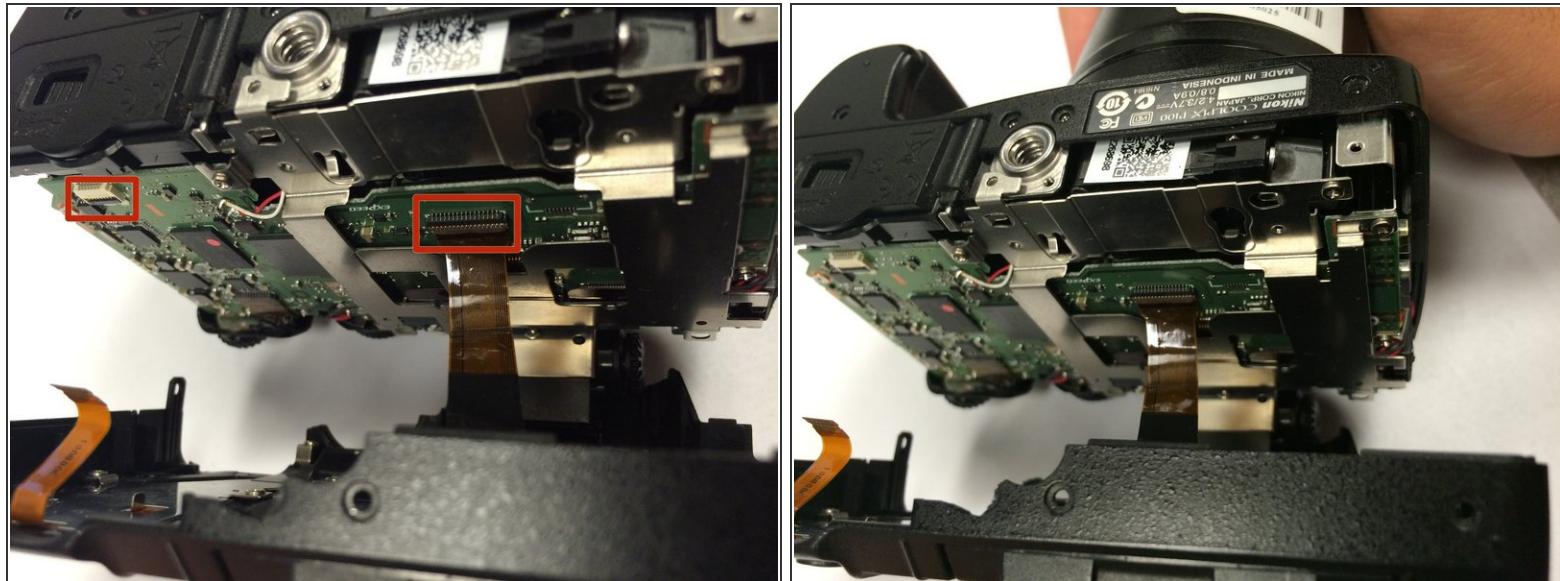

- Carefully open the camera.


⚠ There are two ribbon cables when opening the camera. Make sure to properly detach them before proceeding.

Step 9

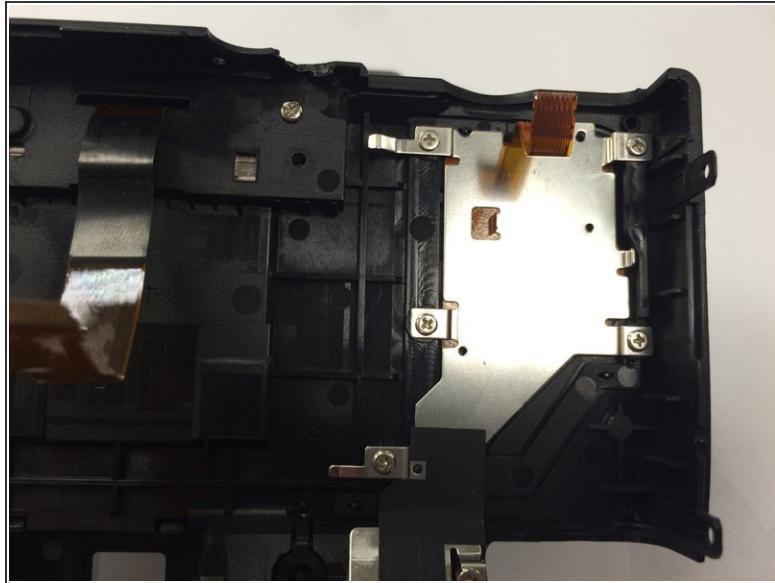


- This is the cover that houses the back buttons of the camera. Turn it around.

Step 10

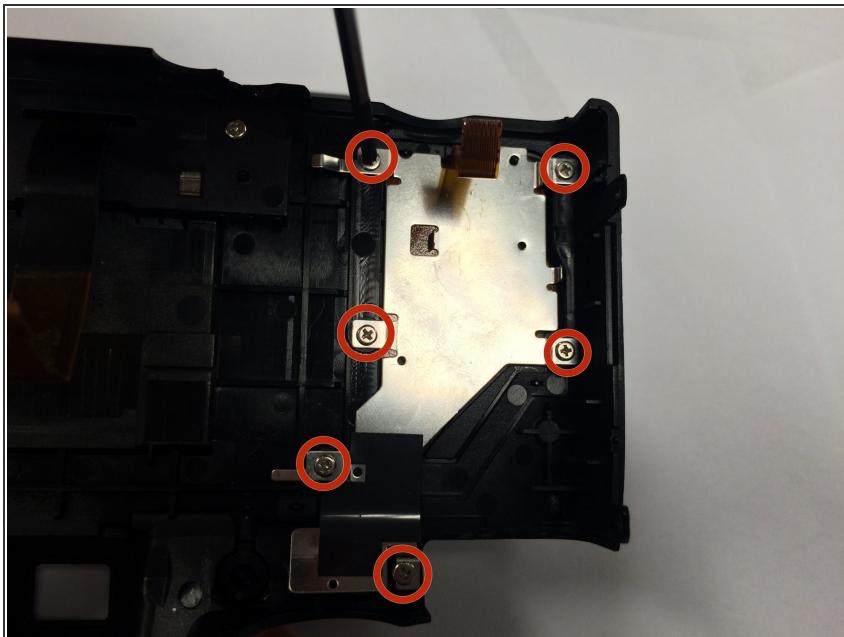

- Remove the six indicated screws.

Step 11

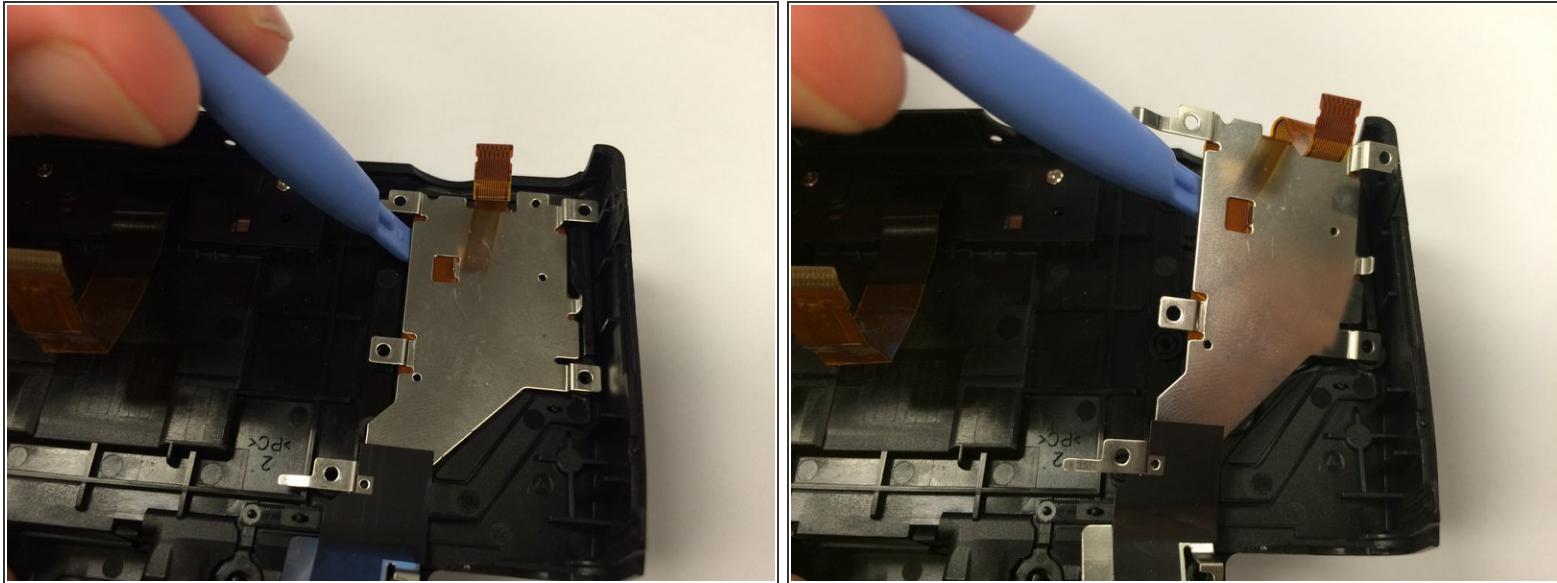

- Using a plastic opening tool, lift the metal plate and set aside.

Step 12



- Turn the cover around and push against the buttons.

Step 13




- Now you have partial access to one set of the buttons.

Step 14




- On the bottom left, there are the last set of removal buttons.

Step 15

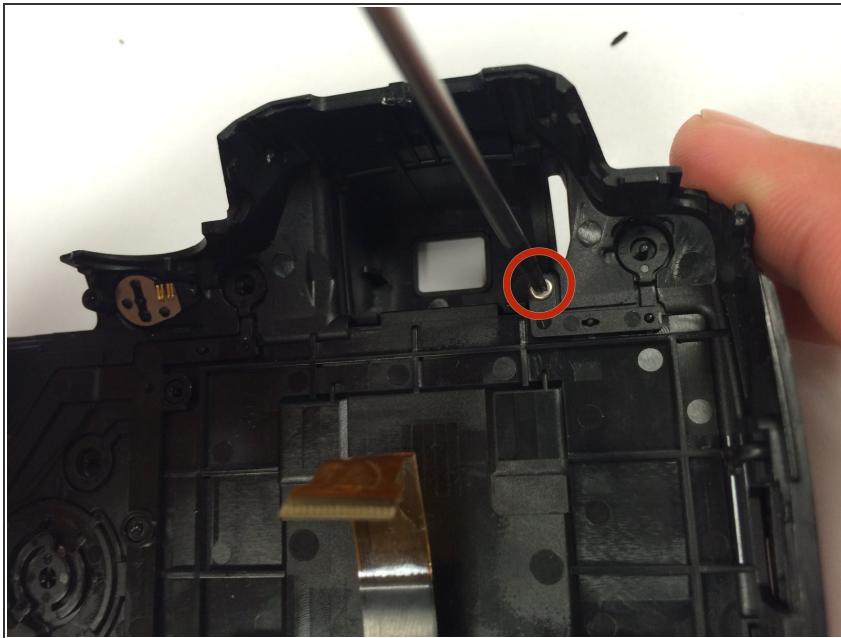

- Remove the screw.

Step 16

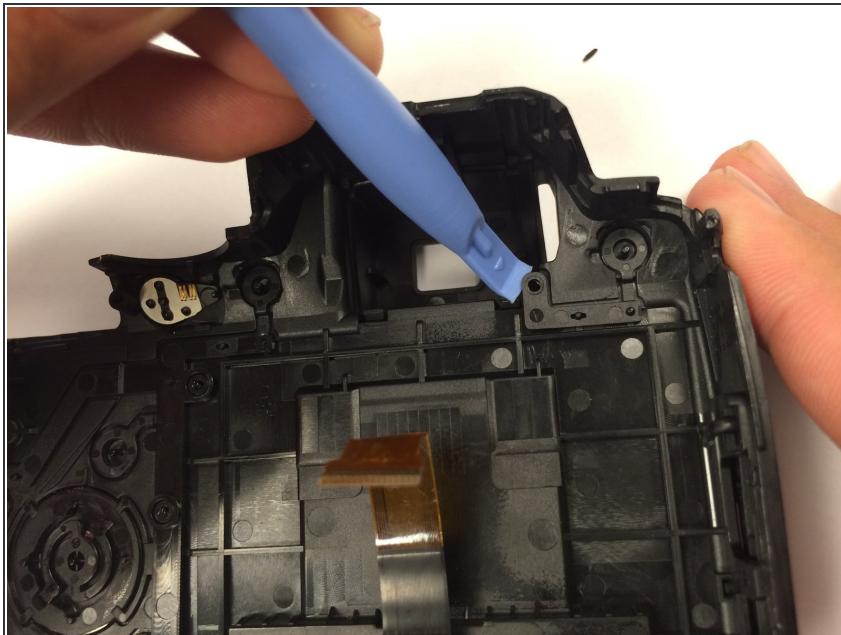

- Use a plastic opening tool to remove the button.

Step 17



- Now you have removed the back button of the camera.

To reassemble your device, follow these instructions in reverse order.