



Nikon Coolpix P510 LCD Screen Window Replacement

This guide helps the reader successfully take off the LCD screen window and replace the broken scratched up window.

Written By: Brian Hulsey



This document was generated on 2019-09-16 01:44:13 PM (MST).

INTRODUCTION

This guide will take you very little time to accomplish. The part is easy to get off and you will need very little tools to do so.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery Removal



- Flip the camera over and push the tab on the battery cover to open the battery compartment.

Step 2



- Push the little yellow tab to allow the battery to slide out.
- With the tab pushed out, pull the battery out.

Step 3 — LCD Screen Window




- Extend the LCD screen out and turn the camera upside down to get access to the screws on the bottom.

Step 4



- Take the four 4mm PH00 Phillips screws out.

Step 5

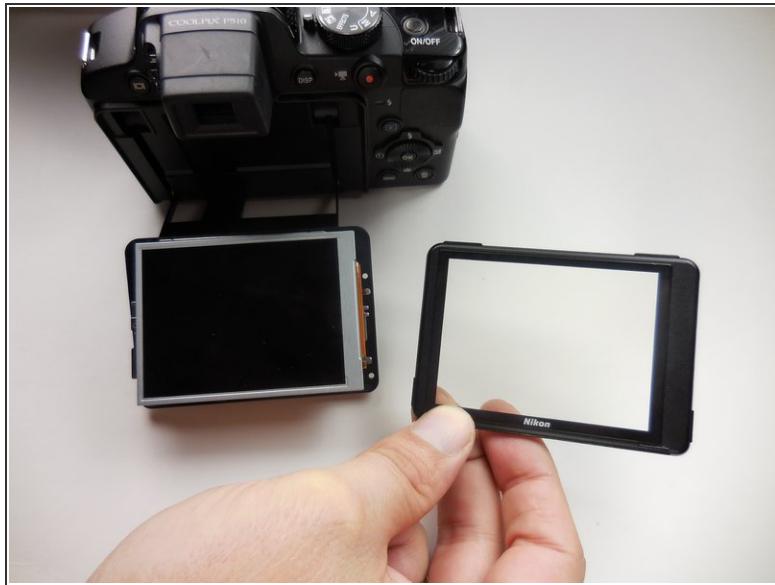

- Use a plastic opening tool to trace around the screen to pop the front and back section apart.

To reassemble your device, follow these instructions in reverse order.