



Nikon Coolpix P530 Battery Replacement

This is a step by step guide for replacing the EN-EL5 battery in a Nikon Coolpix P530.

Written By: Alan Weihe



INTRODUCTION

Continual usage can drain the Nikon Coolpix P530's battery shortening its lifespan. This guide utilizes a step by step approach on changing the battery in your device. Before following this guide, ensure that the Nikon EN-EL5 rechargeable lithium-ion battery or suitable equivalent is being used during the replacement.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

PARTS:

- [EN-EL5 \(1\)](#)

Step 1 — Battery



- Identify the battery chamber found at the bottom of the device.
-  Ensure the camera is turned off before conducting any maintenance on the device.

Step 2



- Slide the switch to the left to open the battery chamber using your fingertip or plastic opening tools.
- The spring loaded battery chamber door will swing open after the switch is moved.

Step 3



- Depress the yellow spring loaded tab holding the battery in place using your fingertip or plastic opening tools.
- After the yellow tab is depressed, the battery should partially eject from the camera.

Step 4



- Gently remove the battery from the chamber.

To reassemble your device, follow these instructions in reverse order.