



Nikon Coolpix S210 Battery Replacement

Remove the camera's battery.

Written By: Paul Doyle



This document was generated on 2019-09-25 10:51:31 AM (MST)

INTRODUCTION

In order to charge the battery or begin taking apart the camera, you'll need to first remove the battery.

Step 1 — Battery



- Place thumb on the battery cover panel on the bottom of the device.
- Slide the panel to the right away from the camera.

Step 2



- Slide the orange latch outward towards the corner of the camera.
- The battery should pop out.
- Remove the battery and reattach the cover.

To replace the battery: reinsert it in the proper orientation, fold the latch back over, and slide it towards the camera to lock it back in place.