


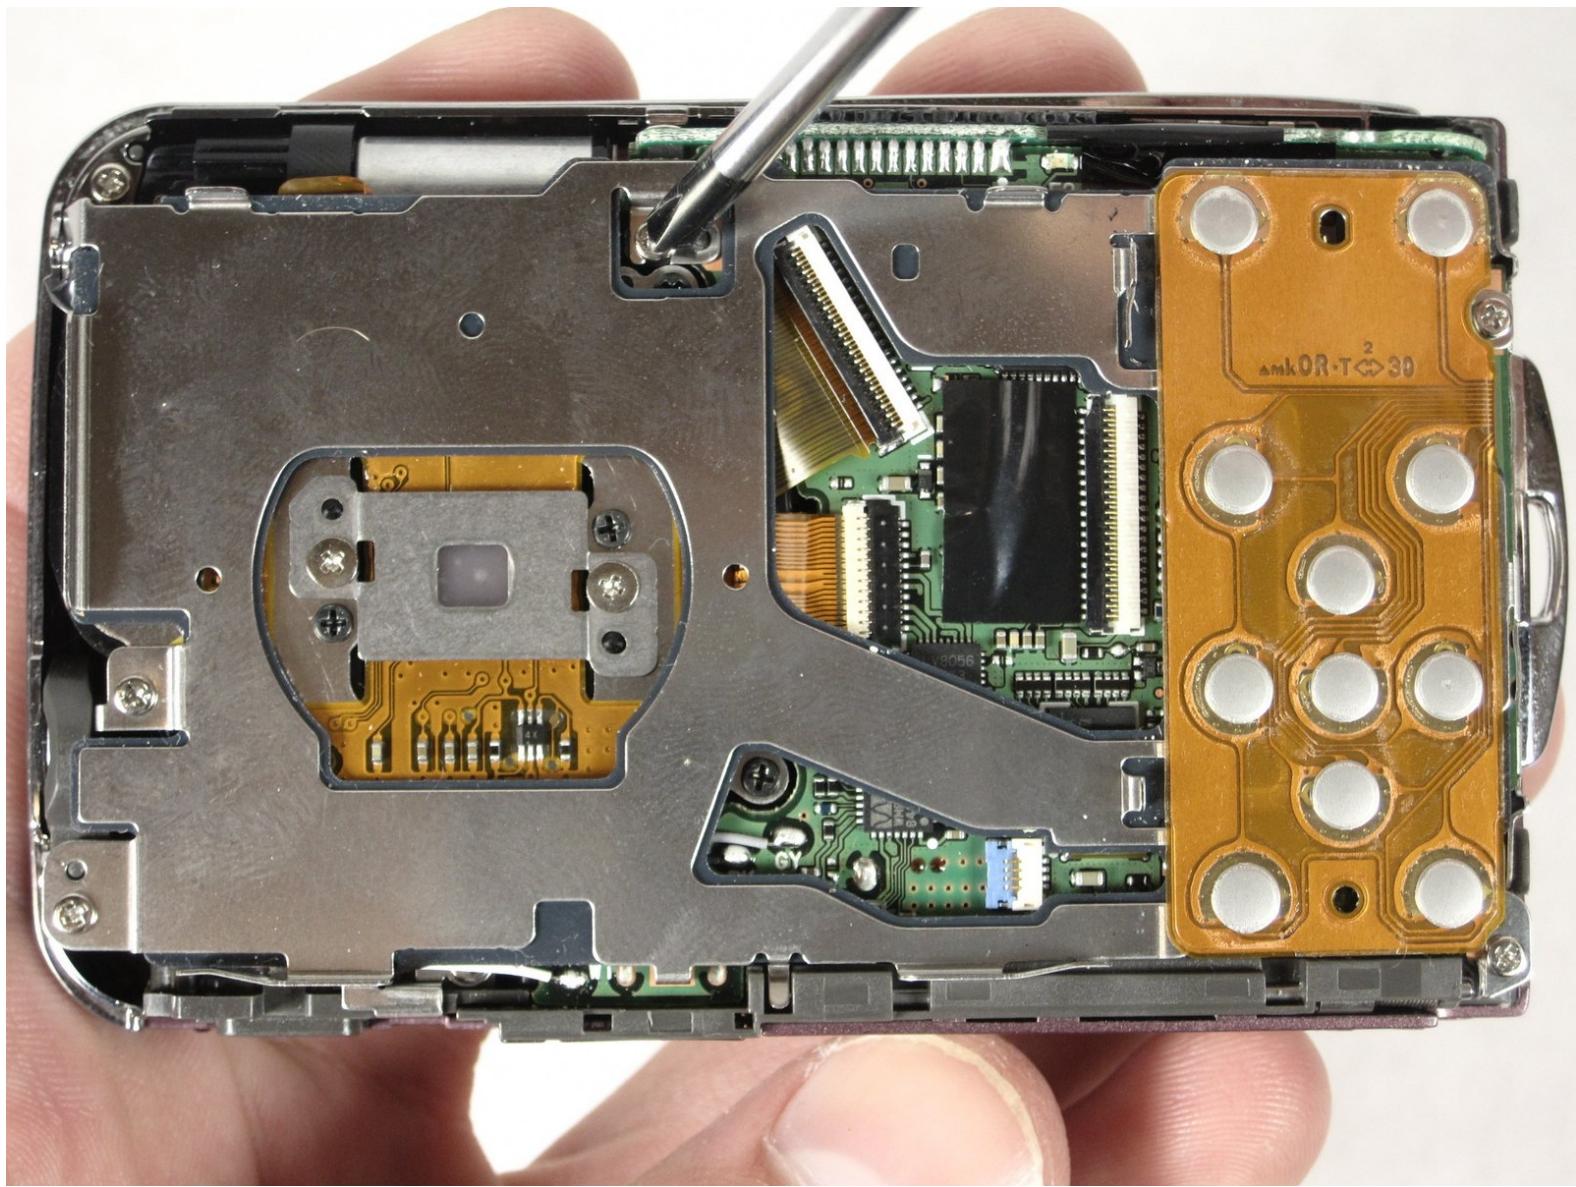

# Nikon Coolpix S210 Circuit Board Cover Replacement

This guide helps users remove the metal panel covering the circuit board.

Written By: Paul Doyle



## INTRODUCTION

Remove the circuit board cover so they can proceed to remove the circuit board or fix the lens.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



- Place thumb on the battery cover panel on the bottom of the device.
- Slide the panel to the right away from the camera.

## Step 2



- Slide the orange latch outward towards the corner of the camera.
- The battery should pop out.
- Remove the battery and reattach the cover.

## Step 3 — Back Case



- After removing the battery, unscrew the four 3.10mm screws on the side opposite the buttons.

## Step 4




- Unscrew the three 4.05mm screws on the bottom of the camera below the lens.

## Step 5



- Unscrew the two 4.05mm screws on the side next to the buttons.

## Step 6

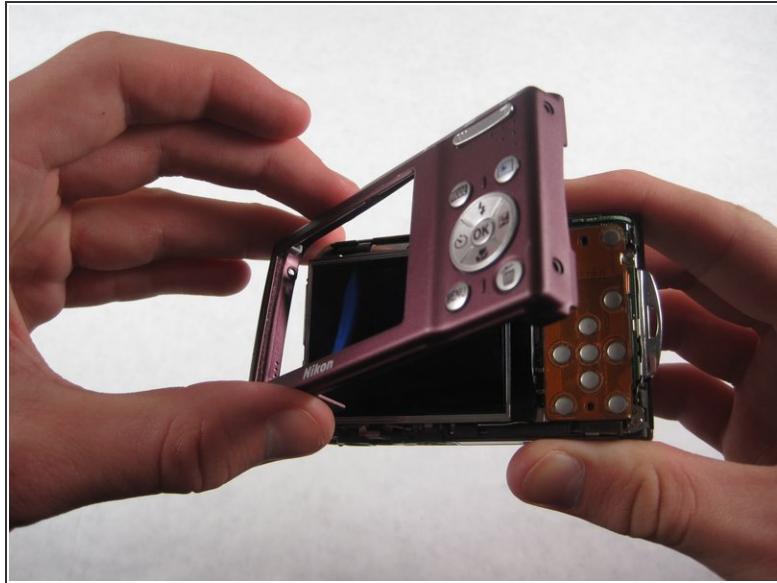


- Gently wedge the flat end of the spudger between the back case and the wrist-strap mount.

*(i)* The wrist-strap mount is the thin metal piece on the side of the camera. Your camera may have the wrist-strap attached, but you will not need to remove it to continue.

- Carefully pry the back case away from the camera and then gently lift it off.


This document was generated on 2019-09-18 02:35:45 AM (MST).

## Step 7 — LCD screen

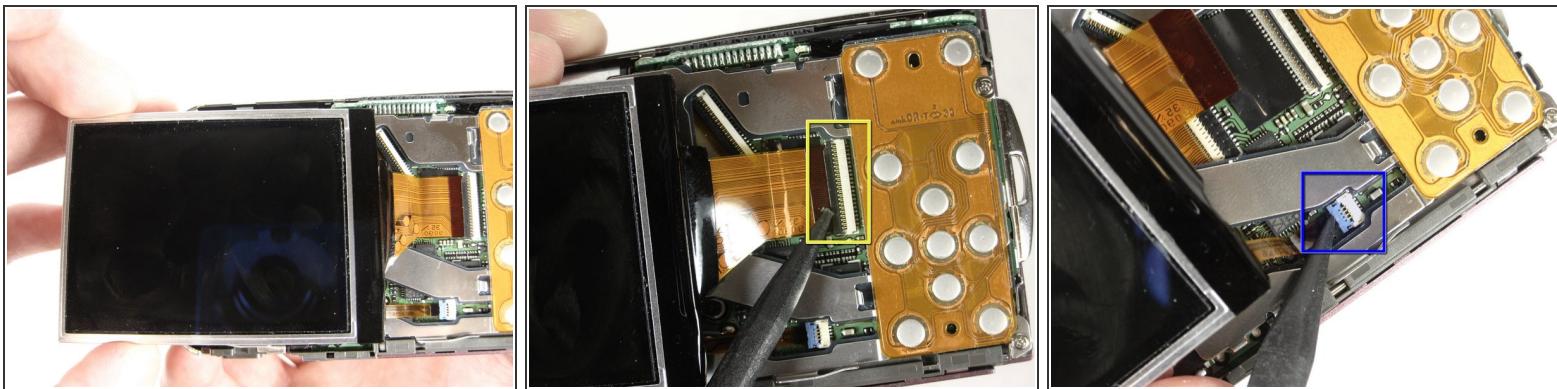


- Having removed the back case, the LCD screen should be sitting loosely on the camera, attached only by a wide ribbon and a narrow ribbon.
- i* The ribbons are connected to and held in place by small plastic latches.
  - To remove the wide ribbon, gently pry the spudger underneath the black plastic latch where the ribbon connects and lift up. The ribbon should slide out easily.
  - Repeat the same process with the smaller ribbon, this time looking for a light blue latch.

## Step 8

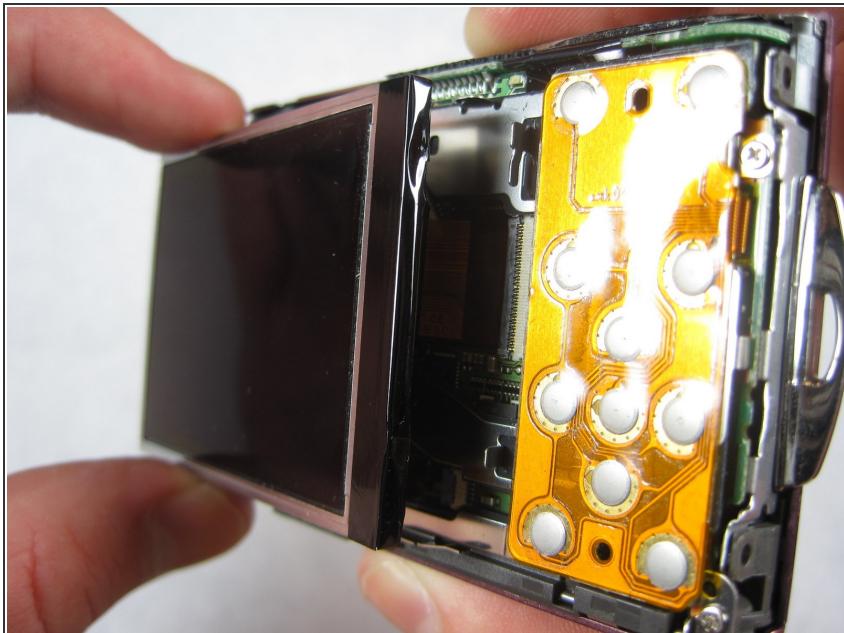


- Gently remove the LCD screen.

## Step 9 — Circuit Board Cover

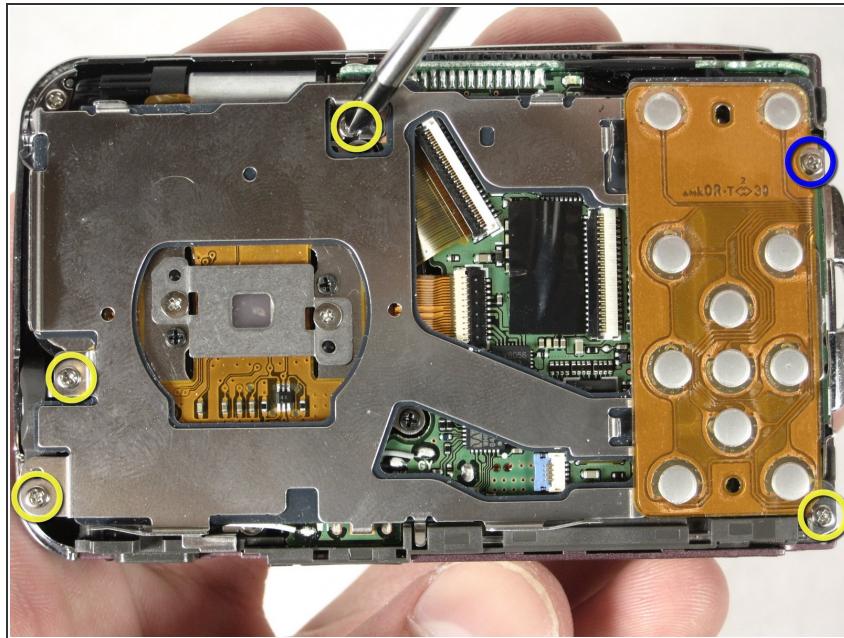

- After removing the LCD screen, unscrew the four 3.8mm screws that hold down the metal plate
- Unscrew the 2.5mm screw next to the wrist-strap mount.

## Step 10

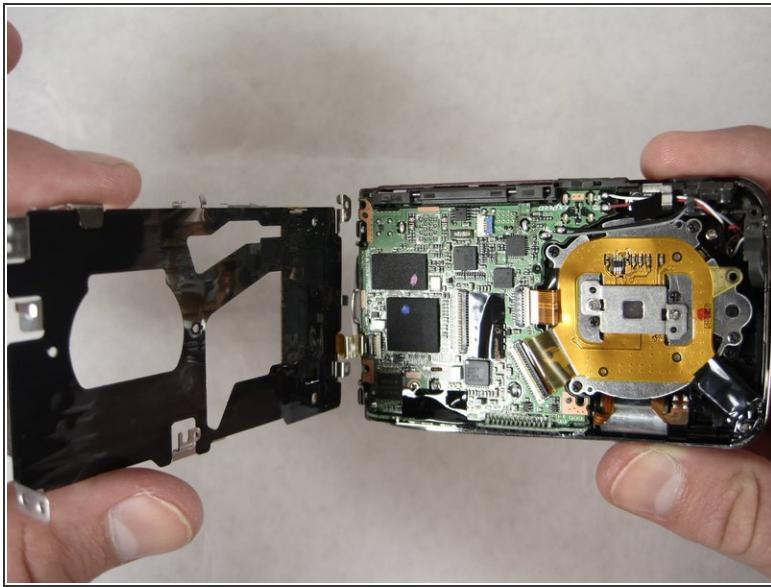

- Position the camera with the lens facing down and the shutter button facing you.
- Lift the metal plate away from the camera without removing it fully. There is a ribbon attaching the edge of the plate to the camera.

**i** The ribbon is being held in place by a black latch.

- Carefully pry the spudger under the black latch and lift gently upward. The ribbon will slide out easily.
- With the ribbon unlatched, the entire metal plate should now be detached.

To reassemble your device, follow these instructions in reverse order.