



Nikon Coolpix S30 LCD Screen Replacement

If your camera has a cracked screen, megapixels are dead, or your screen won't turn on then changing the LCD screen may help.

Written By: Cassie Hamm




INTRODUCTION

For this guide you will need a new LCD screen. If you are using iFixit tools, you will need a PH000 head and a T5 star head.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Batteries

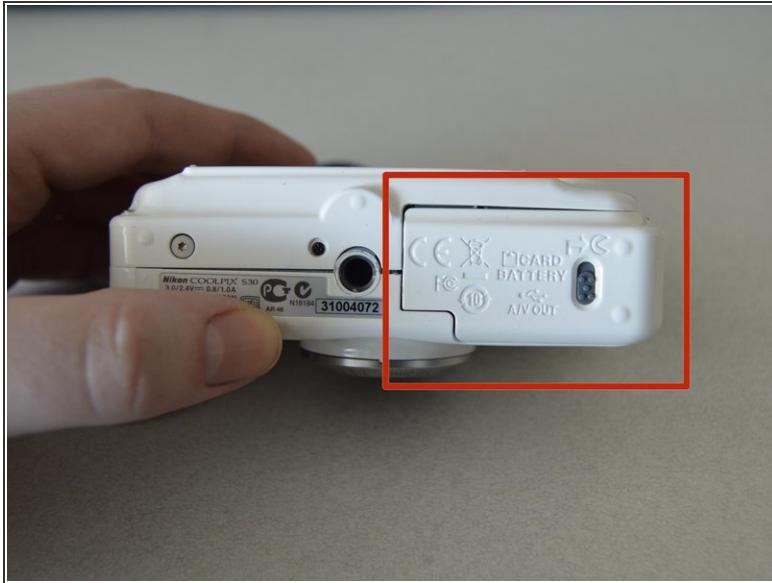

- Slide the battery cover to the right.
- The hinge is on the left side of the cover which will allow the cover to stay attached.

Step 2



- Slide the second cover (yellow) to the right (similar to the outer cover). This will allow the batteries to be exposed.

Step 3



- Remove the batteries by gently tipping the camera.

Step 4 — LCD Screen



- FIRST: remove the batteries.
- Unscrew the four screws around the corners of the camera. This can be done using the iFixit kit's T5 (star tip screwdriver)

Step 5



- Unscrew the screw on the left (silver) first. It can be removed with the same tip (T5)
- Change screwdriver tip to iFixit kit's PH000. This removes the screw on the right (black). It is a small Phillips head.

Step 6



- Gently separate the back panel from the rest of the camera.

Step 7




- Remove screw connecting the top right of the screen to the mother board.

Step 8



- Spin the camera around and gently pull the screen towards you. This will allow easy access to components on the motherboard.

Step 9

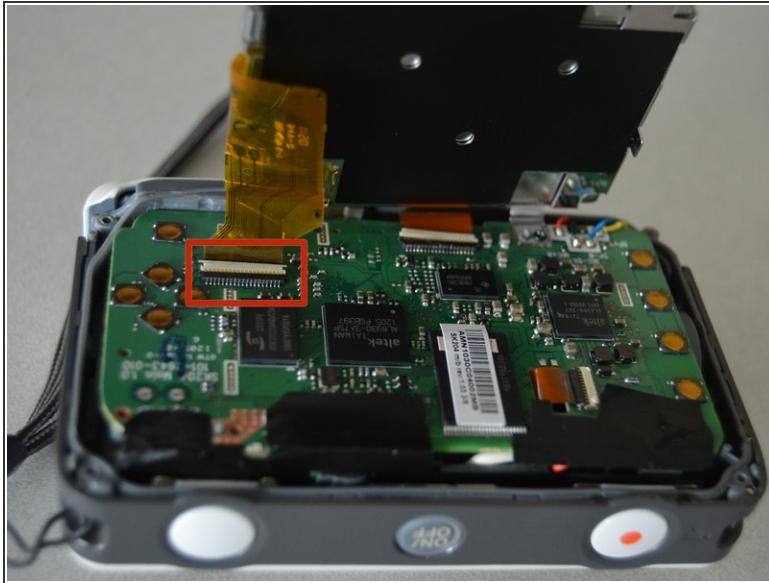

- Remove connected strip by flipping up the small off-white plastic strip with tweezers.
- Gently pull out the strip from the motherboard.

Step 10



- Remove screw that is now in the top right corner. This will detach the screen entirely.

To reassemble your device, follow these instructions in reverse order.