




Nikon Coolpix S3100 Camera Holder Replacement

This guide will help you replace the holder for the camera strap.

Written By: Jorge

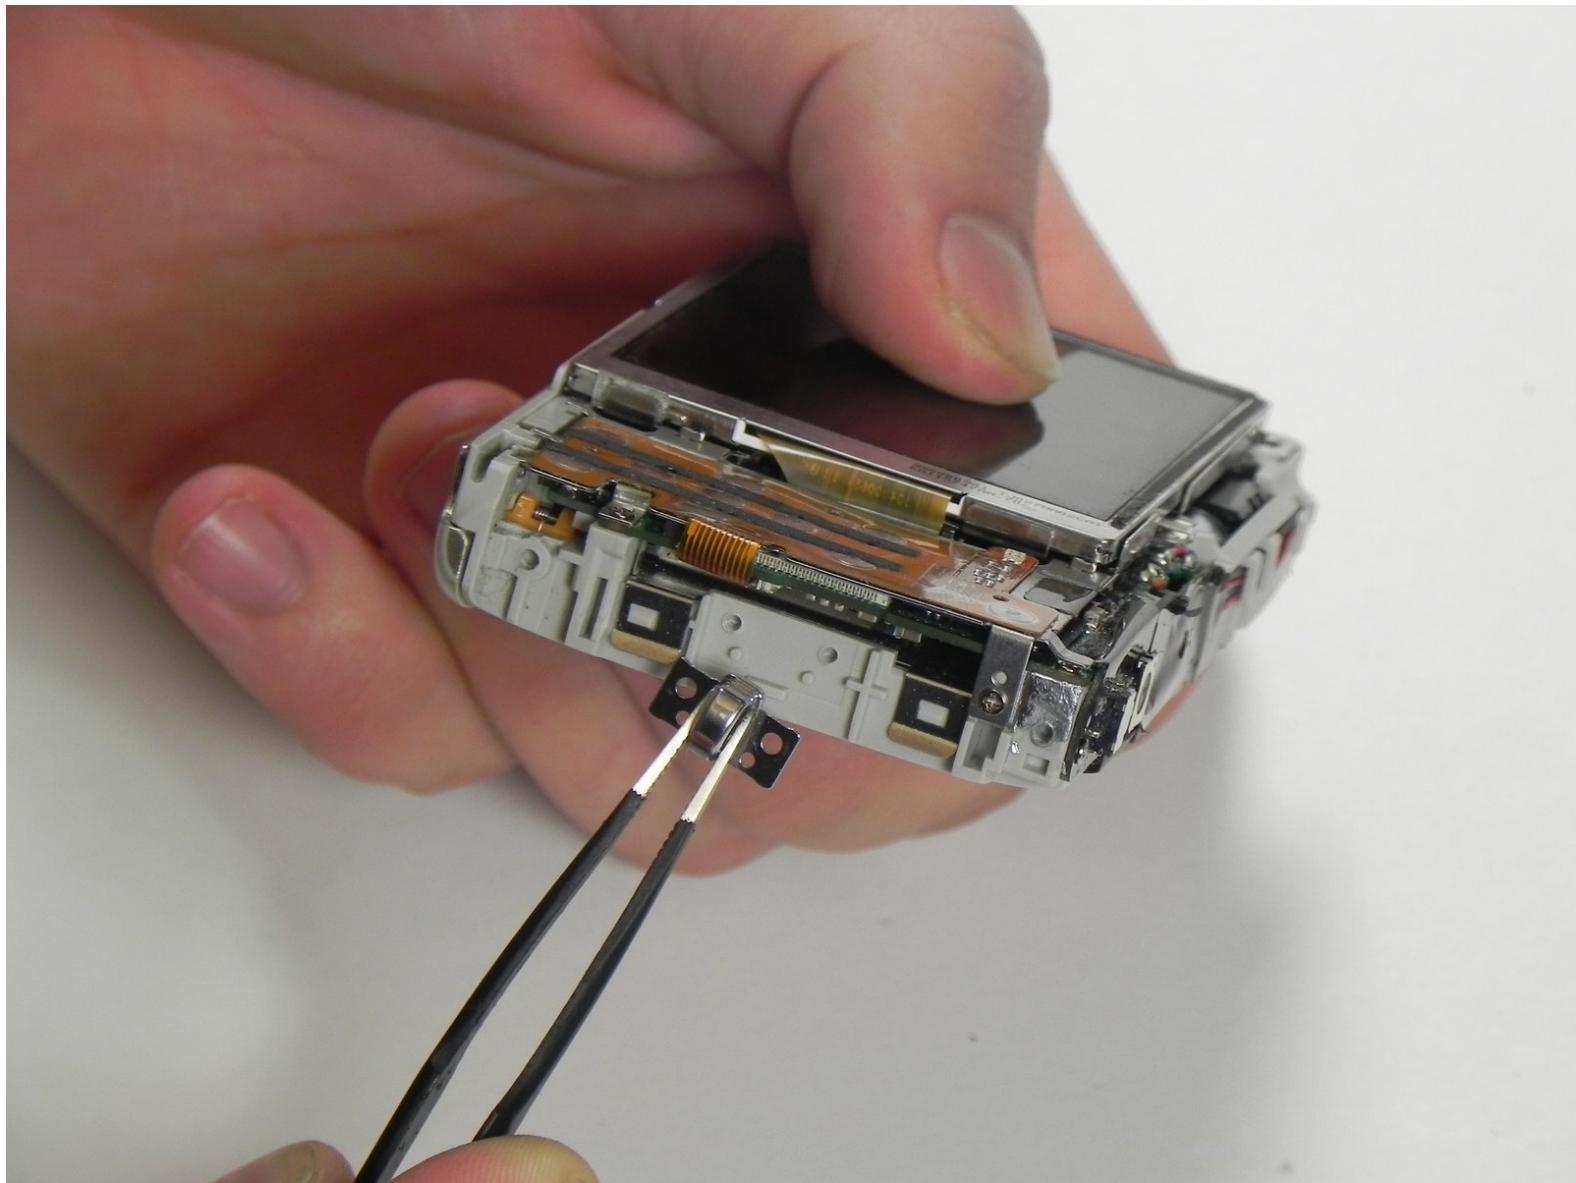

INTRODUCTION

When you are about to insert a new strap into the holder, you realize that it is broken.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Nikon Coolpix S3100 disassembly



- Remove 8-2.46 mm screws from both sides and bottom of camera using a #000 Phillips screwdriver.
 - Remove 2 screws from left side. (picture 1)
 - Remove 4 screws from bottom. (picture 2)
 - Remove 2 screws from right side. (picture 3)

Step 2

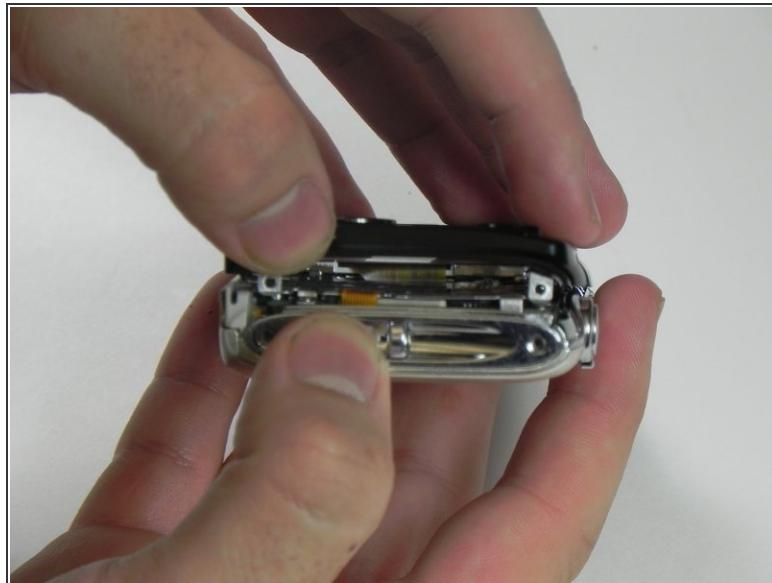

- Remove black cover pulling up with left thumb. Hold silver cover with right thumb.
- Remove silver cover lifting up with left thumb. Hold the camera with right thumb.

⚠ Once internal circuit board is exposed, the red and blue wire terminals at top center can provide a nasty shock from the charged flash capacitor (silver can to left of terminals). BE CAREFUL!

Step 3




- Remove 2-2.10mm screws in the front of the camera using a #000 Phillips screwdriver.
 - Remove the two screws.
- Gently pull up to detach the frame. (picture 2)

Step 4 — Holder



- Remove 2-2.90mm using a #000 Phillips screwdriver.

Step 5

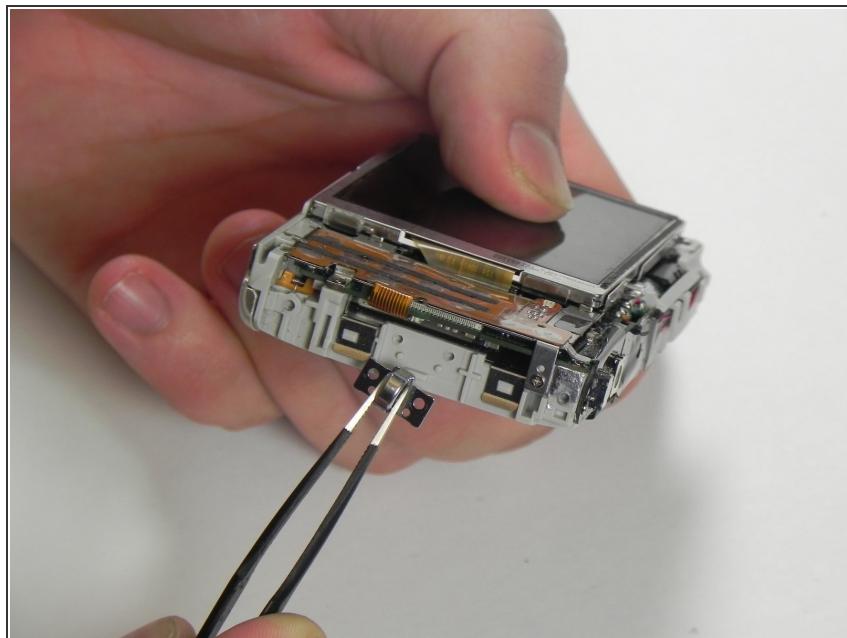

- Remove by using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.