




# Nikon Coolpix S3100 Camera Shutter Button Replacement

This guide will help you accomplish the shutter button seems to be broken or loose.

Written By: Jorge

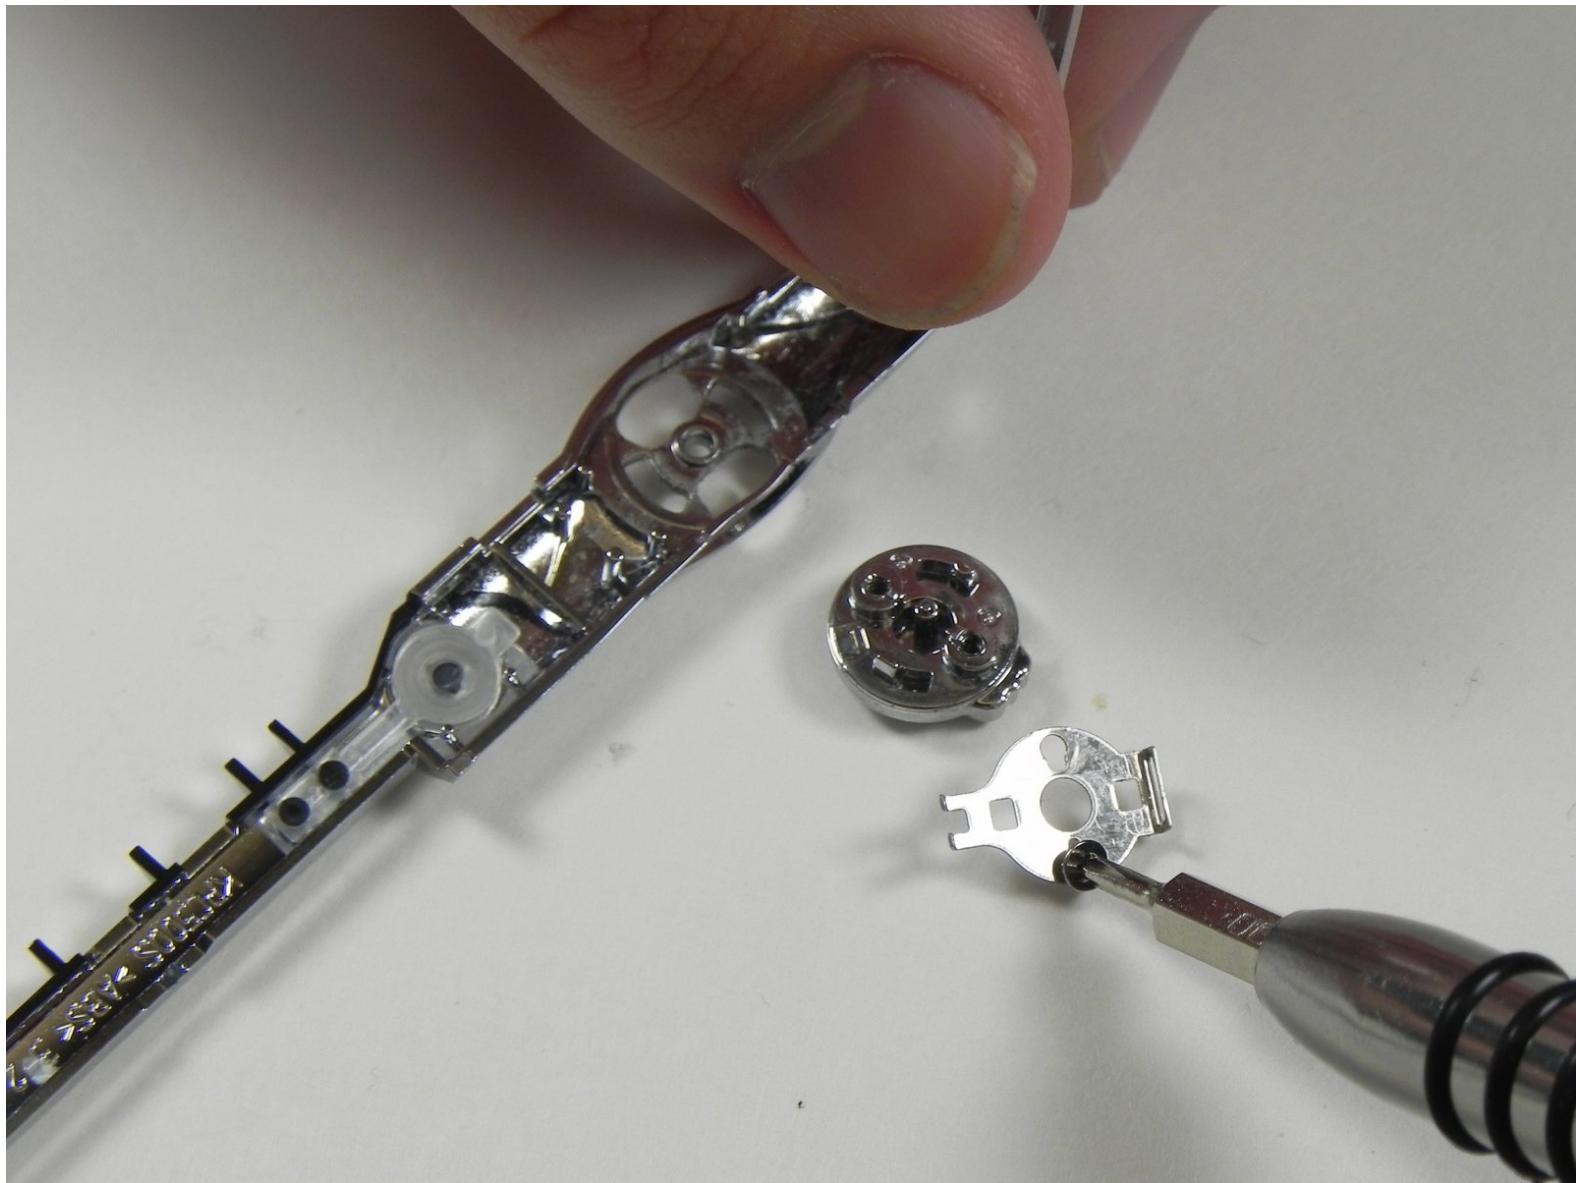

## INTRODUCTION

The shutter button seems to malfunction whether it is not turning or not working. This guide will help you understand the problem.

### **TOOLS:**



- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Nikon Coolpix S3100 disassembly



- Remove 8-2.46 mm screws from both sides and bottom of camera using a #000 Phillips screwdriver.
  - Remove 2 screws from left side. (picture 1)
  - Remove 4 screws from bottom. (picture 2)
  - Remove 2 screws from right side. (picture 3)



## Step 2

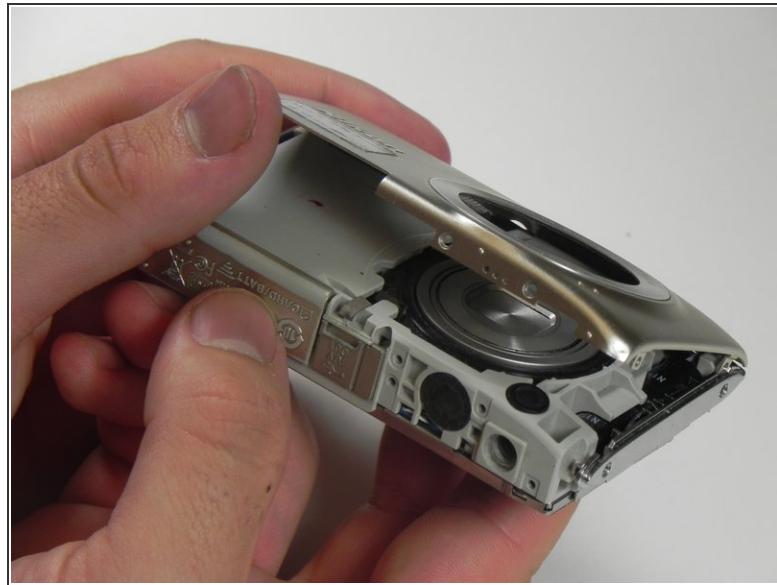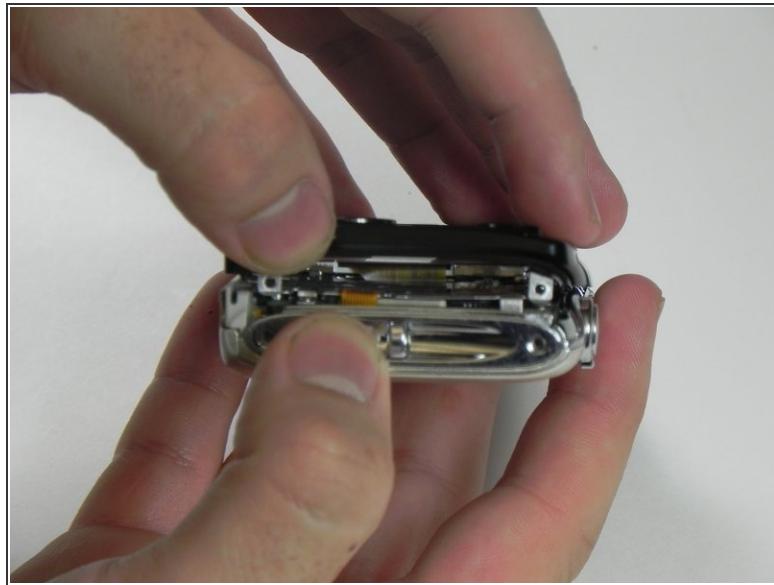

- Remove black cover pulling up with left thumb. Hold silver cover with right thumb.
- Remove silver cover lifting up with left thumb. Hold the camera with right thumb.


**⚠** Once internal circuit board is exposed, the red and blue wire terminals at top center can provide a nasty shock from the charged flash capacitor (silver can to left of terminals). BE CAREFUL!

## Step 3

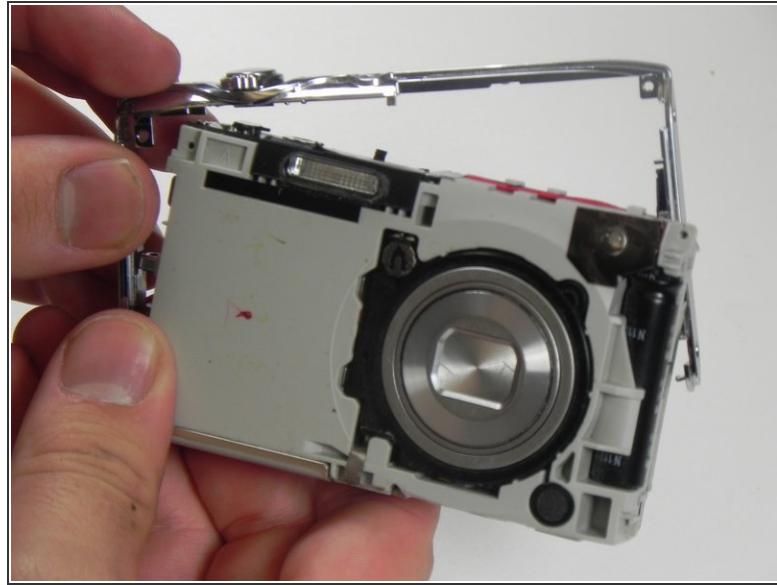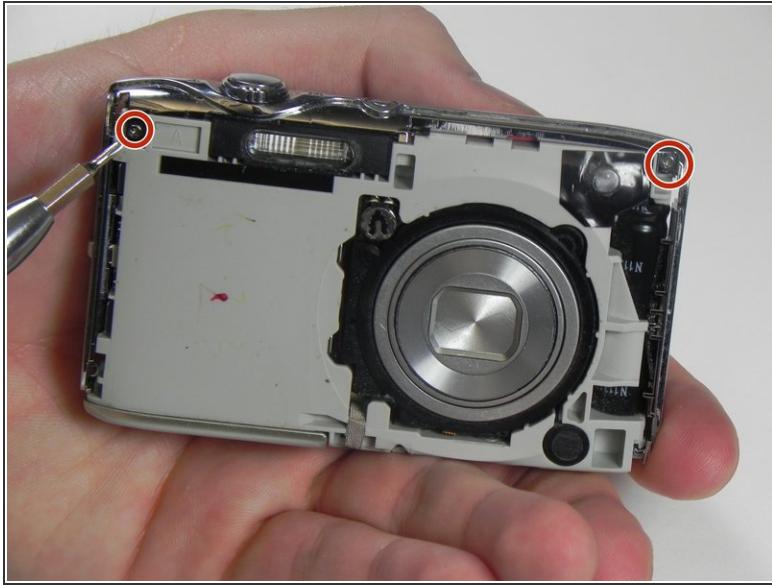

- Remove 2-2.10mm screws in the front of the camera using a #000 Phillips screwdriver.
  - Remove the two screws.
- Gently pull up to detach the frame. (picture 2)

## Step 4 — Shutter Button

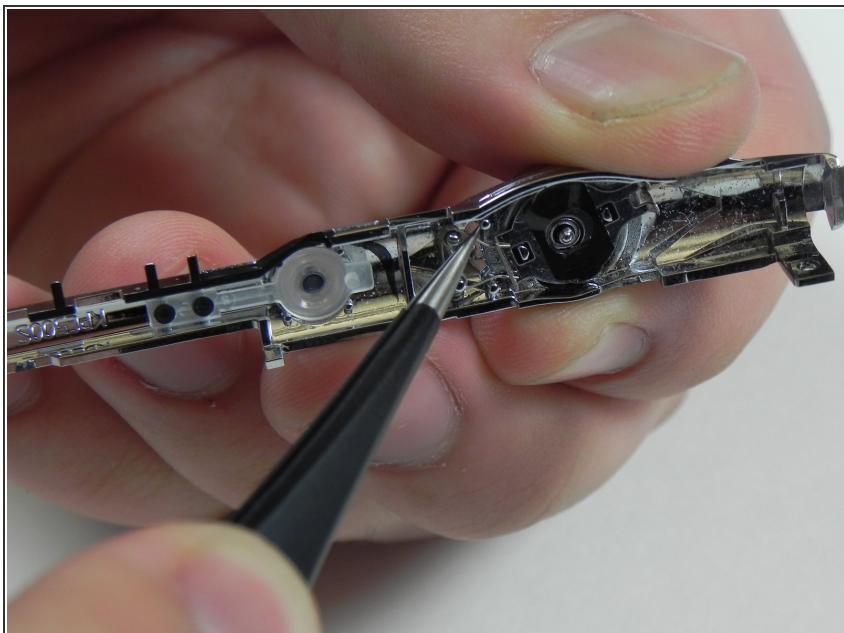

- Turn and hold the shutter bottom to the left and using a tweezer carefully remove the spring.

 Be very carefully handling the spring as it could release from tweezer.

## Step 5




- Gently remove the black adhesive tape.

## Step 6



- Remove 2-2.90mm using a #000 Phillips screwdriver.

## Step 7

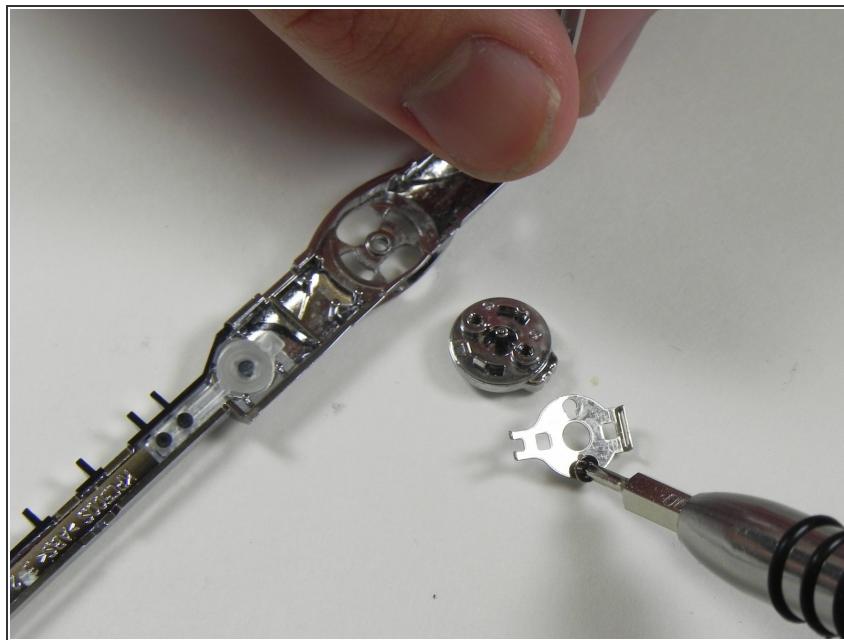

- The camera shutter is now apart.

To reassemble your device, follow these instructions in reverse order.