


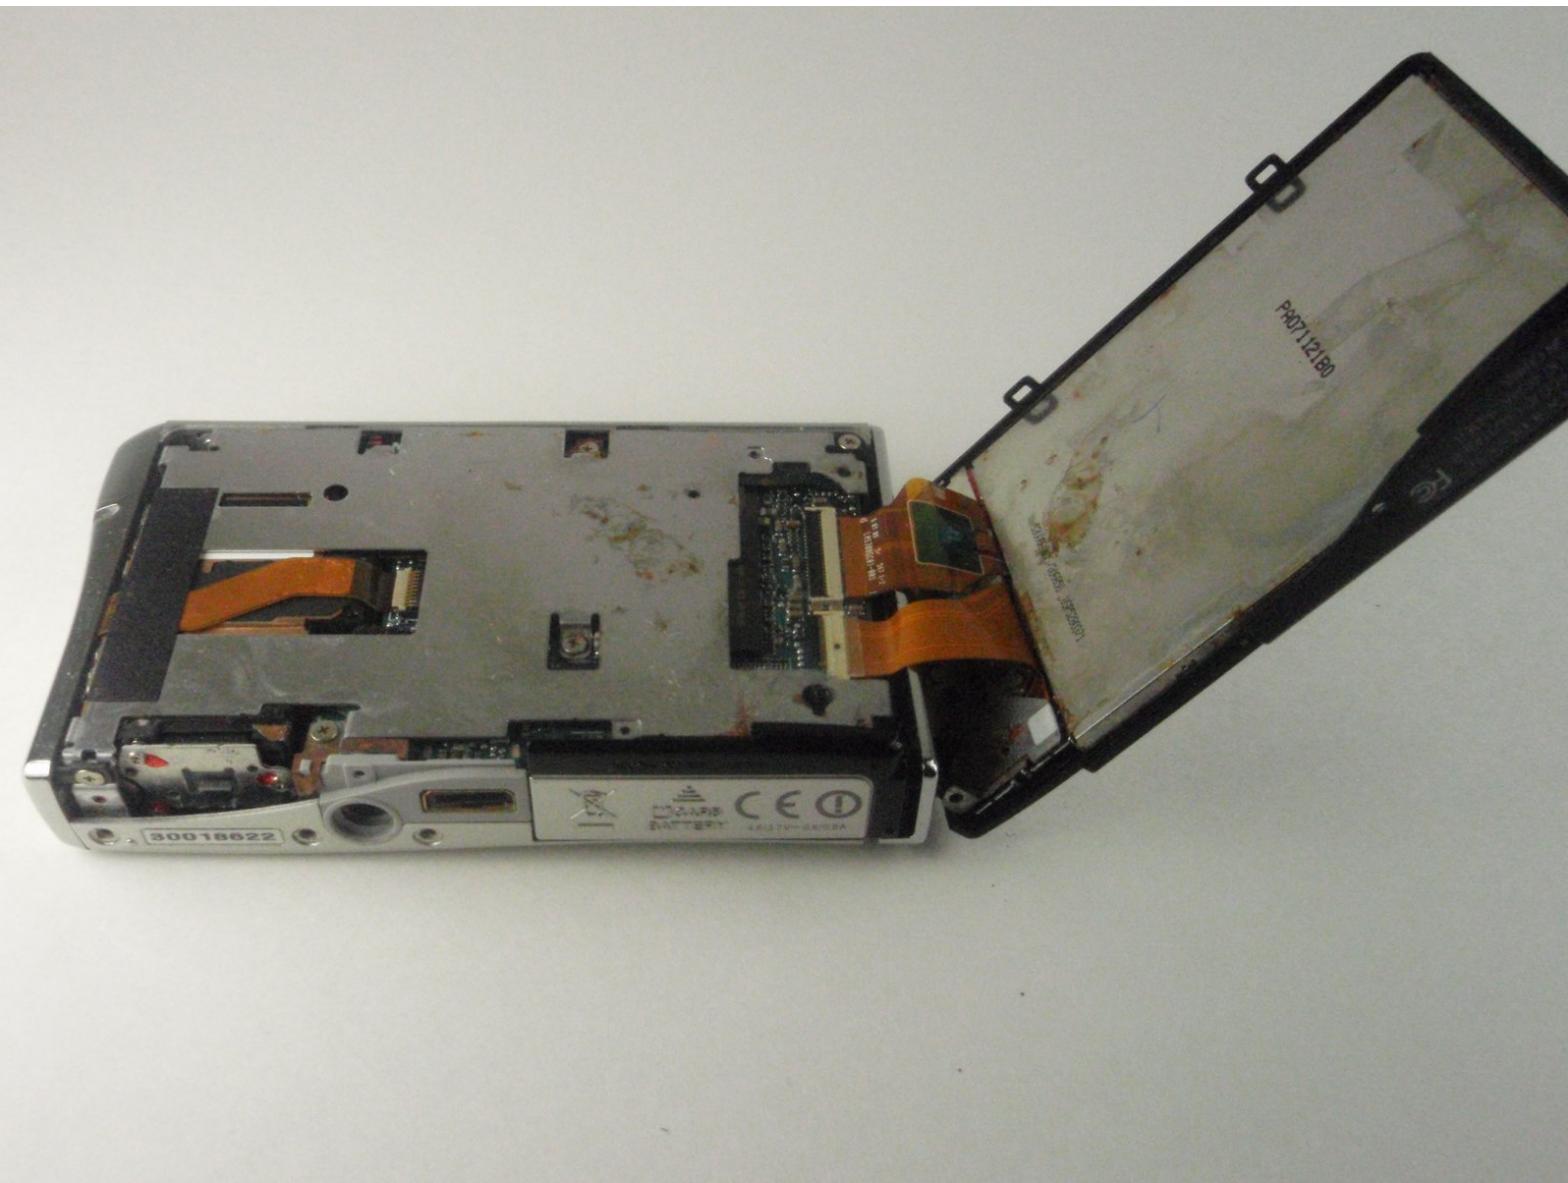

Nikon Coolpix S51c Back Cover Replacement

The following steps will allow you to remove the back cover for replacement or repair.

Written By: Ryan



INTRODUCTION

1. You will need a #00 phillip's head screwdriver and a black spudger (or equivalent tool)

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Cover




- Turn over camera to find 5 apparent screws.

Step 2



- Remove all 5 screws from the bottom of the camera and store them carefully.

Step 3

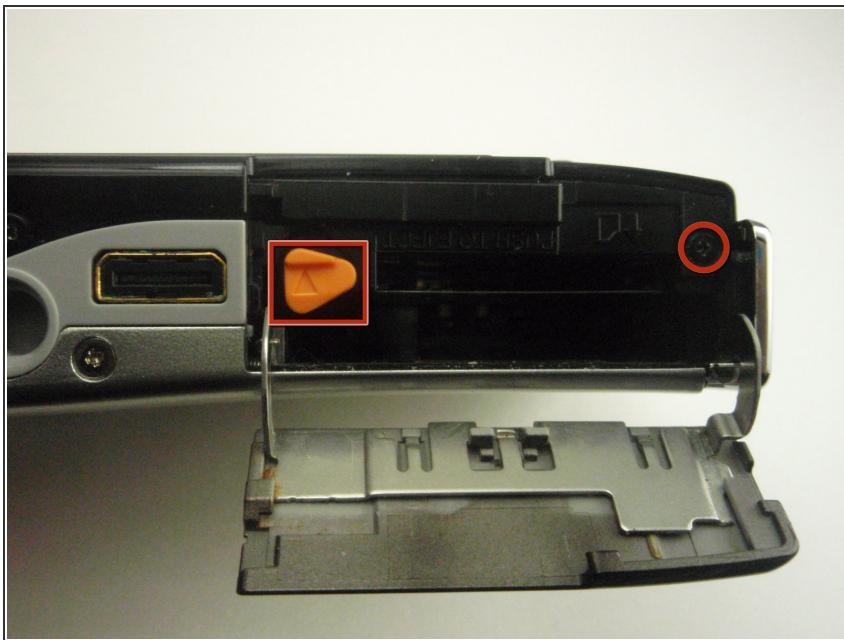


- Open battery door by sliding it in the direction of the arrow to reveal a hidden screw on the opposite side of orange lever. Remove this screw.

Step 4



- Rotate camera to find side panel with lanyard attachment. Detach side panel by lifting bottom corner slightly with the spudger.

Step 5

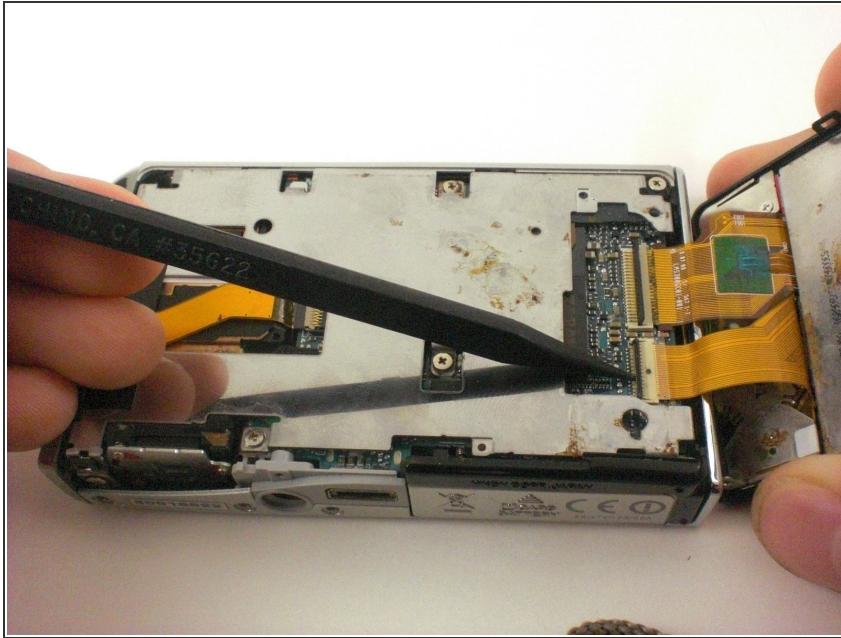

- Lift the back cover, being careful not to rip the orange cables between the camera and the back cover.

Step 6



- With back cover lifted, lift the black flap that connects the ribbon to the motherboard with the spudger and carefully remove the back cover.

To reassemble your device, follow these instructions in reverse order.