




Nikon Coolpix S51c Battery Replacement

How to take out the battery to either replace it or charge it.

Written By: Ryan

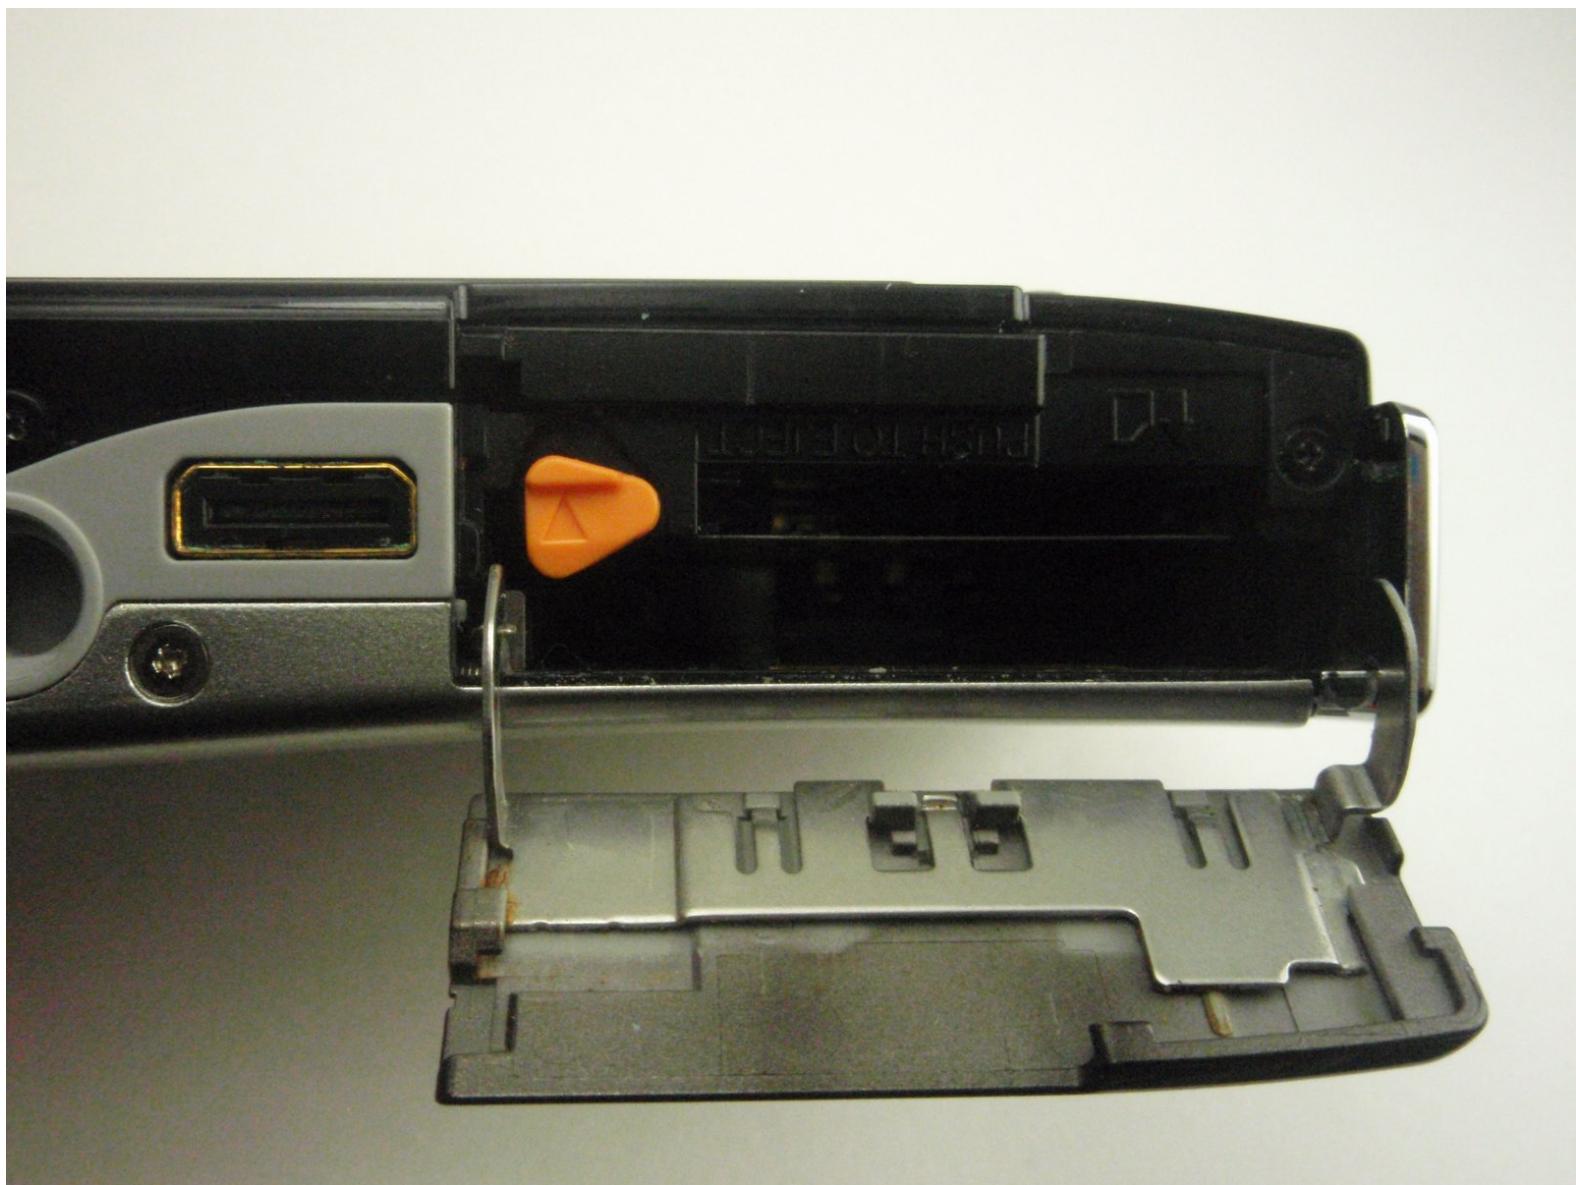

INTRODUCTION

How to take out the battery to either replace it or charge it.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Battery




- Turn the camera upside down to find the battery door.

Step 2



- Slide the battery door in the direction of the arrow, toward the LCD screen. The door will then swing open.

Step 3

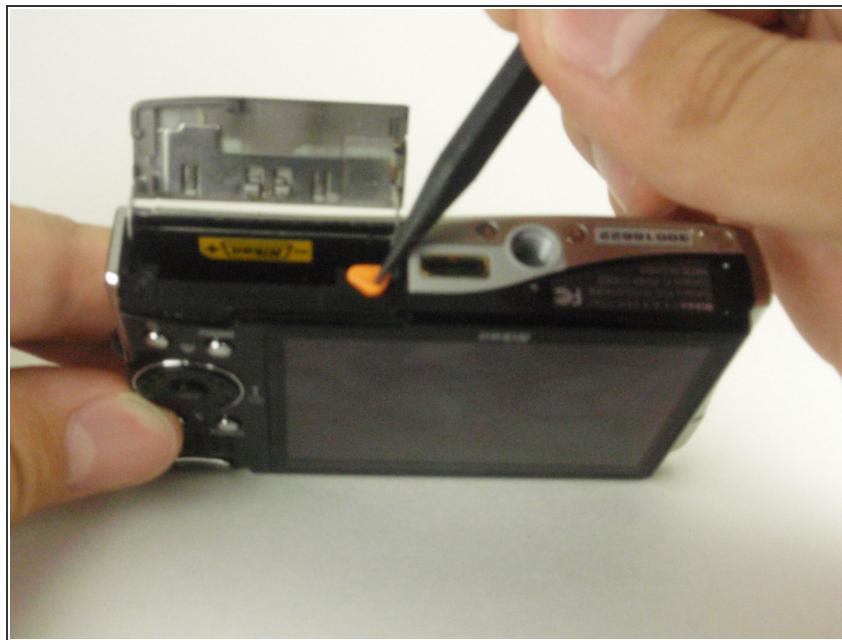

- Push the orange release mechanism with the spudger in the direction of the arrow, freeing the battery.

To reassemble your device, follow these instructions in reverse order.