


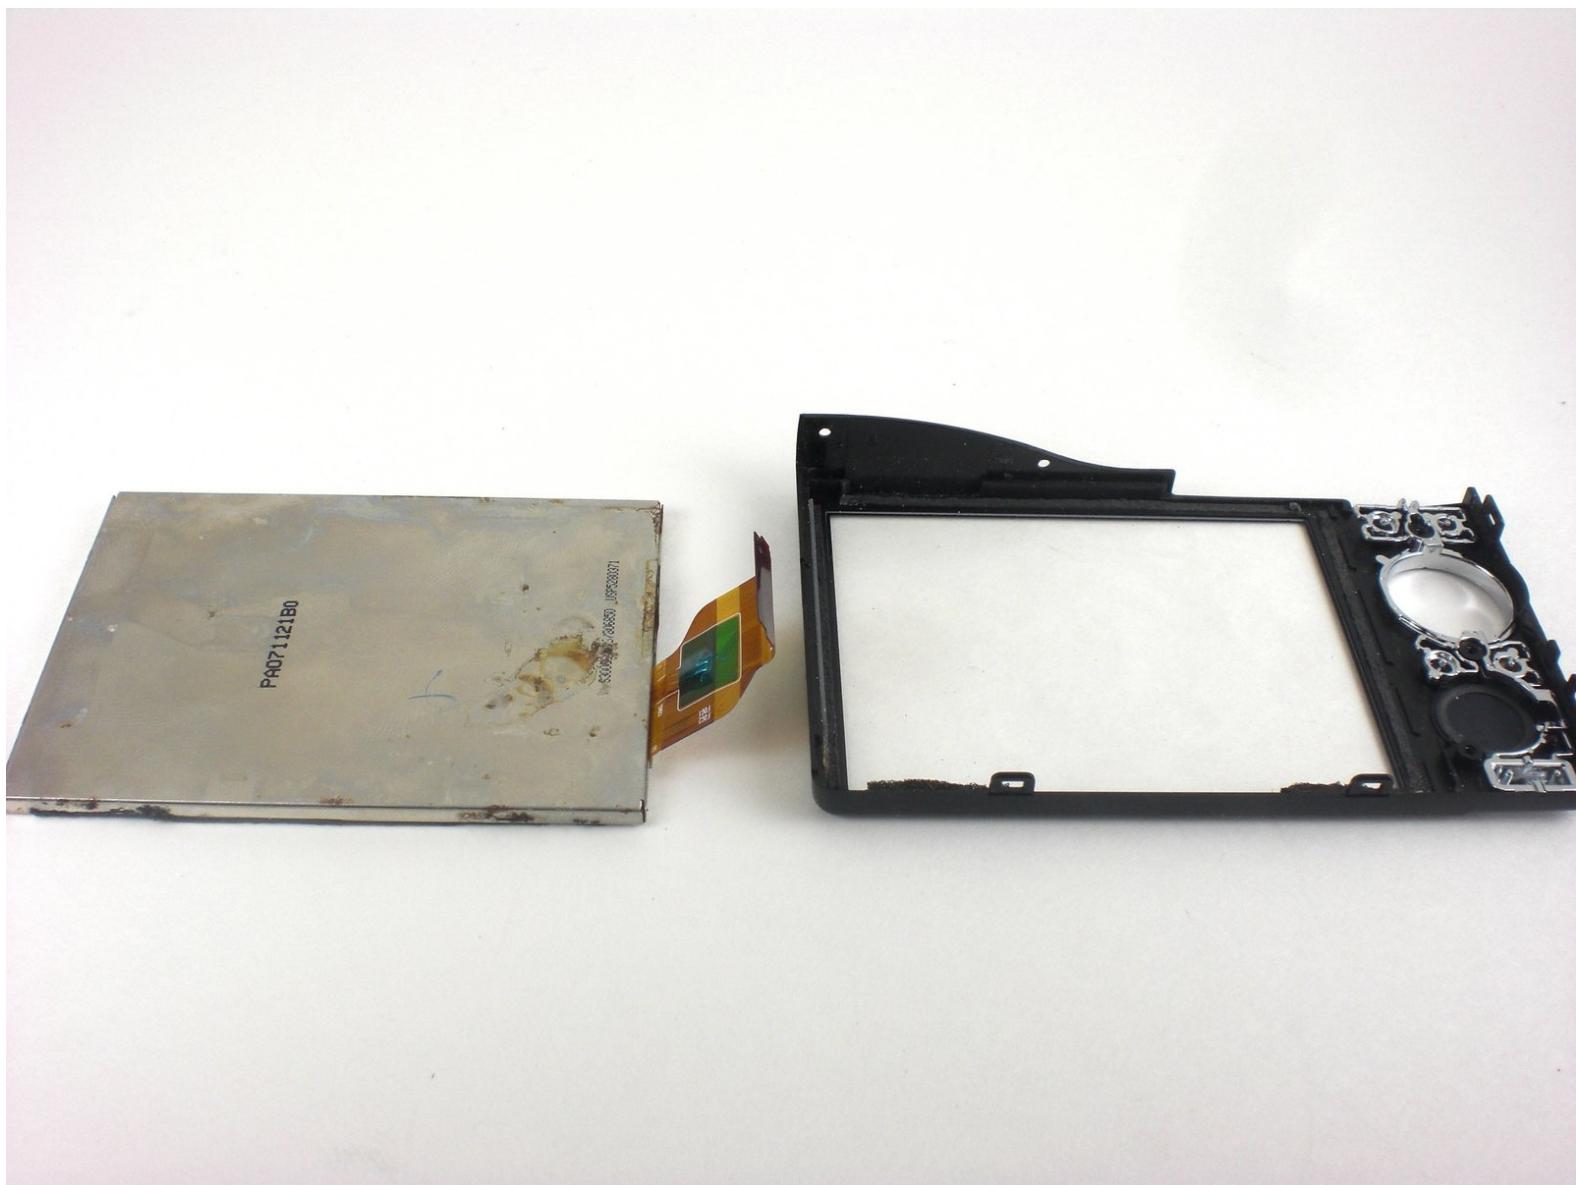

# Nikon Coolpix S51c LCD Screen Replacement

The following steps will allow you to remove the LCD screen for replacement or repair.

Written By: Ryan



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Back Cover




- Turn over camera to find 5 apparent screws.

## Step 2



- Remove all 5 screws from the bottom of the camera and store them carefully.

## Step 3

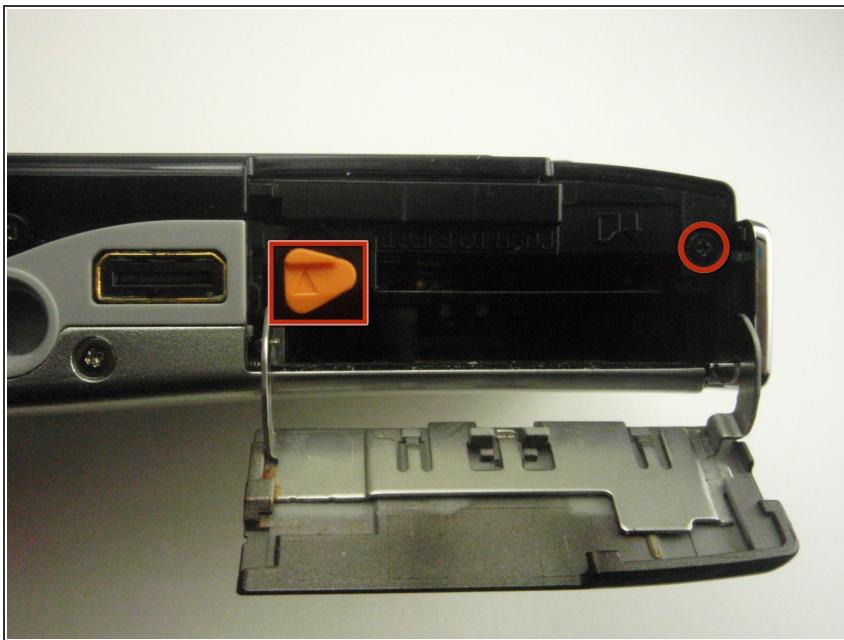


- Open battery door by sliding it in the direction of the arrow to reveal a hidden screw on the opposite side of orange lever. Remove this screw.

## Step 4



- Rotate camera to find side panel with lanyard attachment. Detach side panel by lifting bottom corner slightly with the spudger.

## Step 5

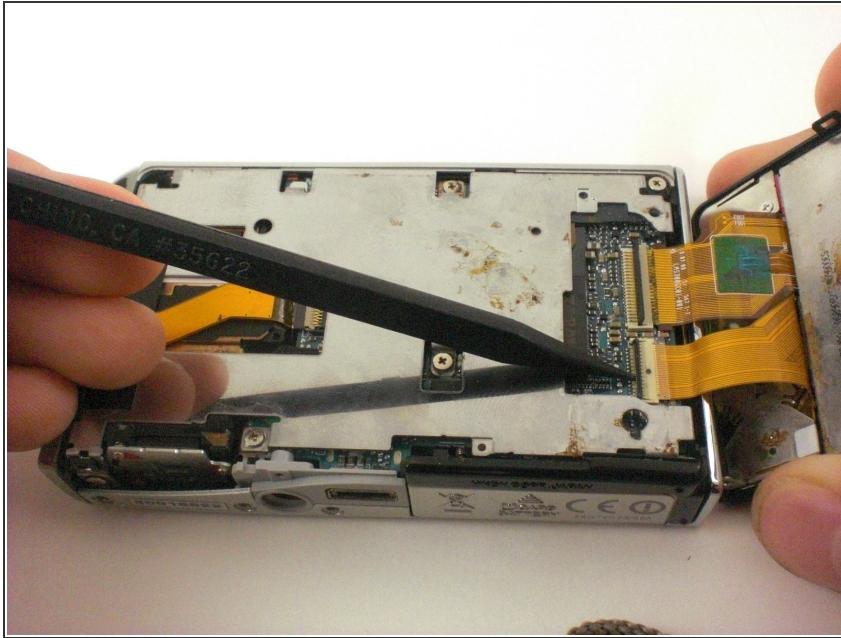

- Lift the back cover, being careful not to rip the orange cables between the camera and the back cover.

## Step 6



- With back cover lifted, lift the black flap that connects the ribbon to the motherboard with the spudger and carefully remove the back cover.

## Step 7 — LCD Screen



- On back of LCD screen, locate the three screws underneath the ribbon and remove them.

## Step 8



- Take out rectangular component on the side where the screws were.
- Pry apart screen from back casing using the spudger.

To reassemble your device, follow these instructions in reverse order.