



Nikon Coolpix S5300 Battery Replacement

How to replace an exhausted or damaged battery.

Written By: Waleed Chakir



INTRODUCTION

A camera is useless without a battery, use this guide to know how to replace an exhausted or damaged battery.

Step 1 — Battery



- Turn the camera upside down and locate the battery compartment.
- Slide the compartment open following the direction of the arrow.

Step 2



- Press the orange release button to release and remove the battery.
- Replace or insert battery in it's respective terminals

To reassemble your device, follow these instructions in reverse order.