




Nikon Coolpix S5300 Button Panel Replacement

How to get to the button panel in the Nikon Coolpix S5300.

Written By: Waleed Chakir

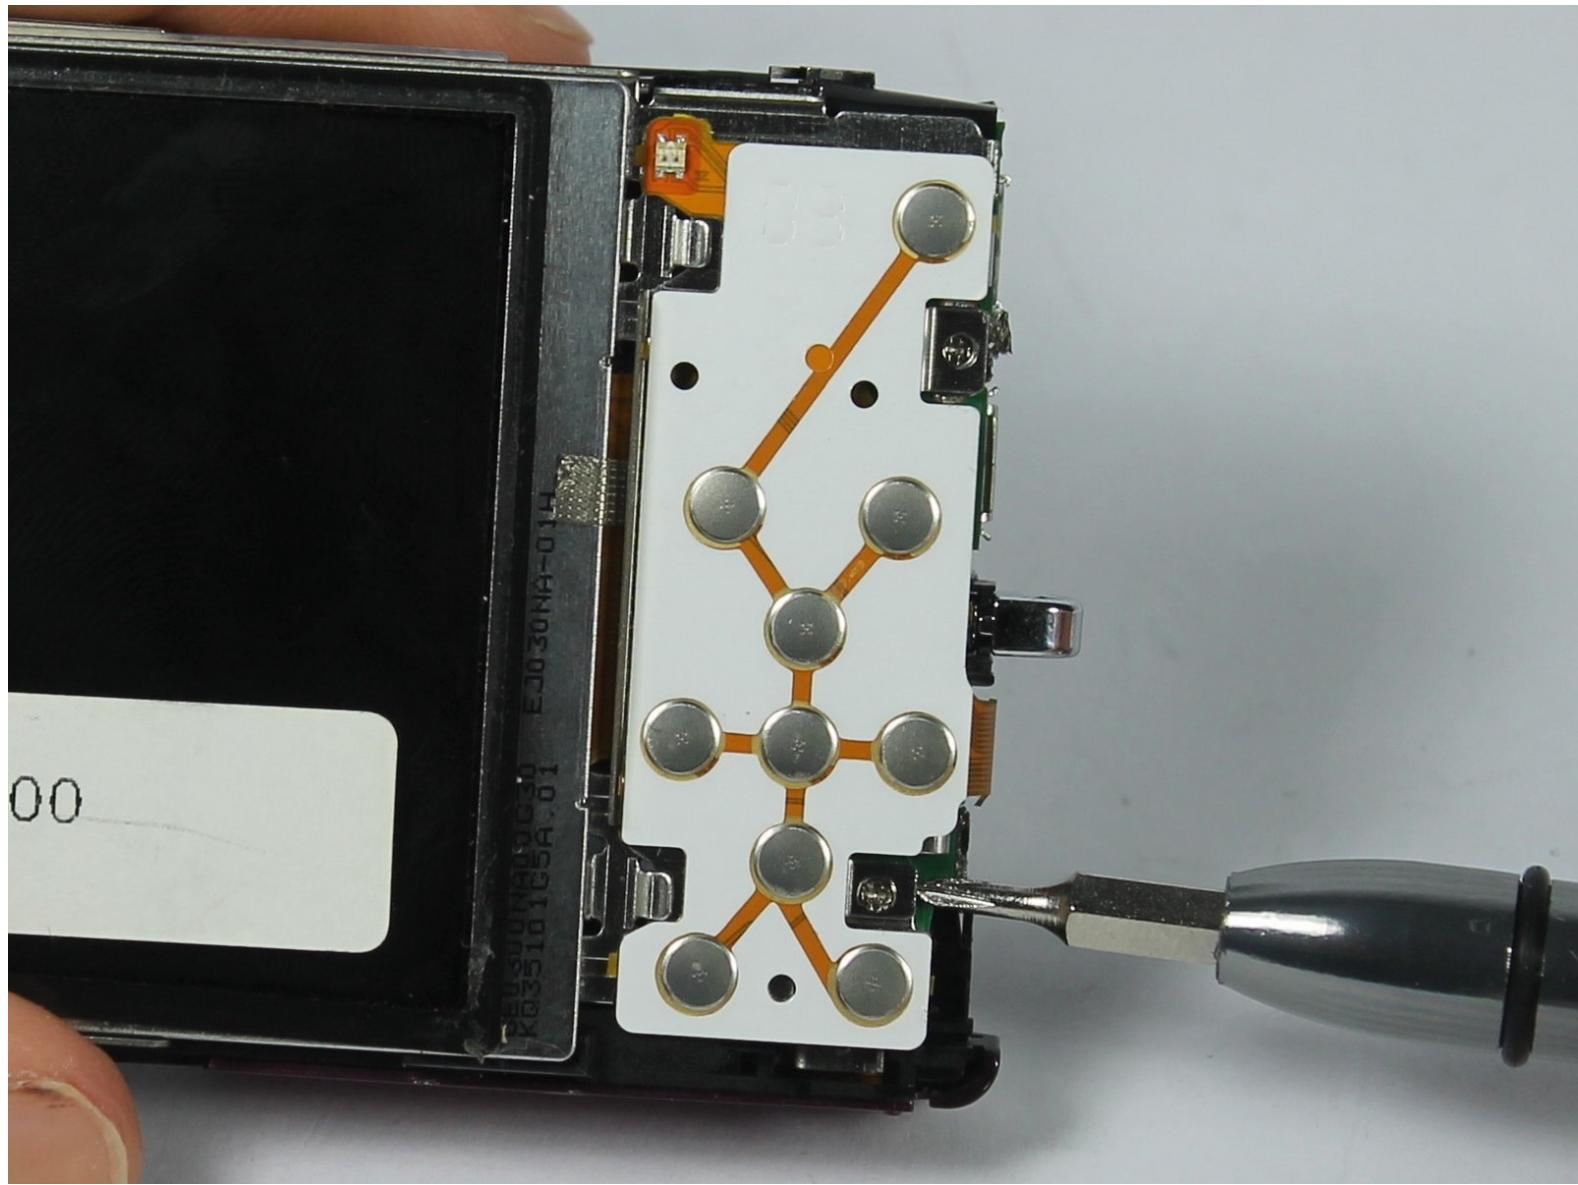

INTRODUCTION

This guide will allow the reader to how to disassemble the Nikon Coolpix S5300 and get to its button panel.

- Make sure to be gentle when removing ribbon cables.
- Be sure to keep track of all your screws.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- Turn the camera upside down and locate the battery compartment.
- Slide the compartment open following the direction of the arrow.

Step 2



- Press the orange release button to release and remove the battery.
- Replace or insert battery in it's respective terminals

Step 3 — Outer Casing



- Remove the four 0.1mm screws from the bottom of the camera using the phillips head screwdriver
- Using the same screwdriver, remove the 2 screws on the side of the camera.
- Remove the 2 screws from the other side of the camera.


(i) One of the screws is under the I/O port cover.

Step 4




- Use the plastic opening tool to carefully separate the cover from the camera.
- Work the plastic opening tool around all the edges of the front plate.
- Pull the purple plastic cover off gently from the screen.

Step 5

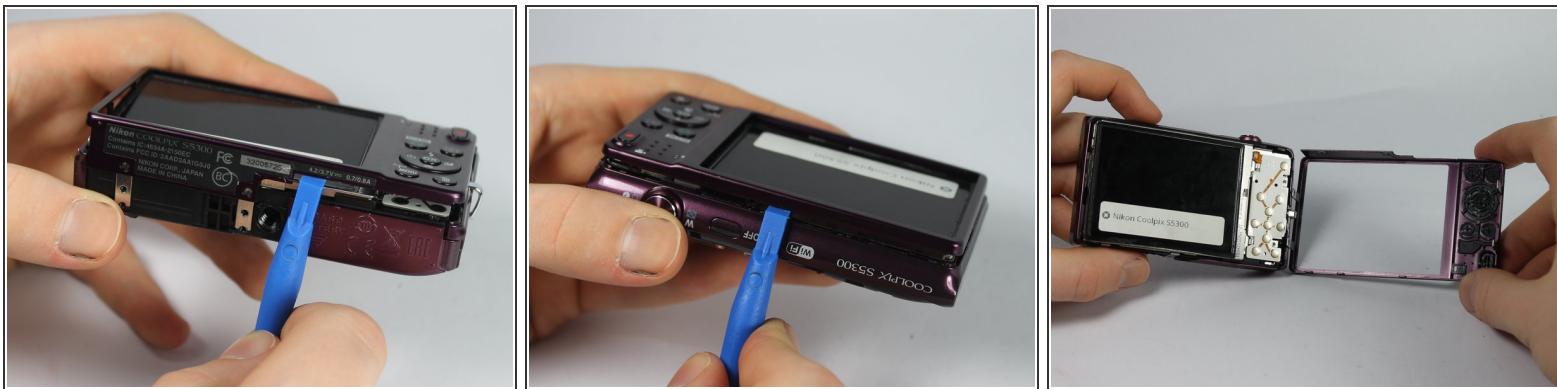


- Turn the camera over so the LCD screen is facing you.
- Carefully remove the front shell by gently prying around the corners with the plastic opening tool until it releases.

Step 6

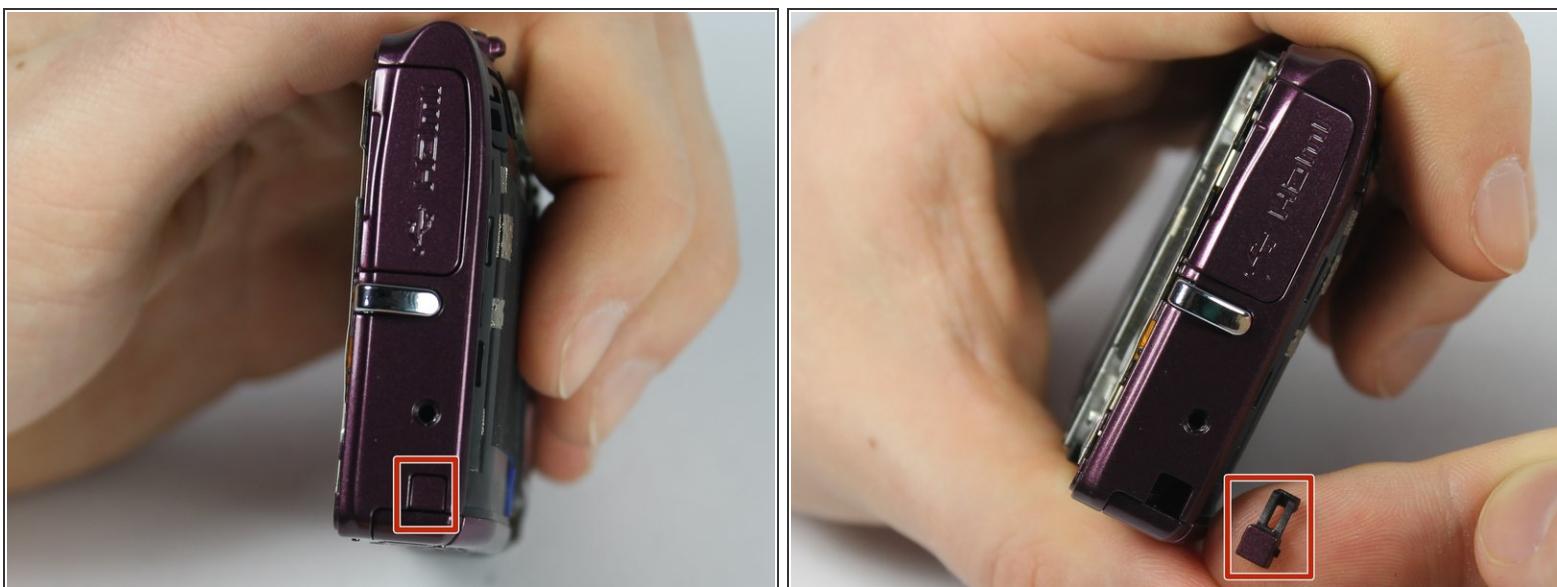

- Be careful to keep track of little pieces of the outside casing.

Step 7

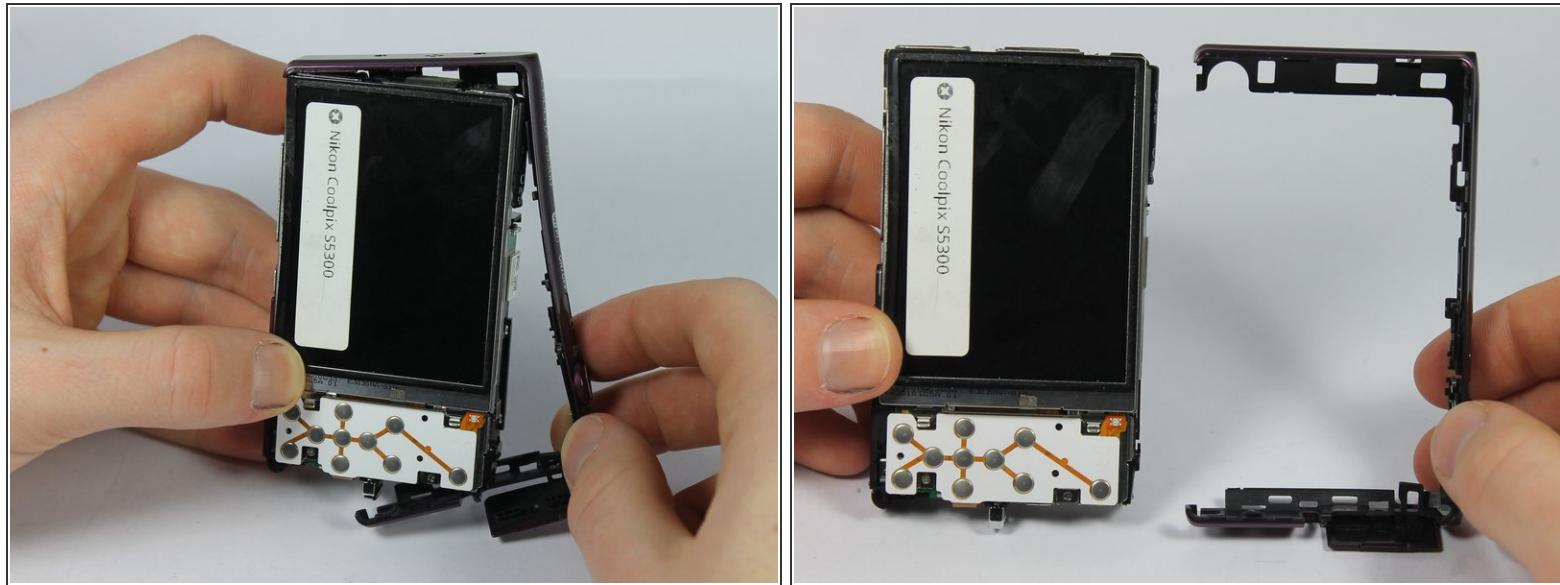

- Carefully remove the top button casing by pulling it away from main camera.



Step 8 — Button Panel



- Remove the 2 screws on the silver plate
- Gently lift the screen and silver plate away from the internal components.

⚠ Do not separate the plate and screen from the camera

Step 9

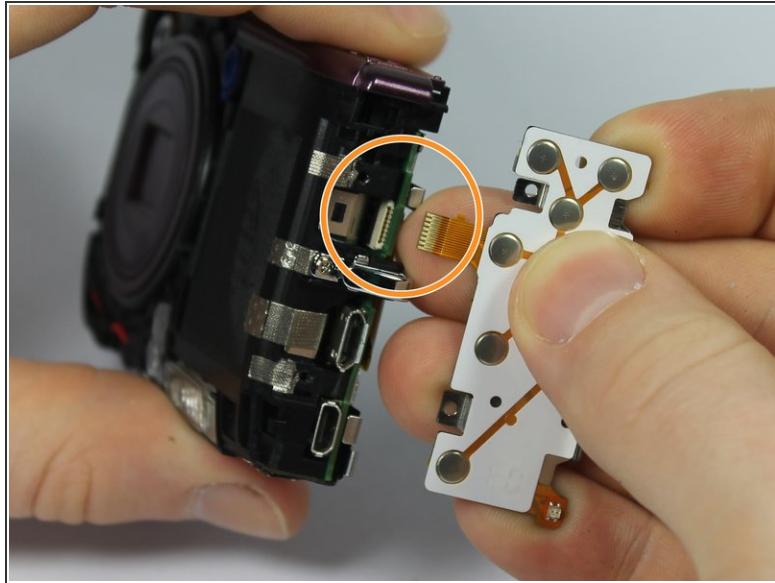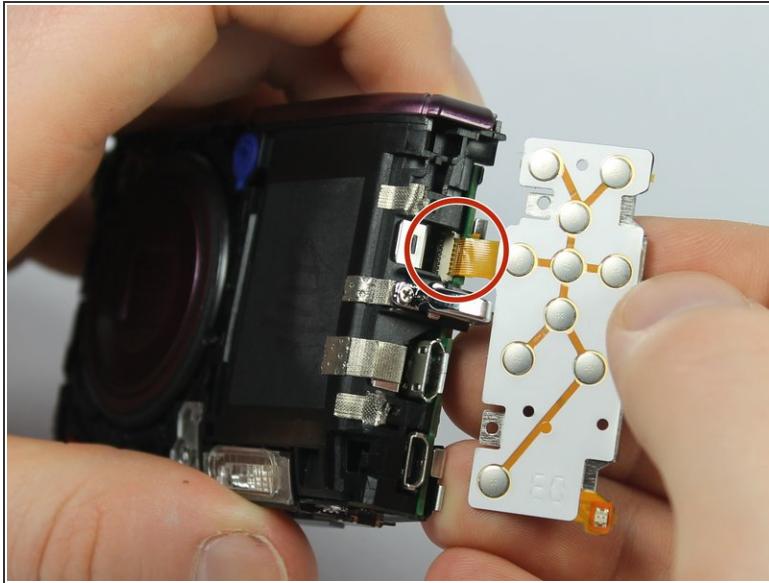

- Carefully move the button panel away from the silver plate.
- To disconnect the ribbon cable, use the tip of a plastic opening tool or your fingernail to flip up the small retaining flap.
- Safely pull the ribbon cable out and then remove the button panel.

 Be sure you are prying up on the hinged retaining flap, not the connector itself.

To reassemble your device, follow these instructions in reverse order.