




# Nikon Coolpix S5300 Image Sensor Replacement

How to get to the image sensor in the Nikon Coolpix S5300.

Written By: Riordan McCole

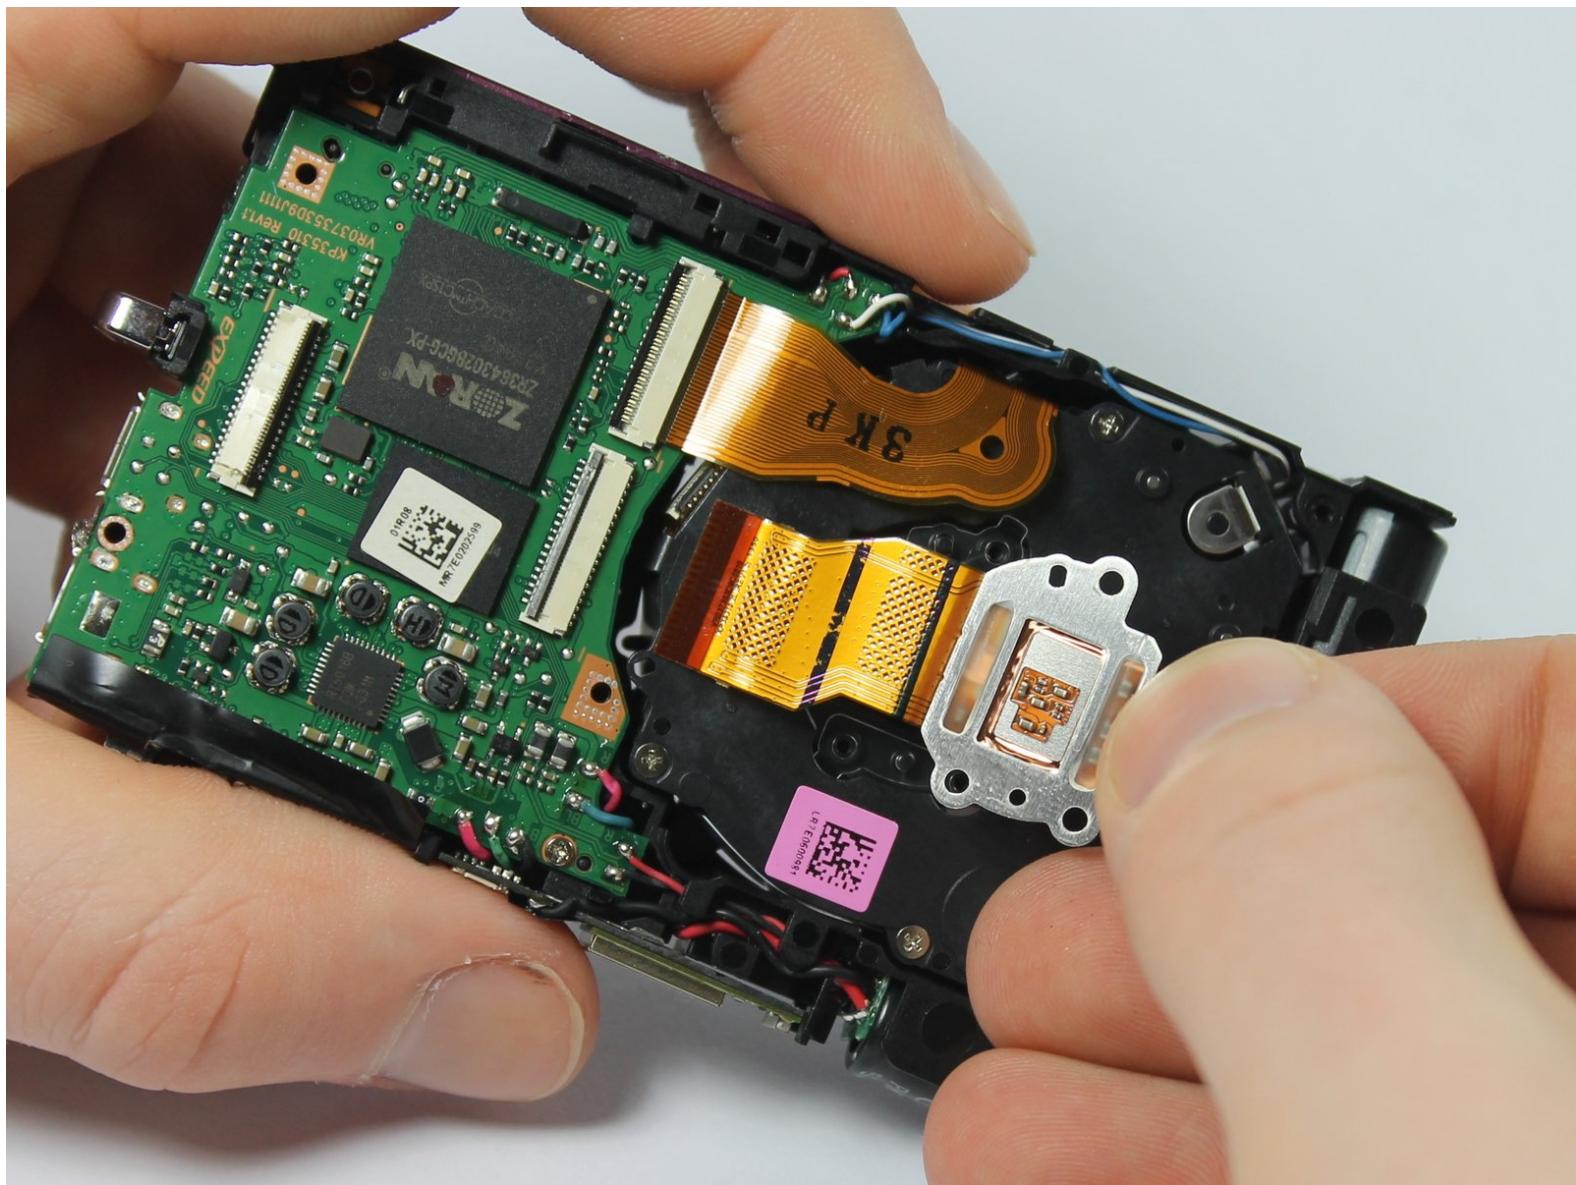

## INTRODUCTION

This guide will allow the reader to understand how to disassemble the Nikon Coolpix S5300 and get to its image sensor.

### **TOOLS:**


- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Turn the camera upside down and locate the battery compartment.
- Slide the compartment open following the direction of the arrow.

## Step 2

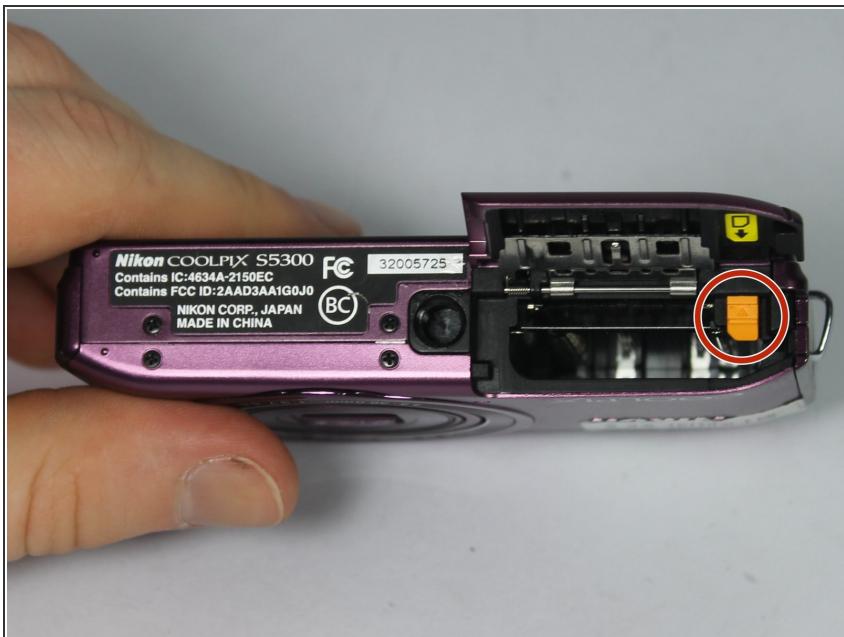

- Press the orange release button to release and remove the battery.
- Replace or insert battery in it's respective terminals

## Step 3 — Outer Casing



- Remove the four 0.1mm screws from the bottom of the camera using the phillips head screwdriver
- Using the same screwdriver, remove the 2 screws on the side of the camera.
- Remove the 2 screws from the other side of the camera.


*(i)* One of the screws is under the I/O port cover.

## Step 4




- Use the plastic opening tool to carefully separate the cover from the camera.
- Work the plastic opening tool around all the edges of the front plate.
- Pull the purple plastic cover off gently from the screen.

## Step 5

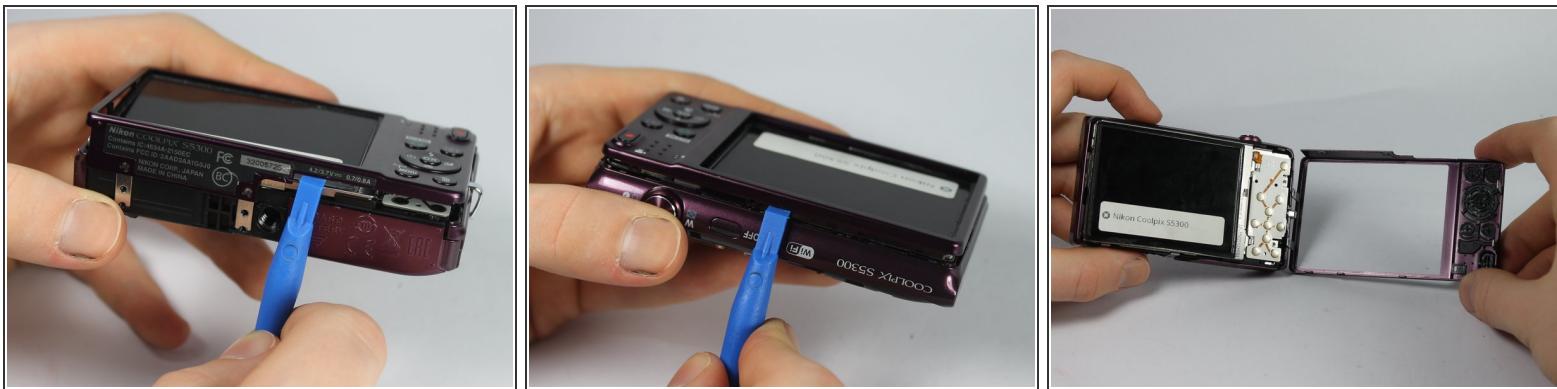

- Turn the camera over so the LCD screen is facing you.
- Carefully remove the front shell by gently prying around the corners with the plastic opening tool until it releases.

## Step 6

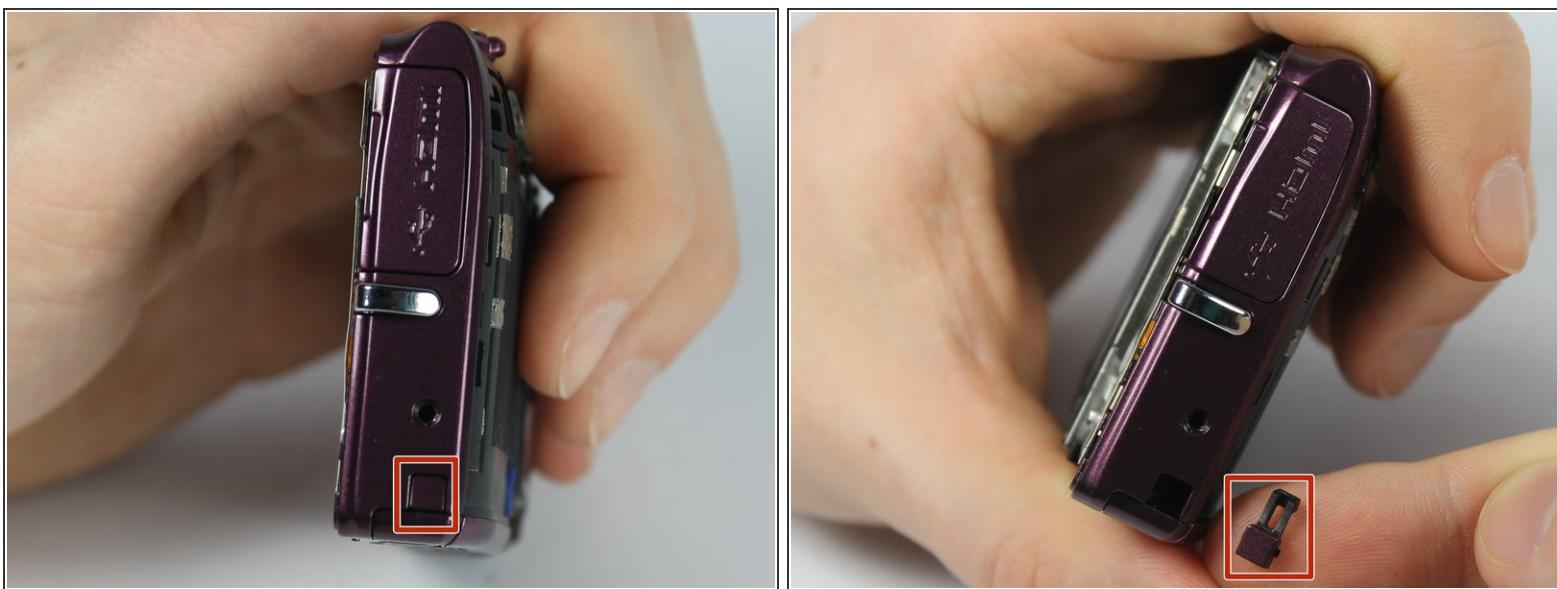

- Be careful to keep track of little pieces of the outside casing.

## Step 7





- Carefully remove the top button casing by pulling it away from main camera.

## Step 8 — Button Panel



- Remove the 2 screws on the silver plate
  - Gently lift the screen and silver plate away from the internal components.
- ⚠** Do not separate the plate and screen from the camera



## Step 9

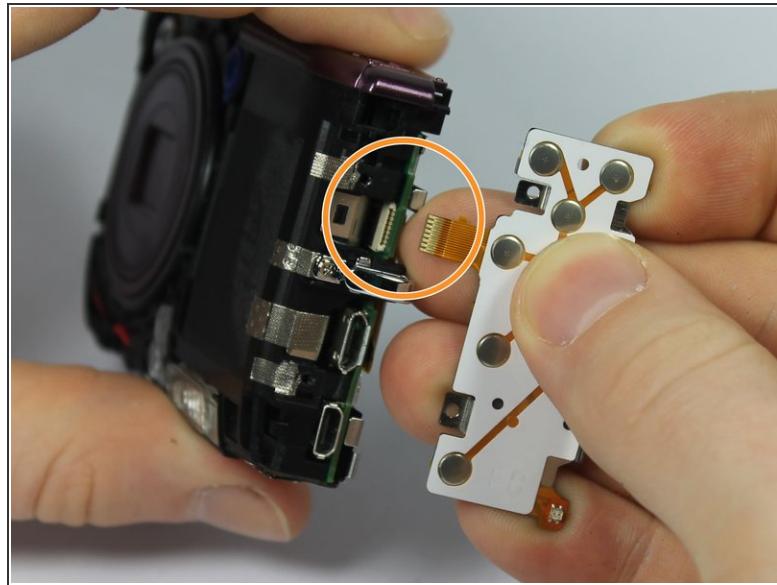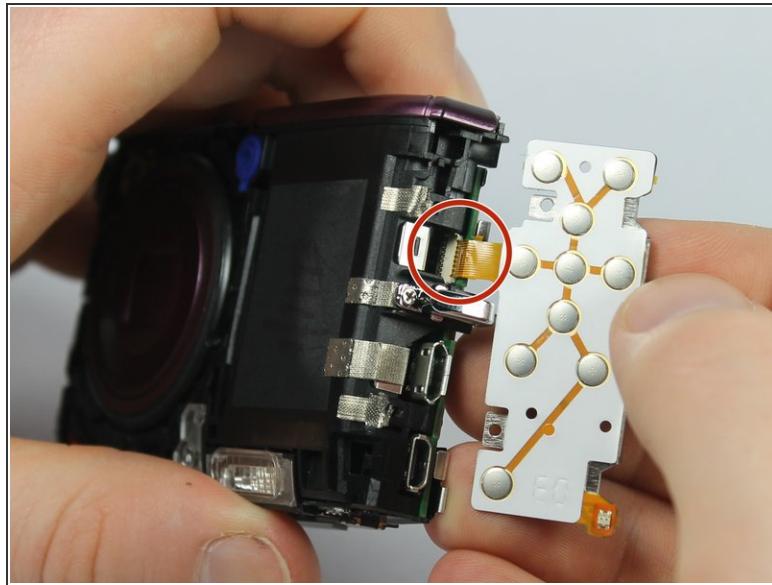

- Carefully move the button panel away from the silver plate.
- To disconnect the ribbon cable, use the tip of a plastic opening tool or your fingernail to flip up the small retaining flap.
- Safely pull the ribbon cable out and then remove the button panel.



**⚠** Be sure you are prying up on the hinged retaining flap, not the connector itself.

## Step 10 — LCD Display Screen

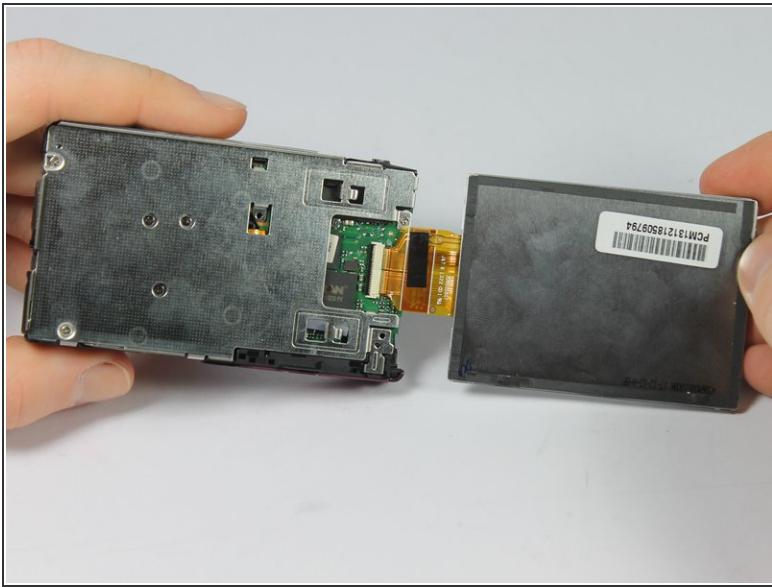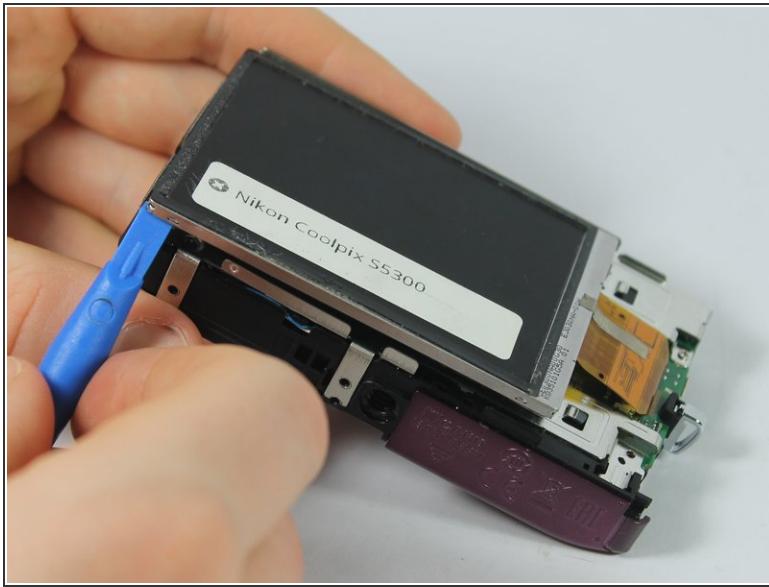

- Carefully remove the screen away from the silver plate.
- Carefully fold the screen over exposing the latch for the ribbon cable.


## Step 11

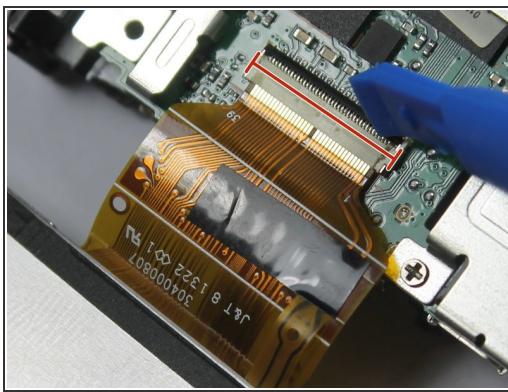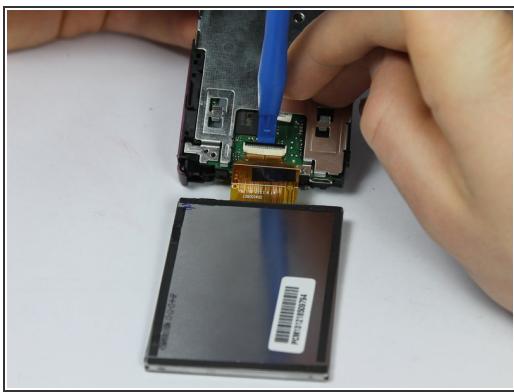

- To disconnect the ribbon cable, use the tip of a plastic opening tool or your fingernail to flip up the small retaining flap. Then, you can safely pull the ribbon cable out.


! Be sure you are prying up on the hinged retaining flap, not the connector itself.

## Step 12

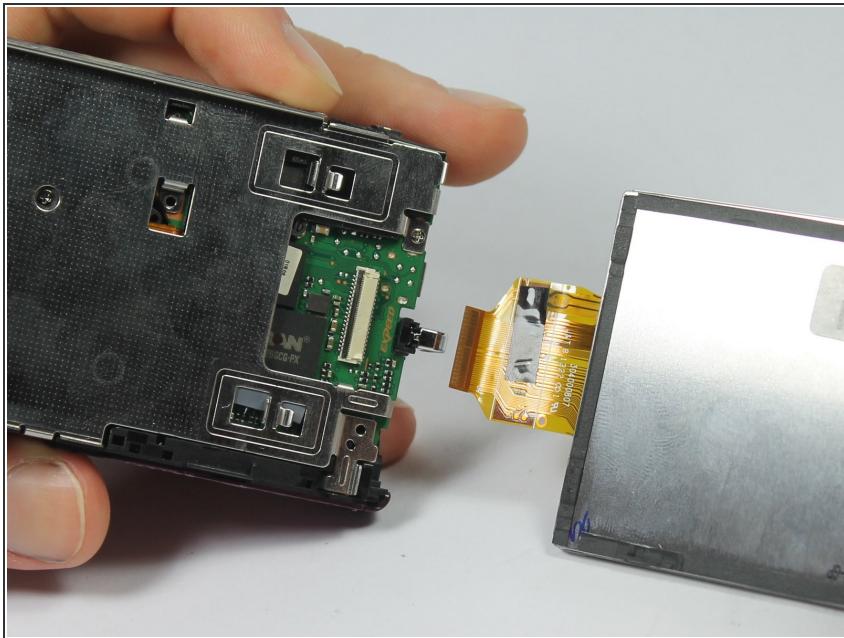


- Once the ribbon cable is disconnected, remove the LCD screen.

## Step 13 — Image Sensor

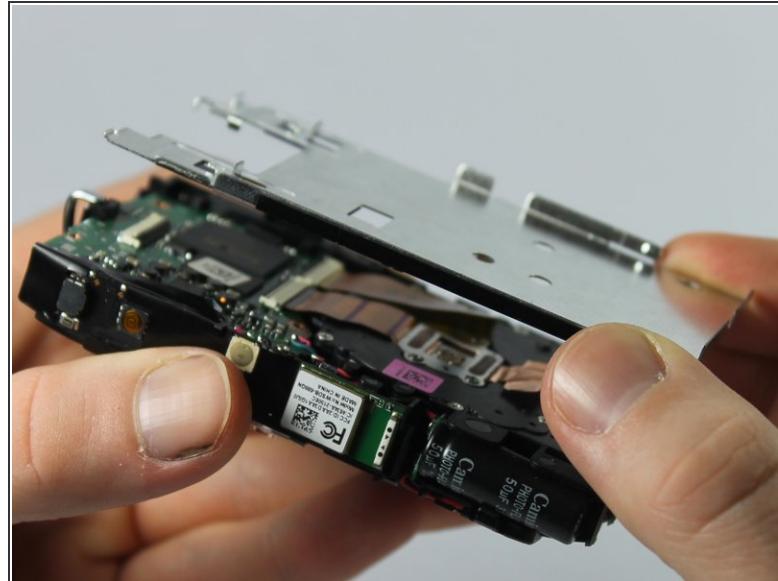


- Using the phillips head screwdriver, remove the three 0.1mm screws on the metal plate.
- Carefully remove metal plate from the camera.

## Step 14

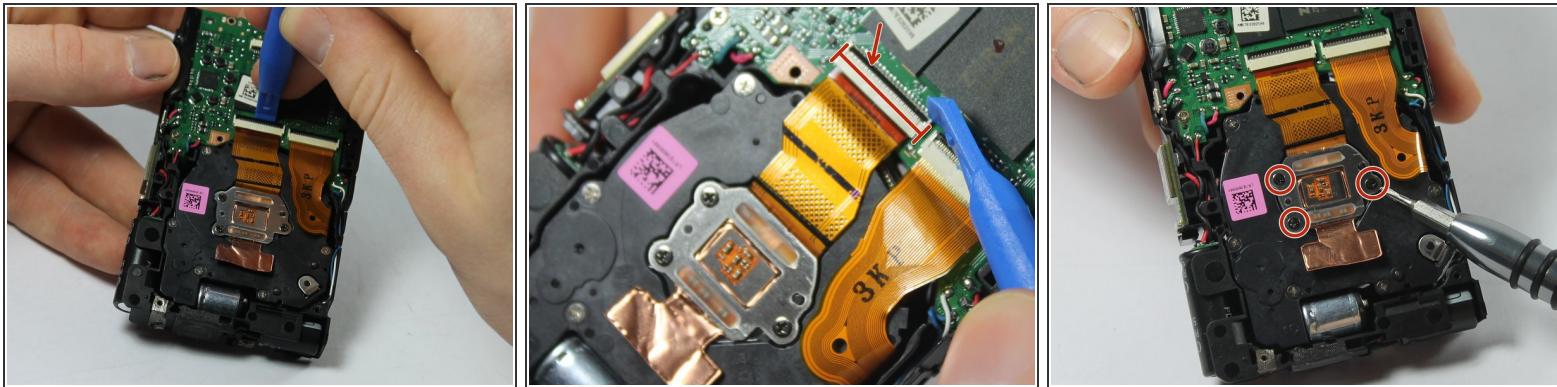

- Use the plastic opening tool or your finger nail to carefully flip up the ribbon cable retaining flap.
- Use the same screwdriver to remove the three 3mm screws that were revealed after removing the metal plate.

## Step 15

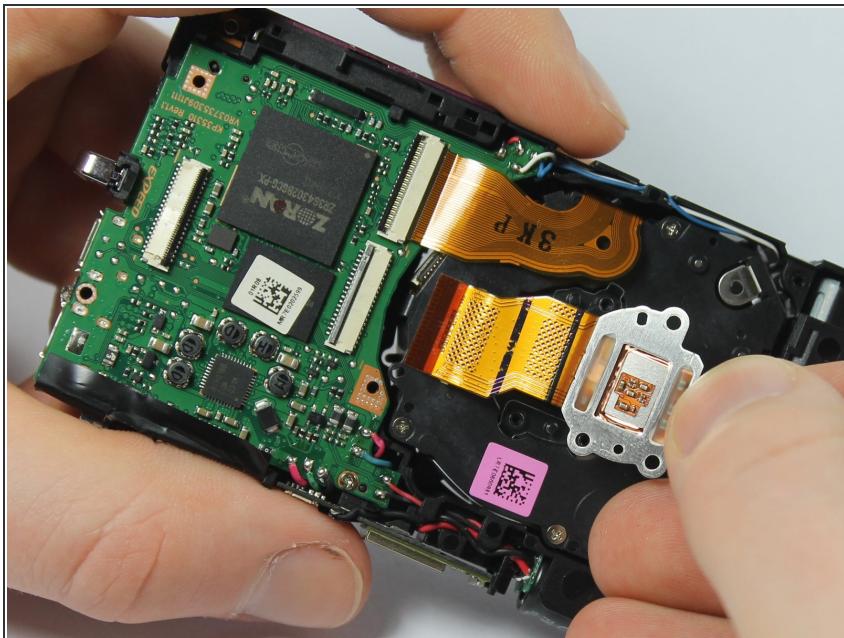

- Gently pull the ribbon cable to remove the image sensor.

To reassemble your device, follow these instructions in reverse order.