




Nikon Coolpix S630 Back Cover Replacement

This guide will show you how to safely take off the back panel of your Nikon Coolpix S630.

Written By: Anna Katrina

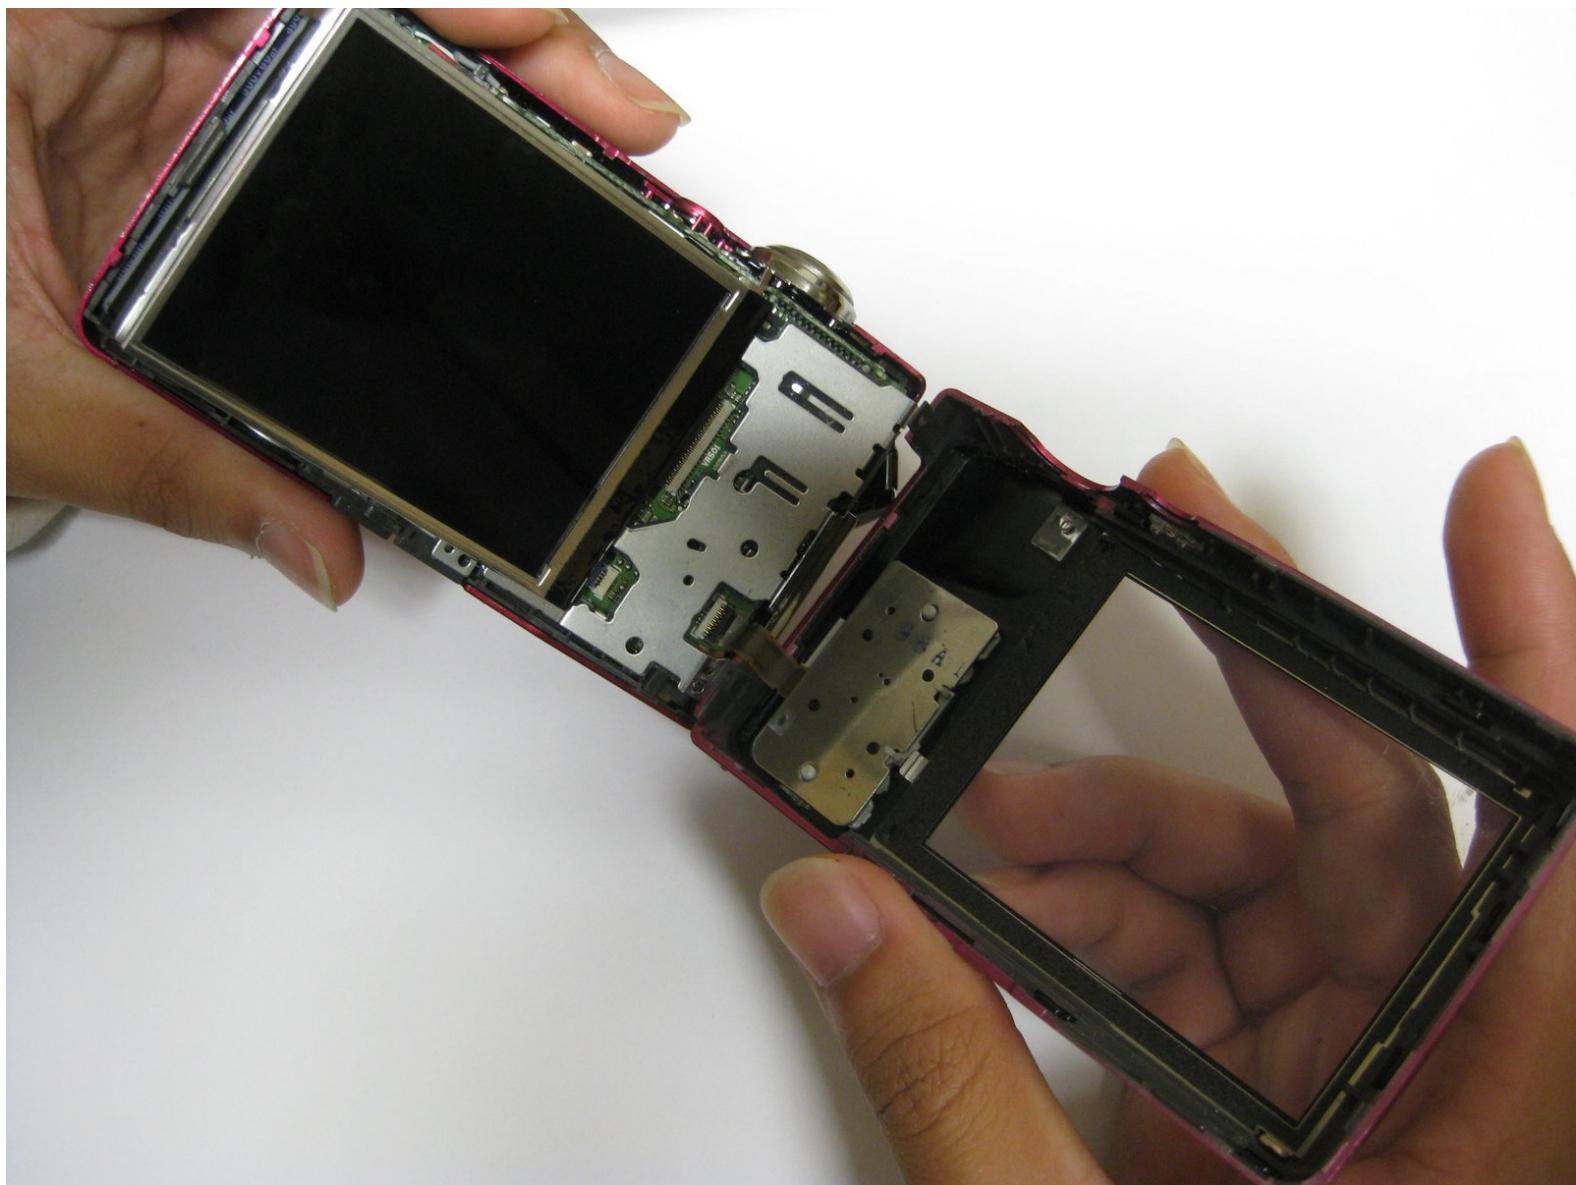

INTRODUCTION

This guide will show you the proper steps to take apart the back metal casing from your Nikon Coolpix S639.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery Compartment



- The battery compartment is located on the bottom of the camera.
- Place your thumb on the battery door.
- Slide the door away from the camera in the direction the arrow points to.

Step 2 — Battery



- Slide the yellow tab towards the back of the camera.
- The battery should pop out.
- Remove the battery.

Step 3 — Memory Card




- Press the memory card down into the camera.
- The memory card should pop out.
- Remove the memory card.

Step 4 — Back Cover Removal



- Unscrew the two 3.5mm Phillips screws from the side with the AV outlet.
- Unscrew the 3.5mm Phillips screw from the opposite side of the camera.
- Unscrew the six 3.5mm Phillips screws from the bottom of the camera.



Step 5

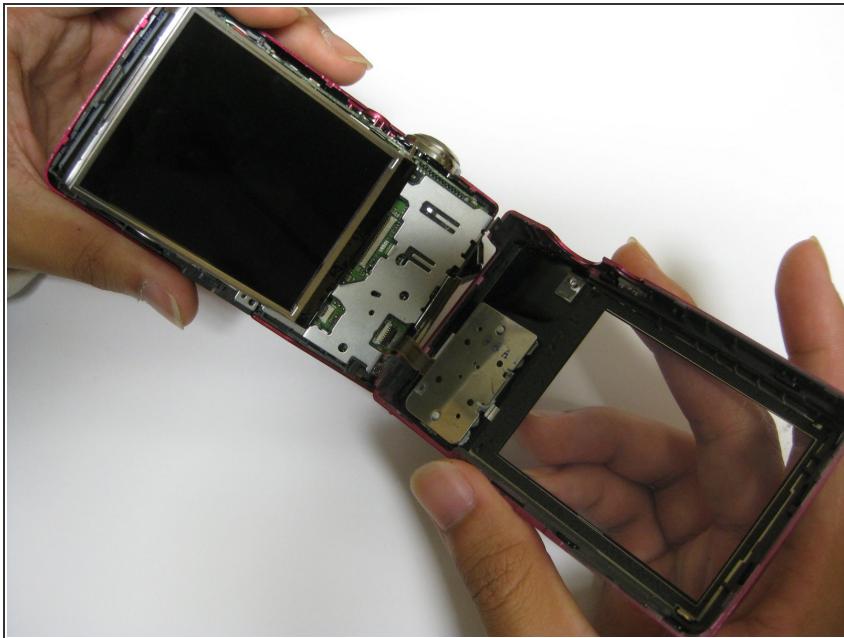

- Carefully remove the back casing from the camera.

⚠ Be mindful when removing the back casing as there is a ribbon that still connects the back casing to the motherboard.

Step 6 — Detaching Ribbon

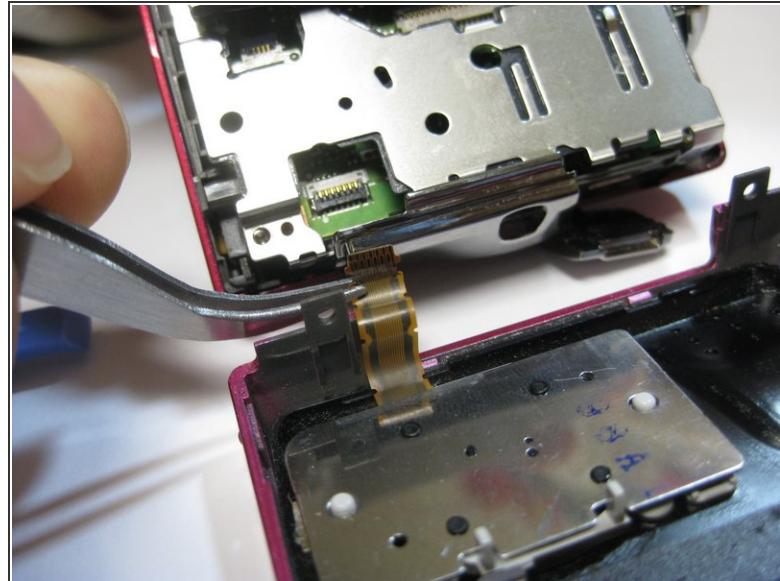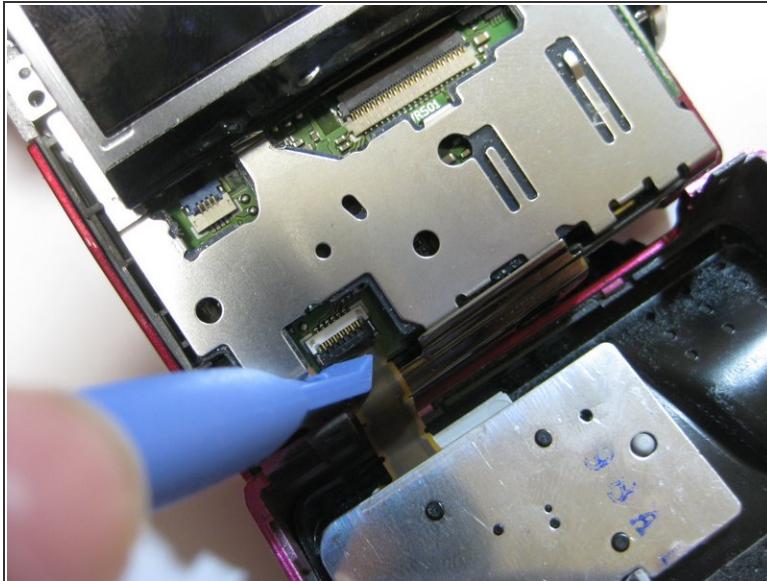

- Place the plastic opening tool underneath the ribbon tab as shown. Gently lift the tab up.
- Gently pull the ribbon from the logic board with tweezers.
- With the ribbon disconnected, the back casing should now be detached from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.