



# Nikon Coolpix S6300 Battery Replacement

The removal of the battery is the first step in the dis-assembly process to get to the other components of the camera. The removal of the battery is also important because it minimized risk of electrical shock.

Written By: Michael Lynch



## INTRODUCTION

This guide shows how to remove the battery.

## Step 1 — Battery



- Place the camera facing upwards.
- Press down on the battery cover and slide towards the front face of the camera.

## Step 2



- Rotate the orange battery clip in the camera to release the battery.

To reassemble your device, follow these instructions in reverse order.