



Nikon Coolpix S6800 Battery Replacement

Replacing the battery in your Nikon Coolpix S6800 camera to allow it to be turned on.

Written By: sam ford



INTRODUCTION

Replacing/ removing the battery is an essential first step when making any repairs to your camera.

Step 1 — Battery



- Open the battery cover by lightly pushing on the cover and sliding it forward

Step 2



- Slide the yellow holding tab toward the back face of the camera

Step 3



- Remove the battery

To reassemble your device, follow these instructions in reverse order.