



Nikon Coolpix S7000 Battery Replacement

Replace your dead battery in order to power on your camera.

Written By: Jonathan Manigo II



INTRODUCTION

If you noticed that your battery life drains quickly, has power issues, and takes a long time to charge then you may need to replace the batteries. This guide is going to teach someone how to remove and replace the batteries for this specific camera.

Note: Battery component missing for this device.



PARTS:

- [Rechargeable Li-ion Battery EN-EL19 \(1\)](#)

Step 1 — Battery



⚠ Ensure that the camera is powered off to prevent damage during battery removal.

- Locate battery compartment on the bottom of the camera, and slide it to the right.

Step 2



- Open compartment, remove old faulty battery by pressing upward on orange tab.
- Orange battery tab

To reassemble your device, follow these instructions in reverse order.