



Nikon Coolpix S800c Selector Button Replacement Guide

This guide will help the user access, remove, and then replace the home, back, and menu selector buttons located next to the touch screen.

Written By: Erik Knapton



This document was generated on 2019-11-07 04:37:58 PM (MST).

INTRODUCTION

The user will learn how to replace the selector button set including the menu, home, and back buttons on the Nikon Coolpix S800c. This replacement may be necessary due to damage on the unit.


TOOLS:

- [iFixit Opening Tools](#) (1)
- [iFixit Pro Tech Toolkit](#) (1)
- [Phillips #00 Screwdriver](#) (1)

PARTS:


- [Nikon Coolpix S800c Back Panel/Screen](#) (1)

Step 1 — Back Panel/Touch Screen

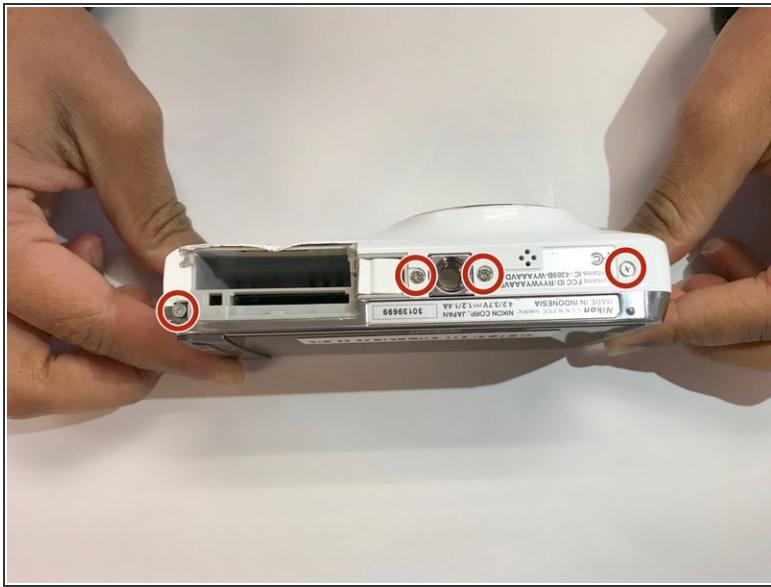

- Remove all 4 screws from the bottom face of the camera using a Phillips #00 head screwdriver (found in iFixit tool kit).

Step 2

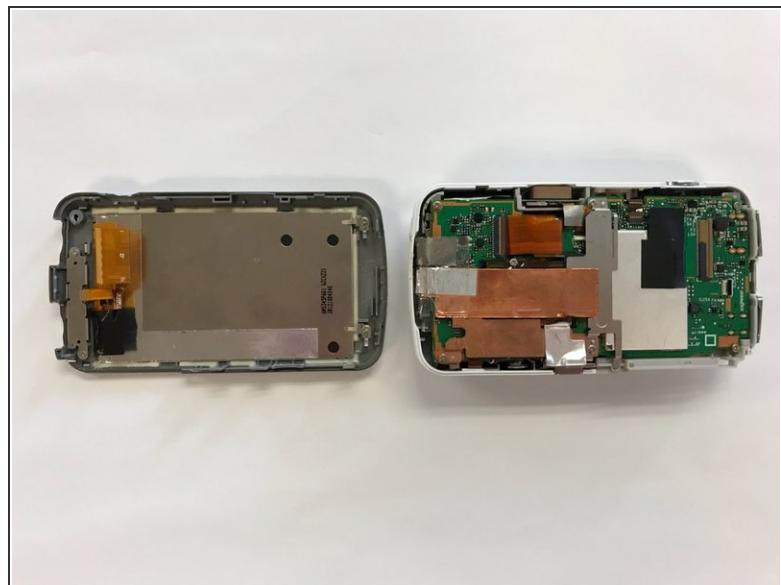


- Using a plastic tool, pry open the back panel of the camera. Be careful not to apply too much force and damage the camera.

Step 3 — Selector Buttons



- Isolate the back panel/touch screen section.
- Using a Phillips #00 head screwdriver (found in iFixit tool kit), remove the 2 screws that secure the metal plate protecting the selector buttons.
- Pry the small metal plate up with a plastic tool of your choice.

Step 4

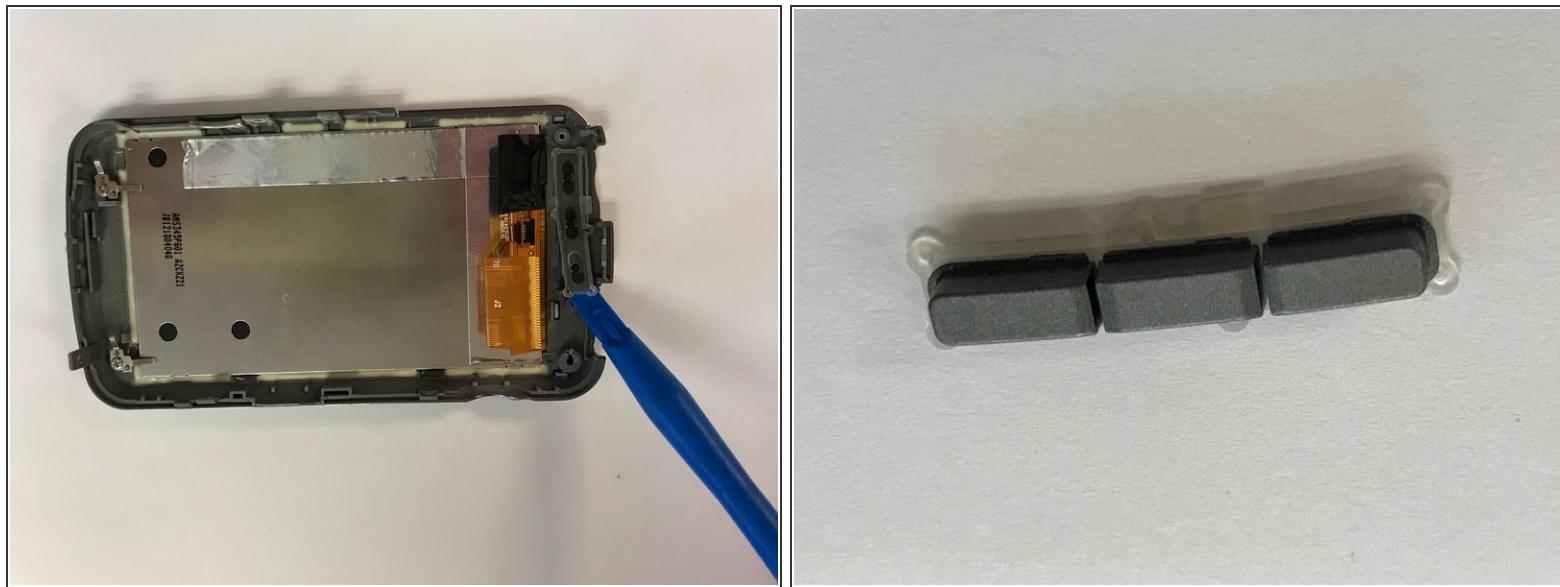

- Remove the selector button chain by prying it up with plastic tool of your choice.

To reassemble your device, follow these instructions in reverse order.