



Nikon Coolpix S8200 Battery Replacement

This guide will lead you through the steps necessary to locate and replace the battery.

Written By: Ashley Wilbur



Step 1 — Battery



- To locate the battery terminal, look at the bottom of the camera. Once you slide the slider button, and the door to the terminal should flip open.

Step 2



- Slide/push the orange button in the direction of the arrow, releasing the battery. This should allow the battery to pop out enough for you to grab it and successfully remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 07:06:28 AM (MST).

