




# Nikon D3100 Speaker Replacement

Replacing the speaker for the Nikon D3100 camera.

Written By: Jet Mejia

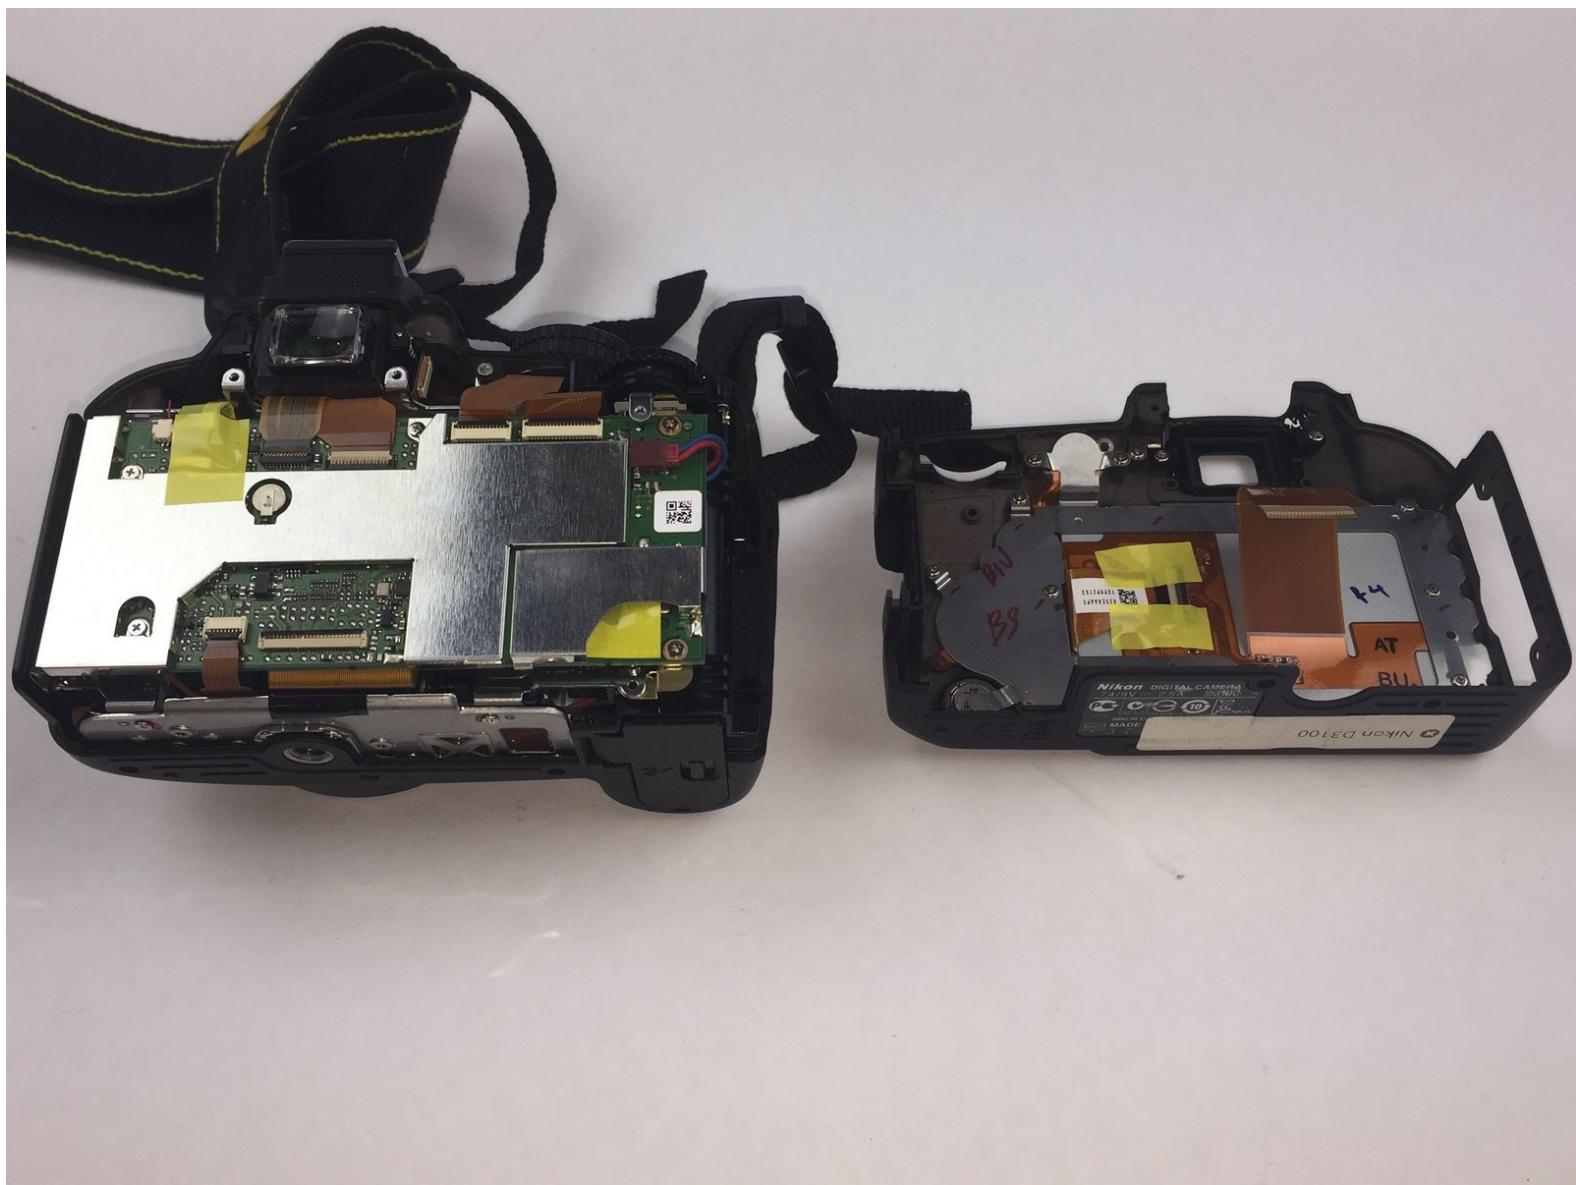



## INTRODUCTION

If your camera audio sounds scratchy or muffled you may need to replace the speaker. But first take a look at this [troubleshooting guide](#) before taking the camera apart.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Metal Spudger](#) (1)
- [Spudger](#) (1)

## Step 1 — Speaker

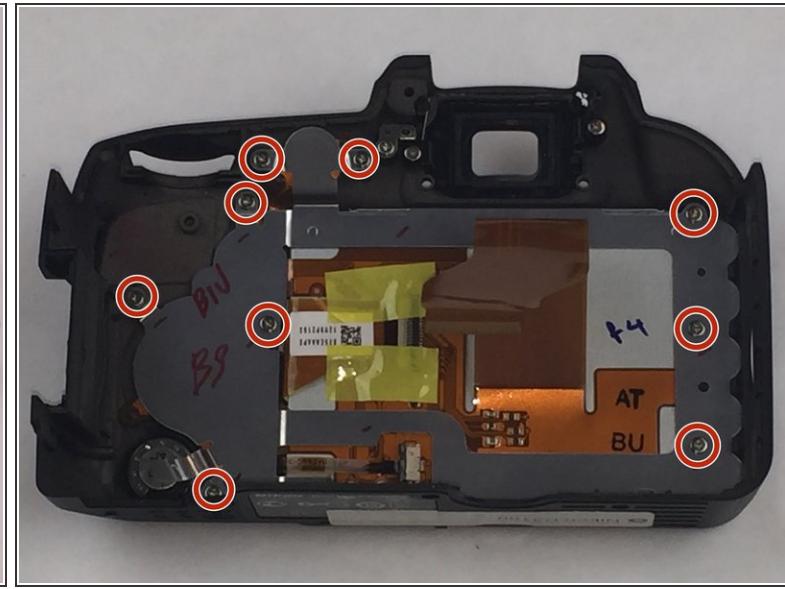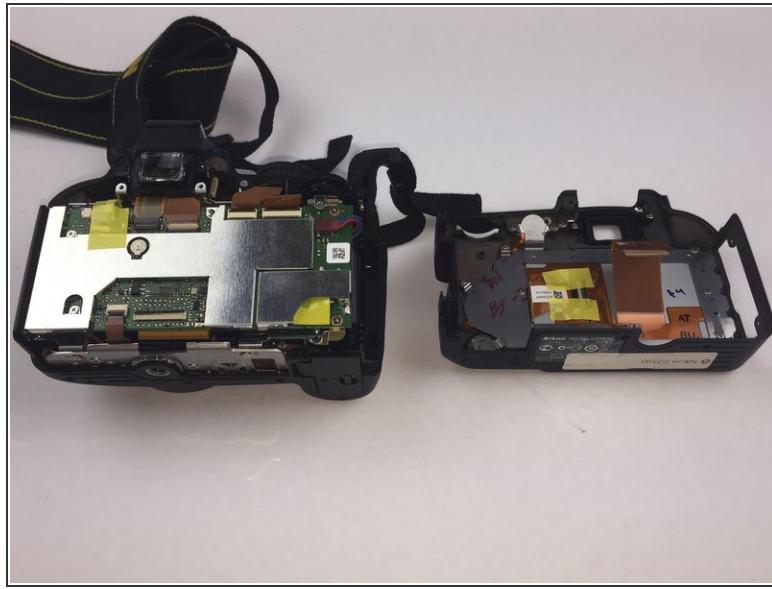


- Begin by following steps 1-6 in the [LCD Screen Replacement Guide](#).

## Step 2

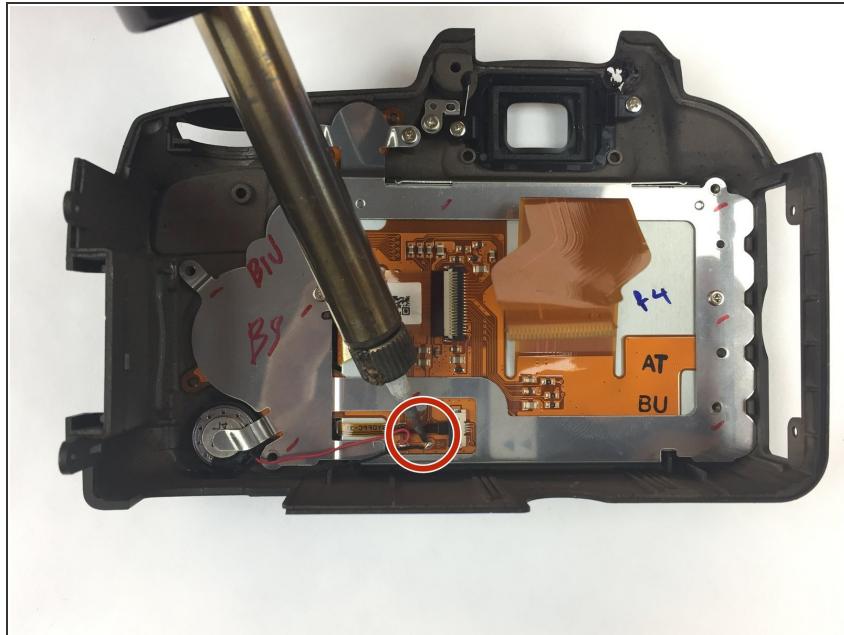

- Using the solder tool, melt the existing solder until the two connections become unattached.

## Step 3

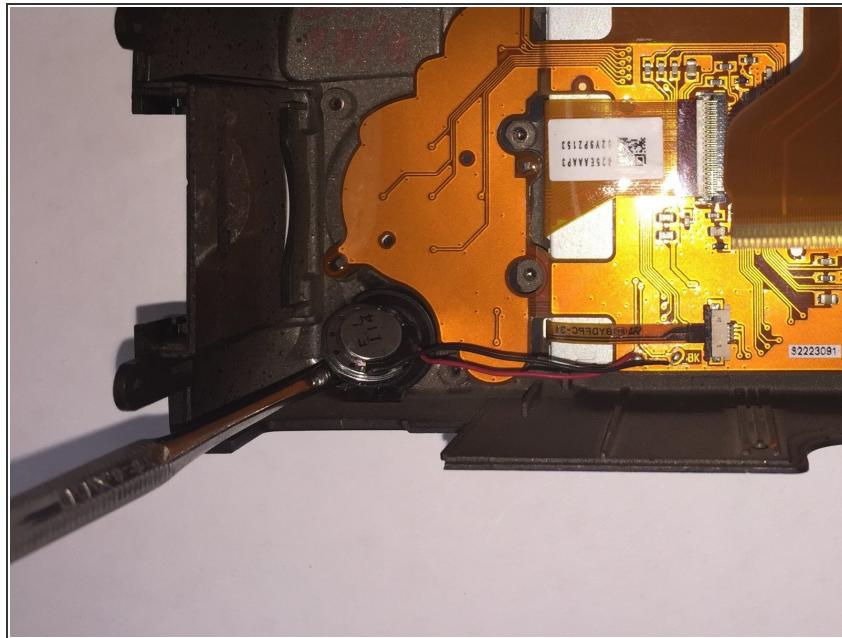

- Carefully lift the speaker from its nook on the bottom left portion of the back panel.

To reassemble your device, follow these instructions in reverse order.