



Nikon D3200 Memory Card Replacement

This guide will show the user how to replace the memory card for the Nikon D3200.

Written By: Irene Huang



INTRODUCTION

Confirm with your [user's manual](#) for appropriate memory cards.

Step 1 — Memory Card



- Locate the memory card compartment on the right side of the LCD screen.

Step 2



- Gently press and slide the grooved compartment door to the left.
- Let go of the compartment door and it will swing open.
- Insert the memory card imitating the diagram pictured outside the compartment door.

 Make sure to push down once the memory card is inserted to lock it in place.

To reassemble your device, follow these instructions in reverse order.