




# Nikon D40 Back Cover Replacement

Remove the rear plastic case for access to various components.

Written By: Gerik Kubiak

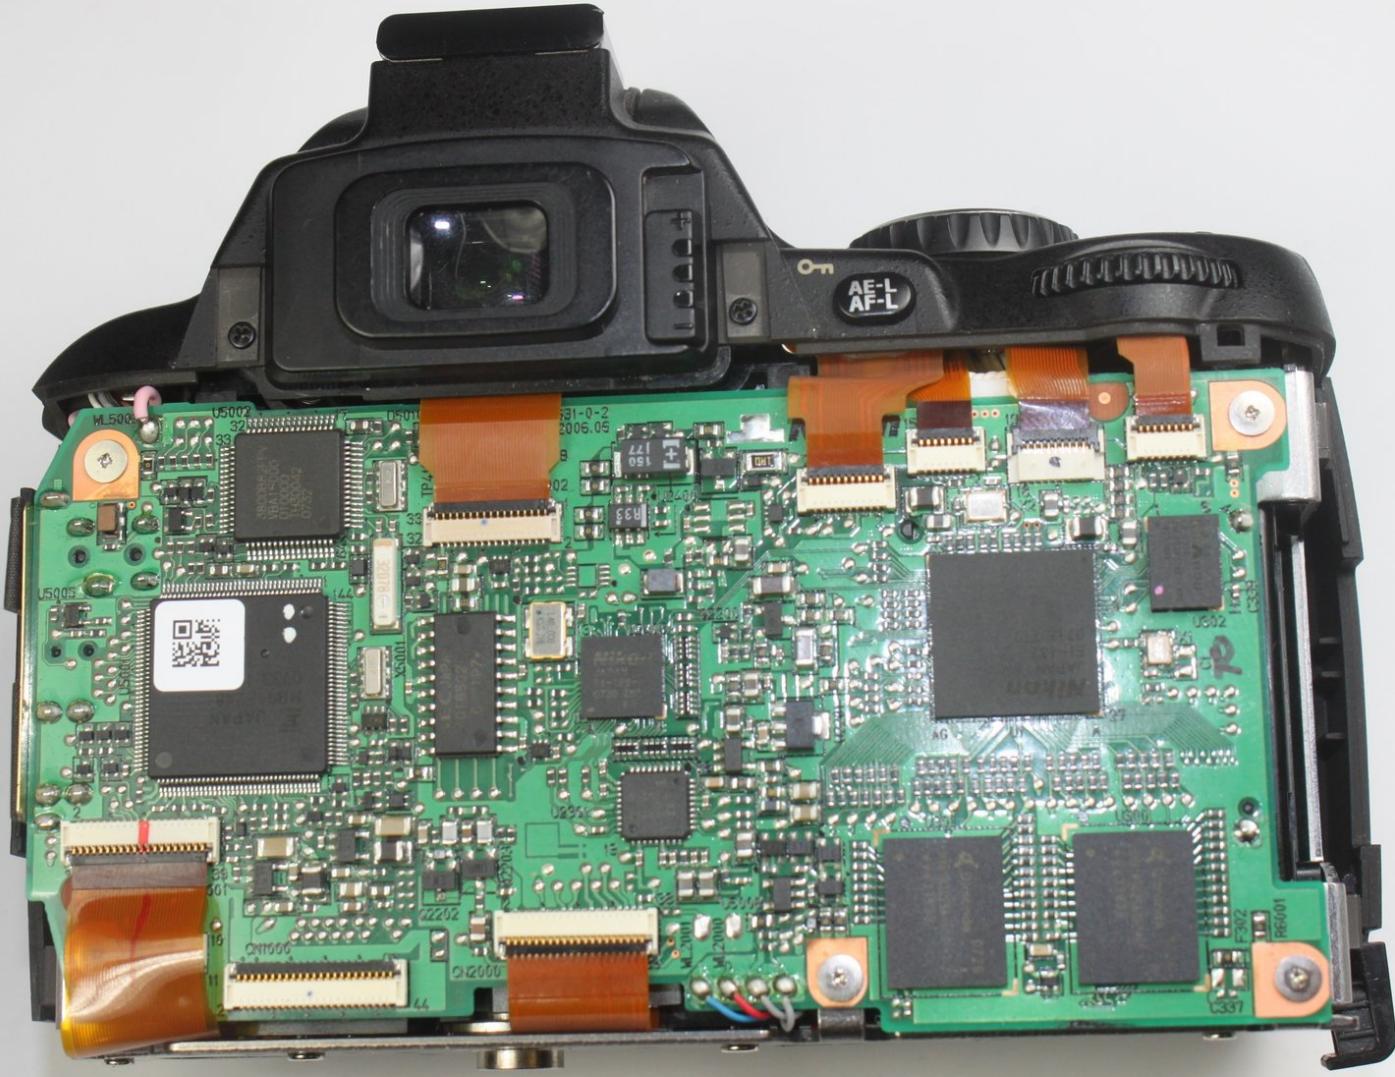

## INTRODUCTION

This guide will demonstrate the proper procedure to remove the back panel without damaging the internals of the camera so that you can access a variety of the components hidden behind it.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Back Cover



- Remove the two visible 6.0 mm Philips #0 screws on the left and right sides of the viewfinder. These screws are highlighted in red.

## Step 2



- Remove the four 6.0 mm Philips #0 screws on the left and right sides of the camera.

## Step 3



- Remove the four highlighted 3.0 mm Philips #0 screws on the bottom of the camera.

## Step 4



- While pulling the bottom down, remove the back of the camera.
- ⚠** Be careful not to pull too hard on the back as it is connected via a ribbon cable. Be sure to disconnect this cable on the main board.
- i** To disconnect the ribbon cable pull the small black tab upward and pull gently on the cable.

To reassemble your device, follow these instructions in reverse order.