


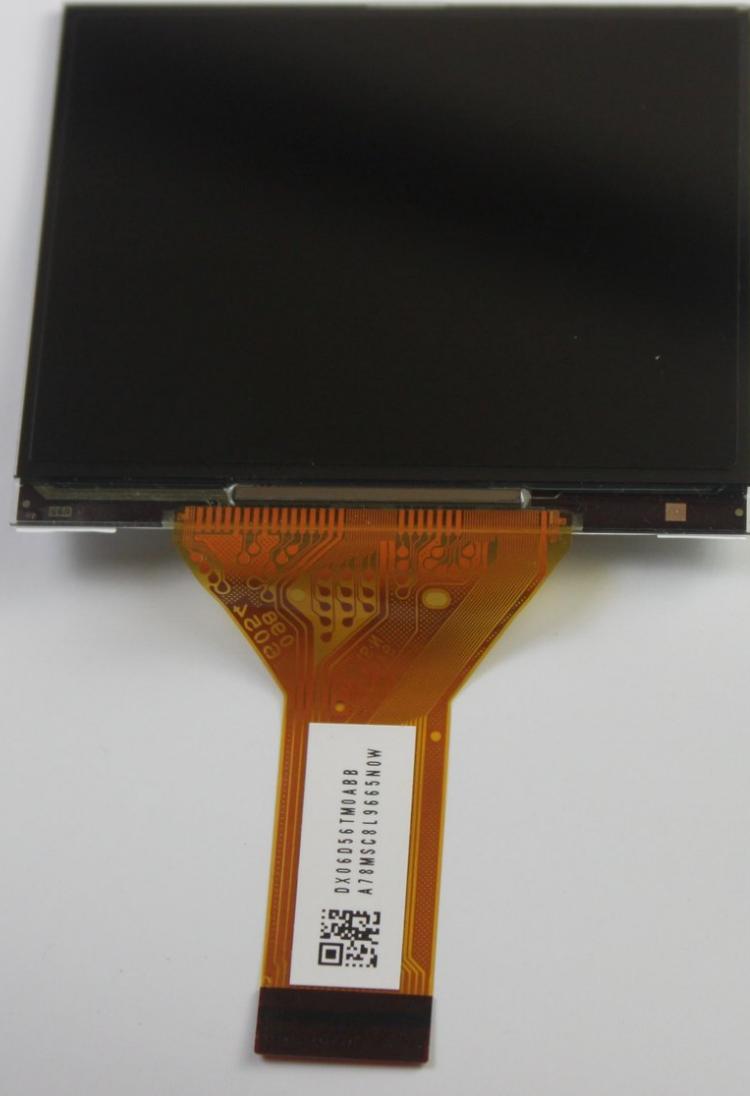

# Nikon D40 LCD Screen Replacement

In this guide we will replace a broken LCD screen on the rear of the camera

Written By: Gerik Kubiak



## INTRODUCTION

LCD screens are known to shatter when dropped. In this guide you will replace the LCD screen that is on the inside of the camera.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Back Cover



- Remove the two visible 6.0 mm Philips #0 screws on the left and right sides of the viewfinder. These screws are highlighted in red.

## Step 2



- Remove the four 6.0 mm Philips #0 screws on the left and right sides of the camera.

## Step 3



- Remove the four highlighted 3.0 mm Philips #0 screws on the bottom of the camera.

## Step 4



- While pulling the bottom down, remove the back of the camera.
- ⚠** Be careful not to pull too hard on the back as it is connected via a ribbon cable. Be sure to disconnect this cable on the main board.
- ℹ** To disconnect the ribbon cable pull the small black tab upward and pull gently on the cable.

## Step 5 — LCD Screen




- Remove the six 3.0 mm Philips #0 screws on the inside of the back panel which contains the LCD screen.

## Step 6




- Detach the ribbon cables on the LCD casing.

## Step 7

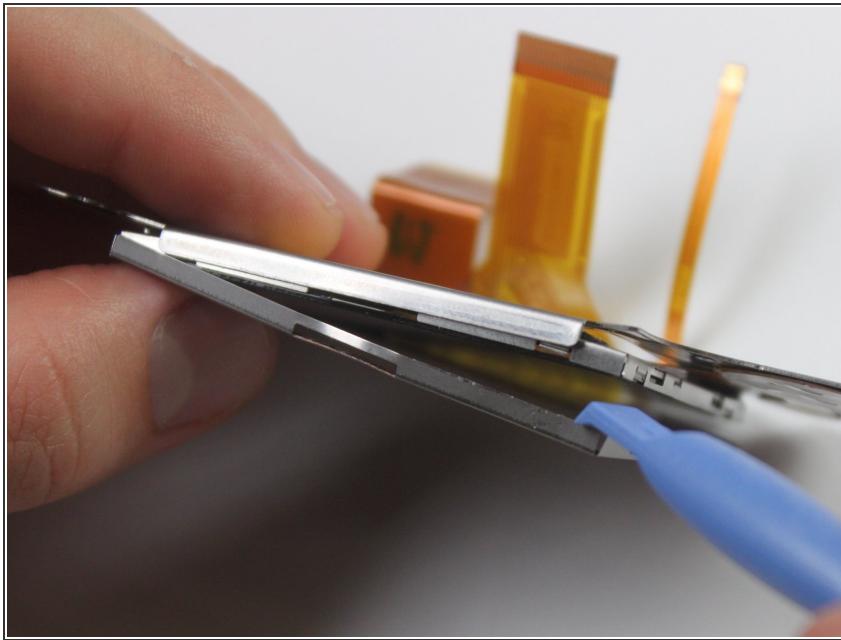

- Remove the metal casing containing the LCD screen using the plastic opening tool.
- *(i)* Be sure to look at the picture to make sure you are removing the correct piece of metal. There should be no glue holding the correct piece to the frame.

## Step 8

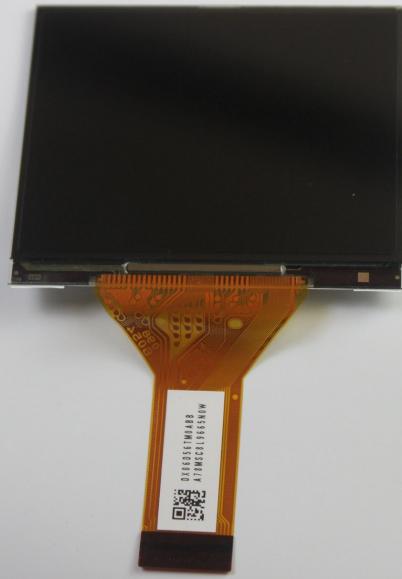

- You should now be able to remove the LCD screen. Replace it with a new screen.

To reassemble your device, follow these instructions in reverse order.