



Nikon D5100 Memory Card Replacement

Guide to replace the D5100's SD card.

Written By: Liz



INTRODUCTION


Your camera stores images and data on an SD memory card. This guide will teach you how to locate and replace this memory card.

Step 1 — Memory Card




- Open the memory card compartment door, located to the right of the digital display, by using your thumb to push it in the direction of the arrow.

Step 2

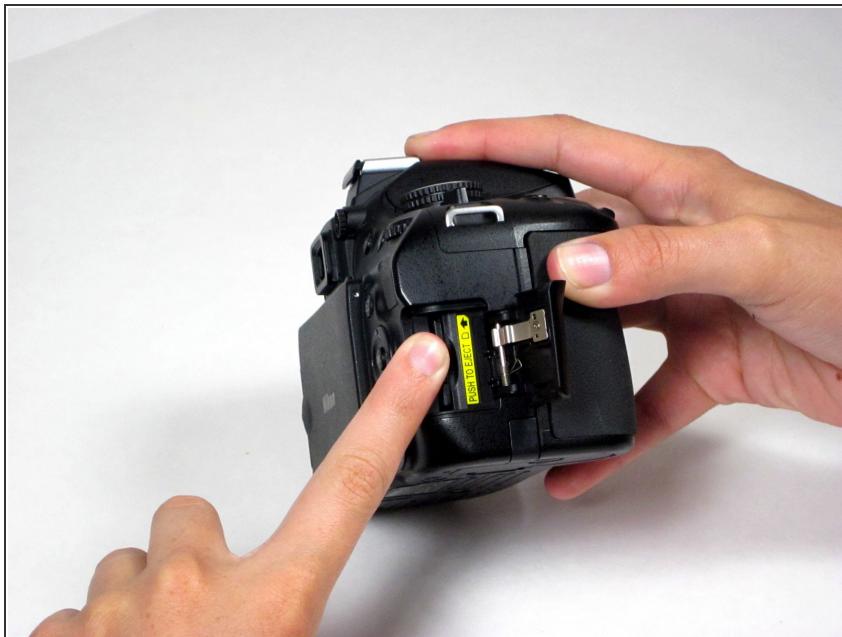

- Eject the memory card by pressing it into its slot until you hear a soft "click."

Step 3

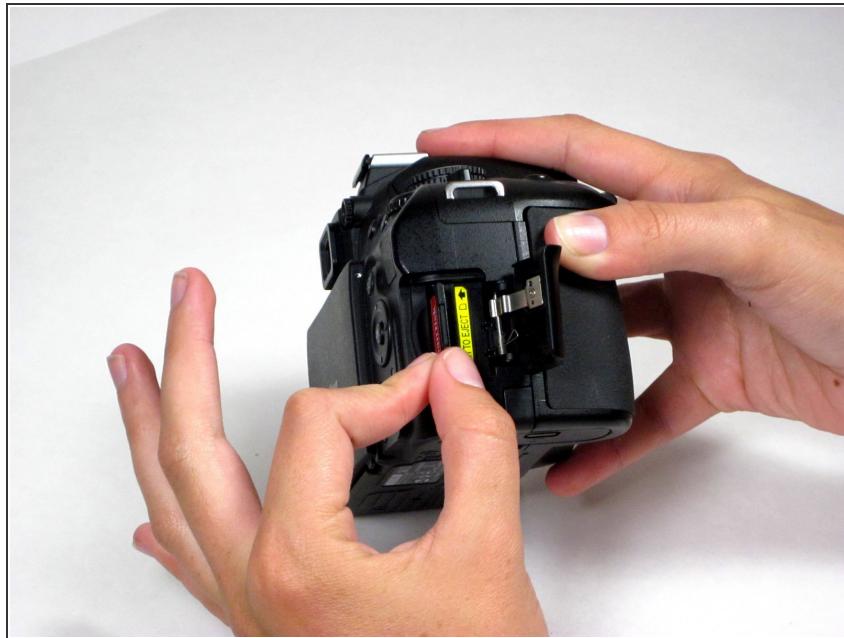

- Using thumb and forefinger, gently remove the SD card from its slot.

To reassemble your device, follow these instructions in reverse order.