



Nikon D70 Front Cover Replacement

Written By: Andrew Bookholt



INTRODUCTION

This is an internal prerequisite that should remain unpublished.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Front Cover



- Use a plastic opening tool to carefully pry up the flash unit at the point shown in the picture.

Step 2




- Remove the two 4.3 mm Phillips screws securing the top edge of the front cover to the top cover.

Step 3




- Remove the two 4.3 mm Phillips screws on the face of the front cover.

Step 4

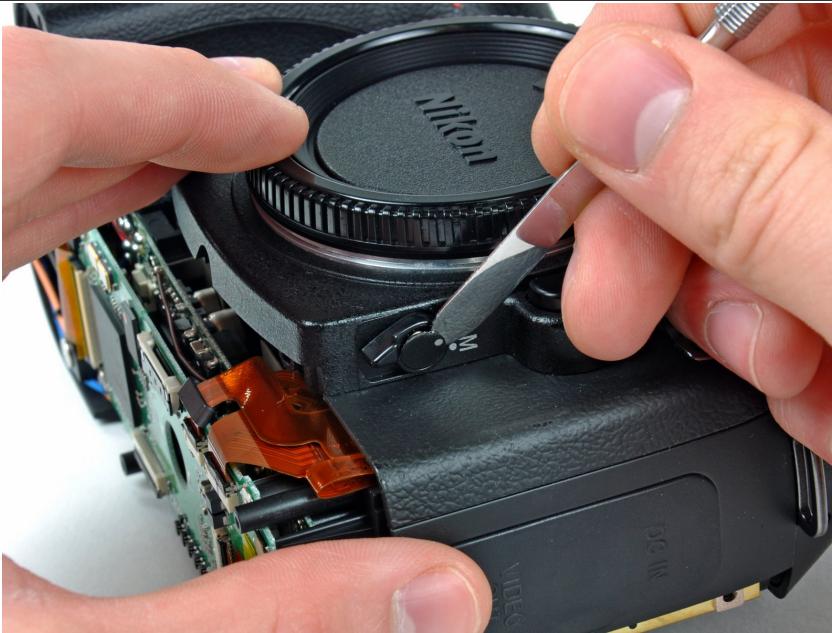

- Use the sharp end of a metal spudger or a razor blade to peel the sticker out of the center of the automatic/manual focus switch.

Step 5

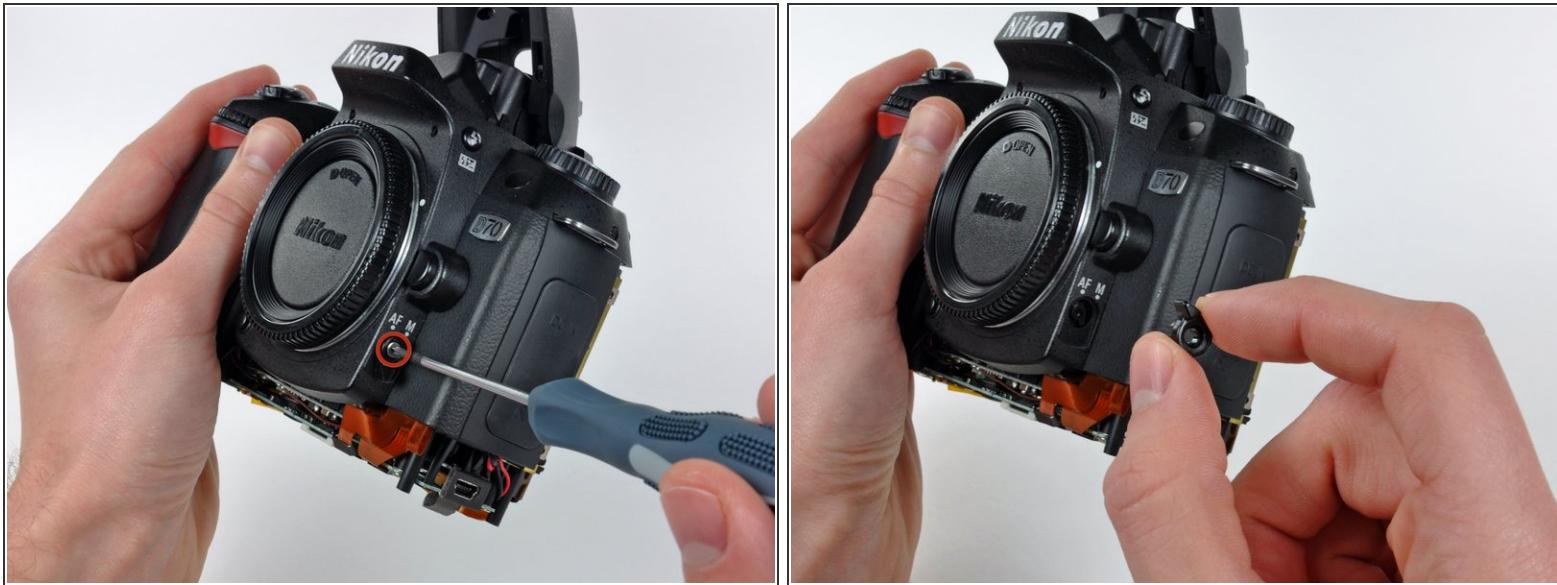

- Remove the 6.3 mm shouldered Phillips screw from the center of the automatic/manual focus switch.
- Pull the automatic/manual focus switch away from the front cover.

Step 6



i If present, remove the plastic cover from the lens mount.

Step 7



- Pull the front cover away from the D70.