



Nikon D80 Bottom Cover Replacement

This guide details how to remove the bottom cover of the Nikon D80.

Written By: Sara Martin



INTRODUCTION

In the event that the bottom cover is damaged or specific wires require access, the bottom cover needs to be removed or replaced. For safety purposes, please remove the battery before working with any electronic components.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Bottom Cover



- Use the #00 Phillips-head screwdriver to remove the three 8.44 mm screws.
- Use the #00 Phillips-head screwdriver to remove the four 6.3 mm screws.
- Use the #00 Phillips-head screwdriver to remove the 2.9 mm screw.

Step 2

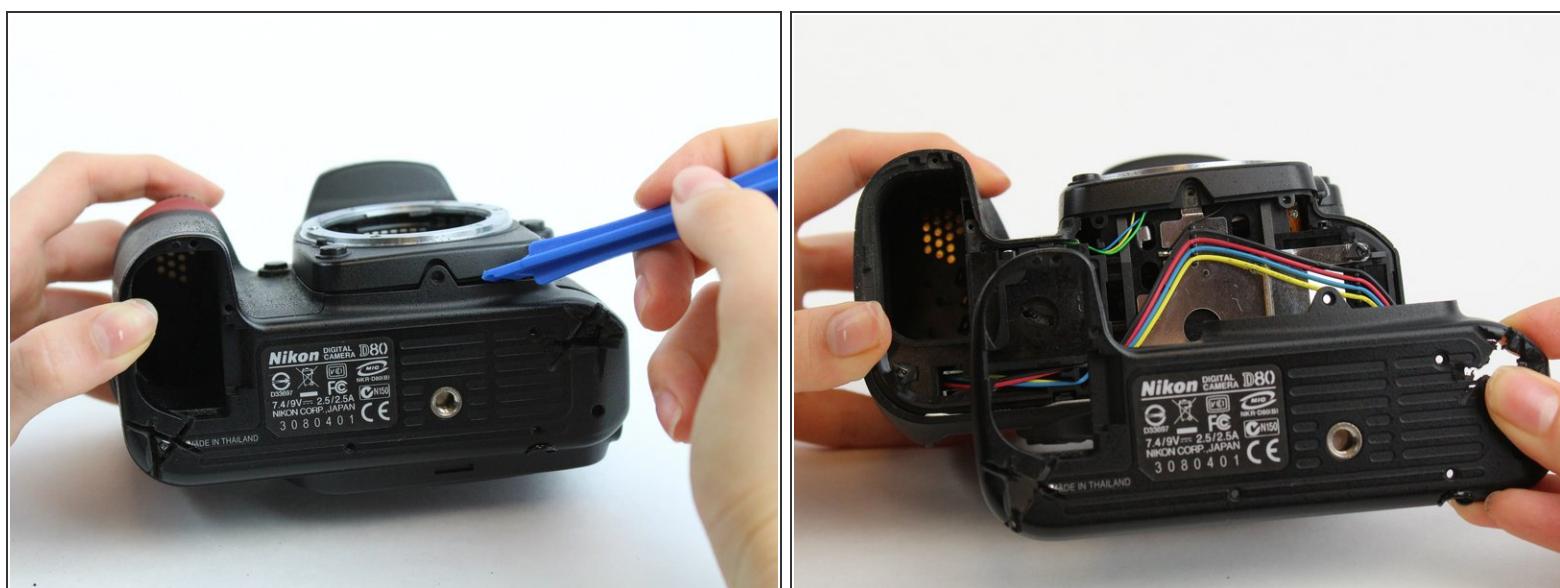

- Use the plastic opening tool to remove the bottom cover.

This document was generated on 2019-10-10 03:51:19 PM (MST).

To reassemble your device, follow these instructions in reverse order.