



# Nikon D90 Top Flash Casing Replacement

Prerequisite Only

Written By: Matthew Grotta



# INTRODUCTION

Prerequisite Only

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Open the Flash



- Use a plastic opening tool to lift up the flash.

## Step 2 — Flash Casing Screws



- Using a PH00 screwdriver, remove the two 5.3 mm Phillips screws from the flash casing.

 Be careful not to strip the screw heads.

## Step 3 — Removing the Top Flash Casing



- Use a plastic opening tool and carefully pry open the top casing of the flash.
- Then, lift off the top casing of the flash.

To reassemble your device, follow these instructions in reverse order.