




# Ninja Coffee Bar® Single-Serve System Valve Tubes Replacement

Changing the tubes when the device is leaking water from the bottom of the device.

Written By: Naser Aldousari

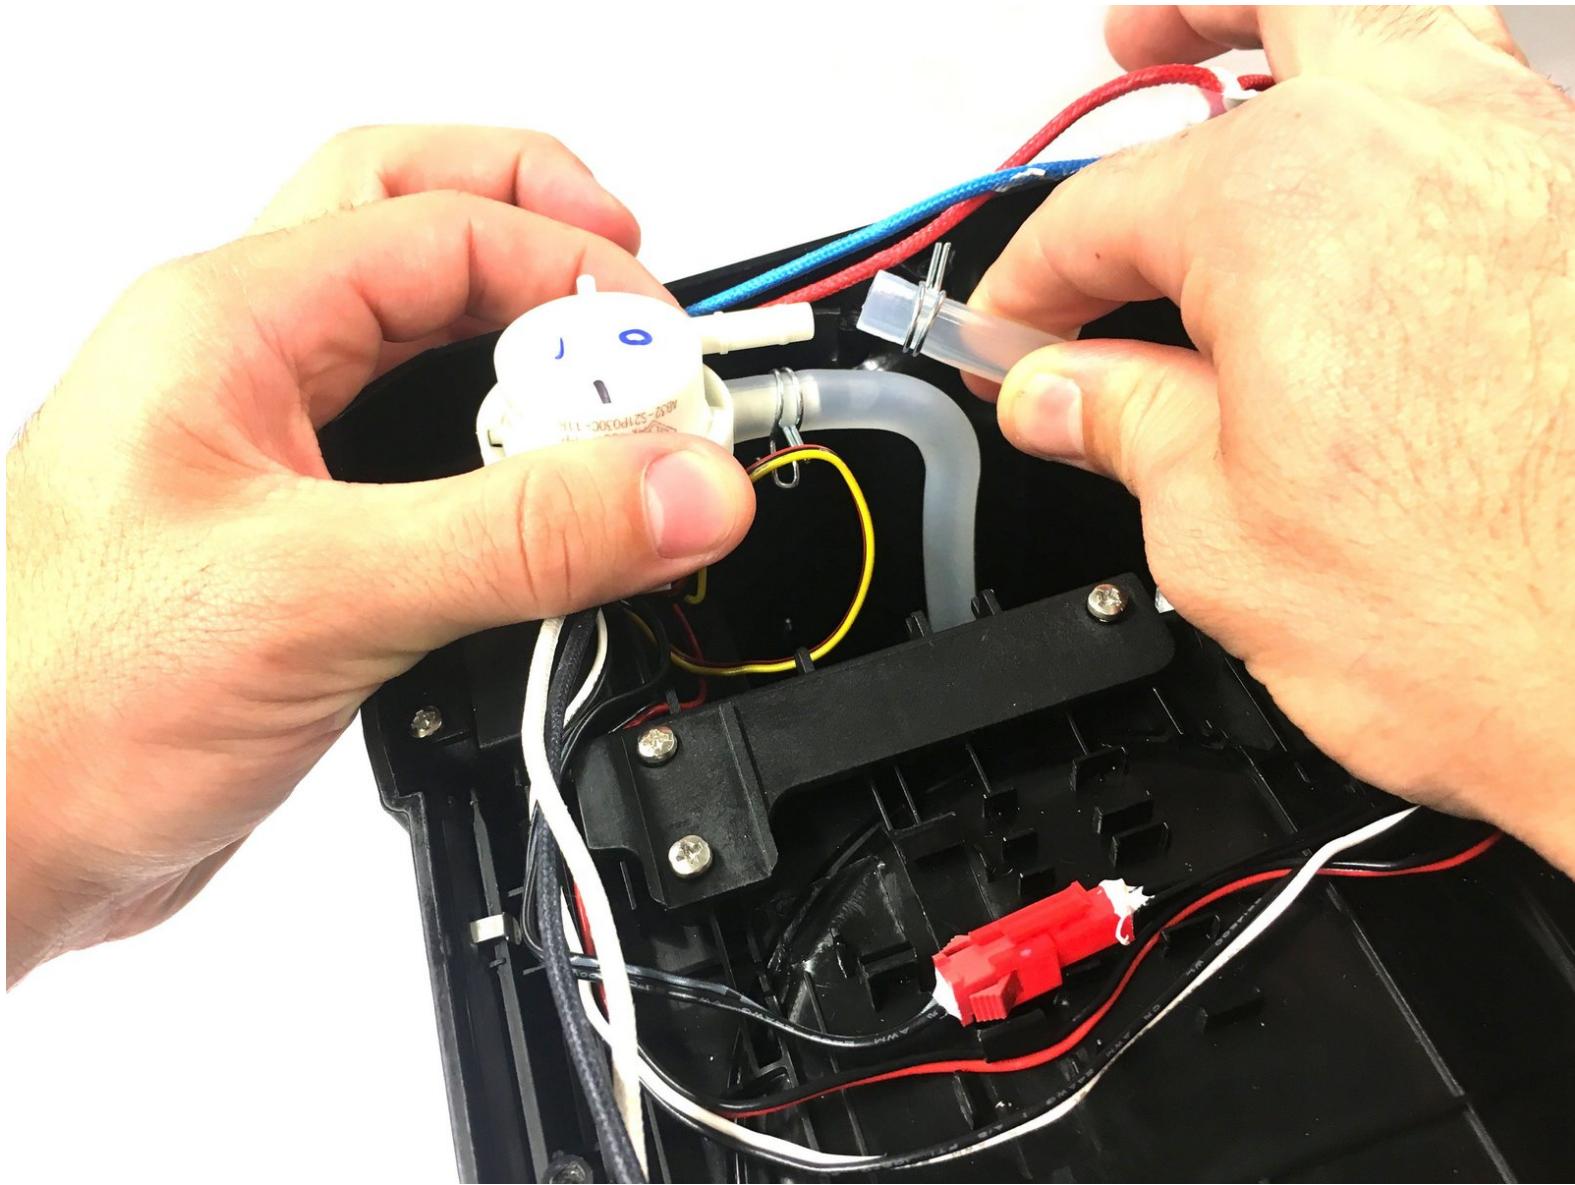

## INTRODUCTION

Changing the tubes when the device is leaking water from the bottom will require some time but can fix a few problems. Make sure the device is in a secure open area where you will not lose any screws because they are very small. You will definitely want the magnetic pad provided in the iFixit tool kit. Warning: be careful when you take off the protective plate because there are a lot of wires that can not be disconnected.

### TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Valve Tubes




- Unscrew (8) 6mm screws using Phillips head #1 screwdriver
- Remove bottom cover

## Step 2

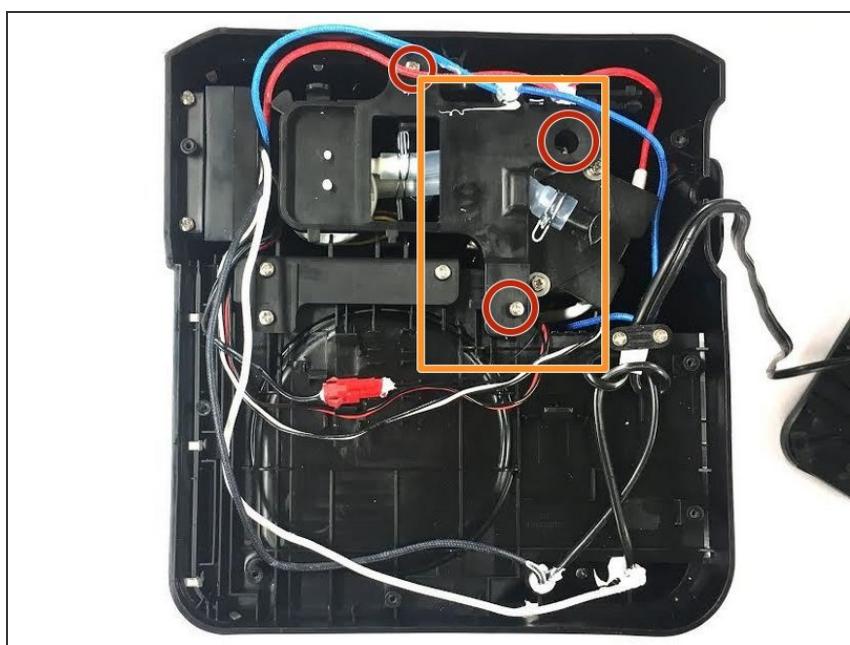


- Unscrew (3) 6mm screws with Phillips head #1 screwdriver
- Remove tube protection plate

## Step 3

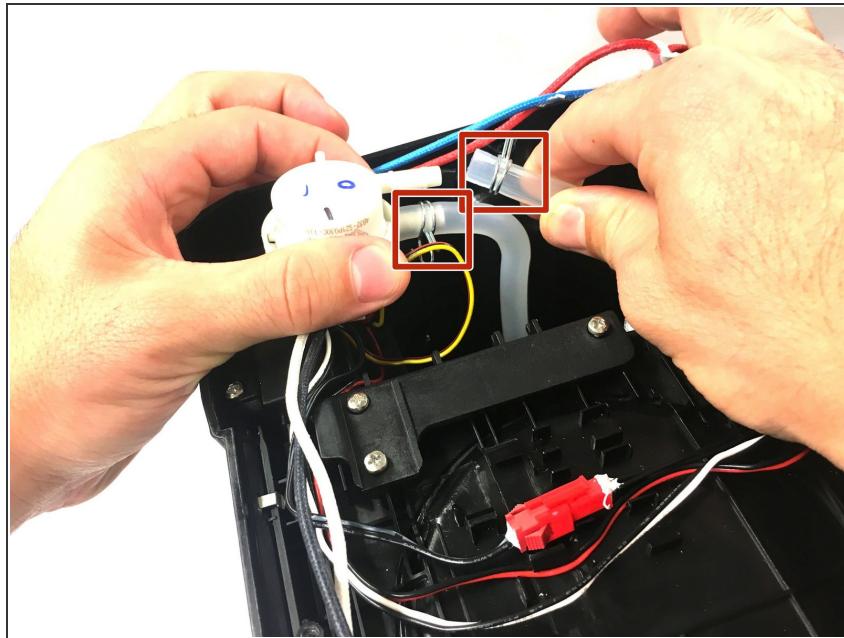

- Detach valve tubes from valve by squeezing pins and pull tubes away from valve

## Step 4

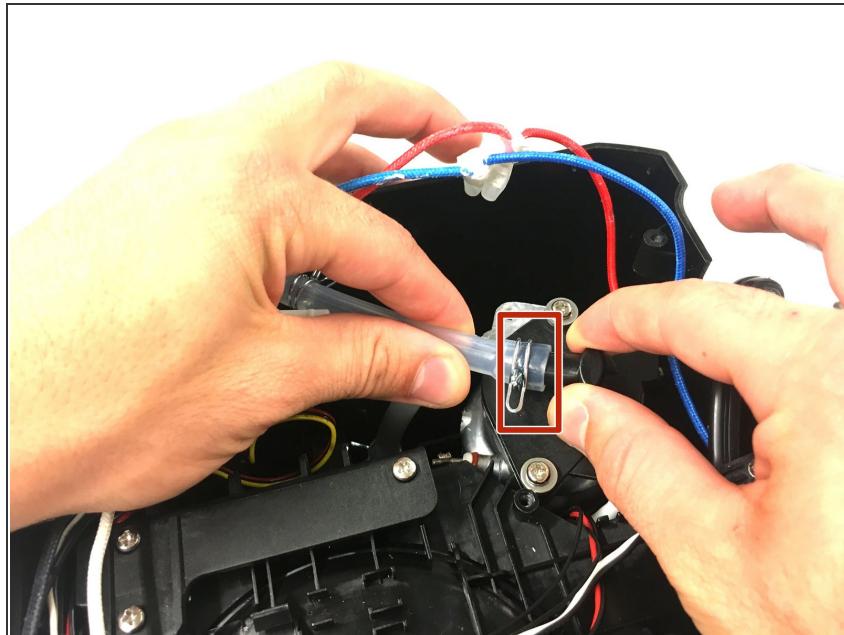

- Detach valve tubes from device by pinching pins and sliding the tubes off

To reassemble your device, follow these instructions in reverse order.