



Ninja Kitchen System Pulse Power Cord Replacement

This guide will show how to replace the power cord.

Written By: Cameron Just



INTRODUCTION

This guide will show how to replace the power cord.



TOOLS:


- [T10 Torx Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Base Disassembly



- Take out the three 15 mm Phillips #1 screws.
- Remove the 15mm T10 screw.
- ☑ Place the 4 screws on the magnetic mat.

Step 2

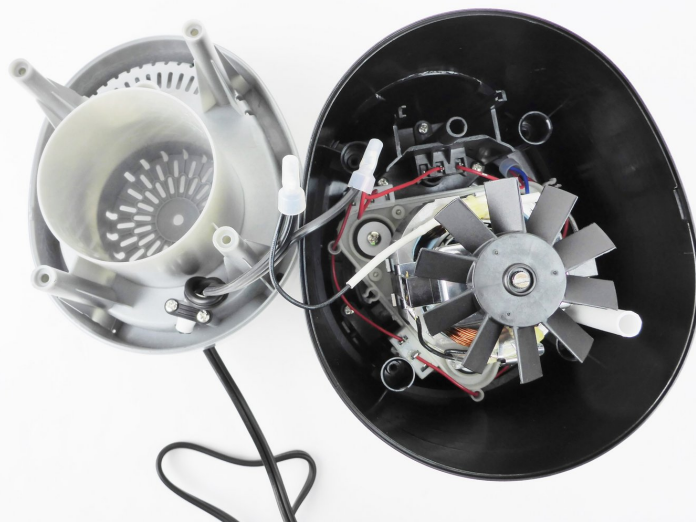

- Remove the gray base by lifting upwards and placing to the side.

Step 3 — Power Cord



- Remove plastic coverings and aluminum wrap to unattach the power cord.

To reassemble your device, follow these instructions in reverse order.