



Nintendo 3DS Upper LCD Replacement

Nintendo 3DS upper LCD prerequisite guide.

Written By: David Hodson



INTRODUCTION

This is a prerequisite for removing the Wi-Fi antenna.

Step 1 — Upper LCD



- Use your thumbs to push the upper LCD from the front out of the upper display bezel.
- Remove the upper LCD.

To reassemble your device, follow these instructions in reverse order.