


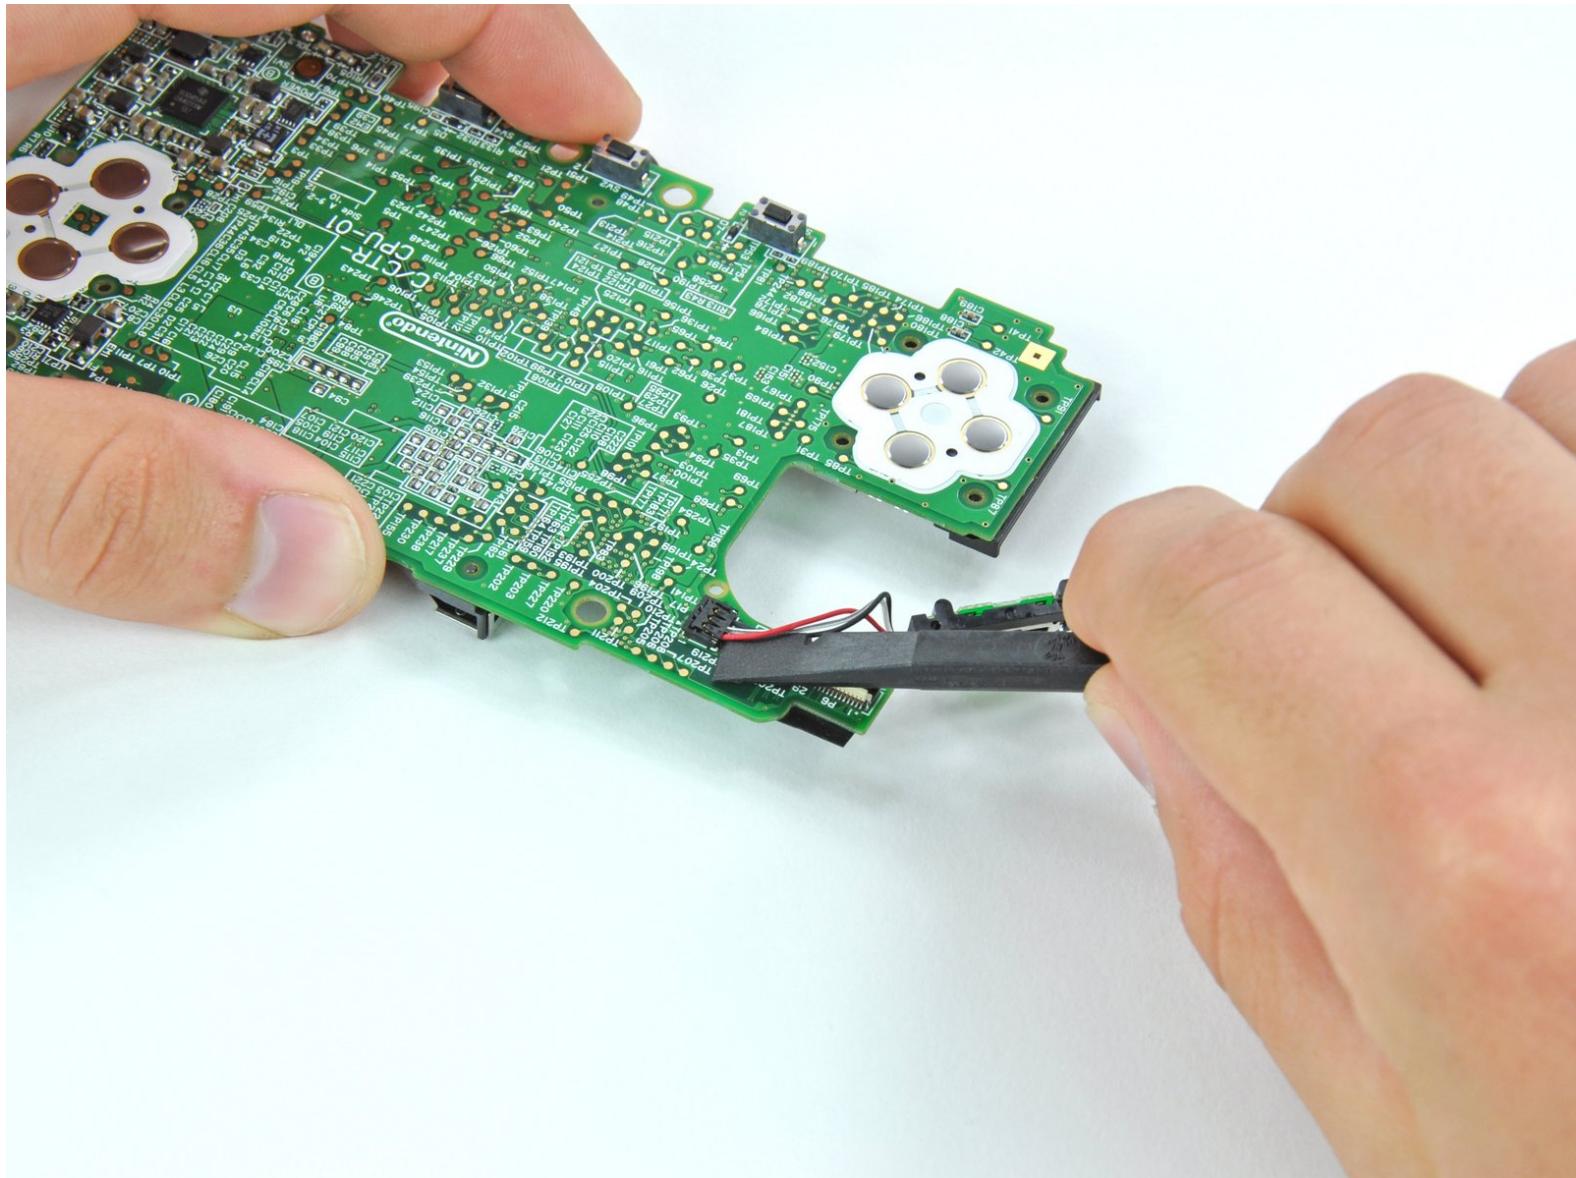

Nintendo 3DS Volume Switch Replacement

Nintendo 3DS volume switch prerequisite

Written By: David Hodson





INTRODUCTION

This guide is a prerequisite to removing the motherboard.

TOOLS:

- [Spudger \(1\)](#)


Step 1 — Volume Switch

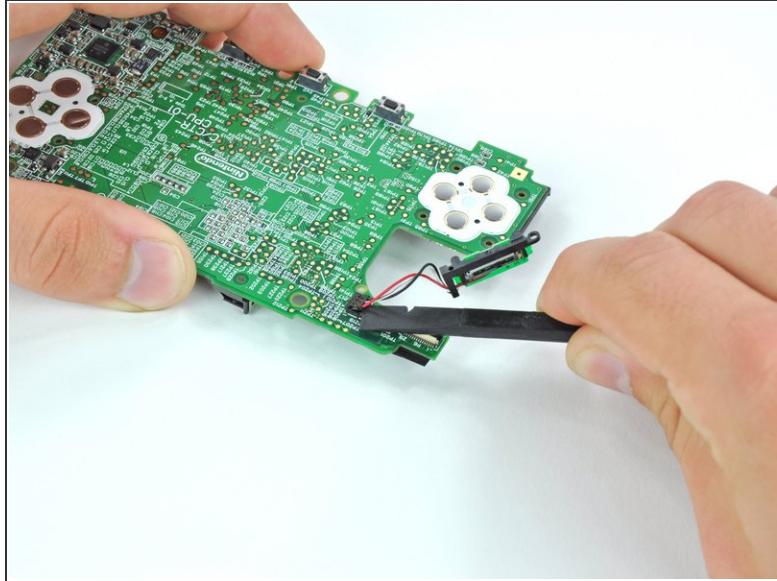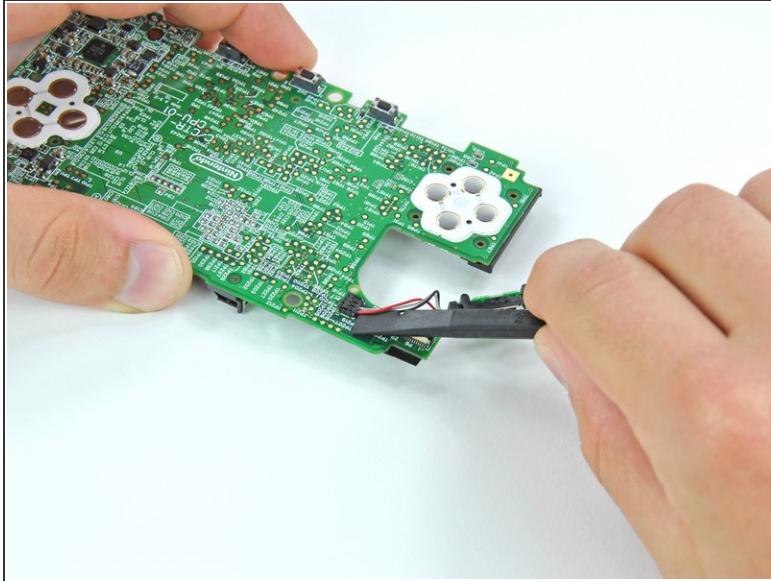

(i) Turn the motherboard over.

- Use the flat end of a spudger to pry the volume switch connector out of its socket on the motherboard.

Step 2

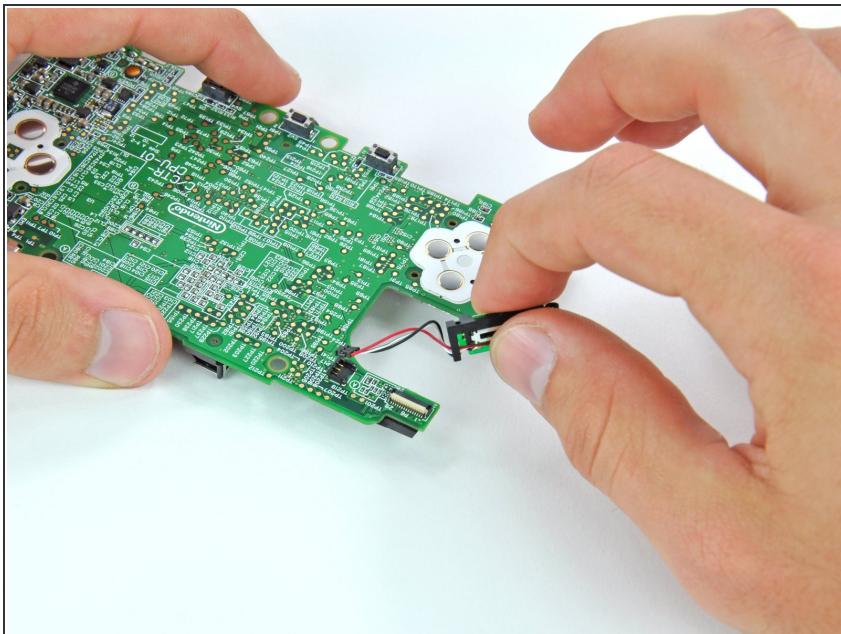

- Remove the volume switch from the motherboard.

To reassemble your device, follow these instructions in reverse order.