



Nintendo 3DS XL 2015 Battery Replacement

Remove and replace the battery on your Nintendo 3DS XL.

Written By: Kobbe Farwick



INTRODUCTION

Removing the battery is essential to the removal of other components on the Nintendo 3DS XL. Please remember to have the device powered off when following this guide.

TOOLS:

- [JIS Driver Set \(1\)](#)
- [Tweezers \(1\)](#)
- [ESD Safe](#)
- [iFixit Opening Tools \(1\)](#)

PARTS:

- [Nintendo 3DS XL \(2012 or 2015\) Battery \(1\)](#)
- [Nintendo 3DS XL Battery \(1\)](#)
- [Nintendo 3DS XL \(2015\) Rear Panel \(1\)](#)

Step 1 — Battery



⚠ Ensure your device is powered off before proceeding. Failure to do so may result in electrical shock or damage to the device.

- Place the 3DS upside down. Remove the game card, headphones, charging cable, stylus, or anything else that may be connected to the device.

Step 2



- Using a JIS #0 screwdriver, loosen the two black screws on the back.
- The screws are held in place by captive washers and should not be completely removed.

Step 3



- Once the screws are loosened, pry open the back cover.

Step 4



- The battery is located on the left hand side of the 3DS - to remove, use the small gap located at the top-middle and pull up with a pointed tool.

To reassemble your device, follow these instructions in reverse order.