



Nintendo DSi XL Motherboard Replacement

Replacing the motherboard on the Nintendo DSi XL.

Written By: Brett Hartt



INTRODUCTION

Drop your DSi XL into the pool? Use this guide to repair or replace your motherboard.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Push Pin](#) (1)
- [Spudger](#) (1)

PARTS:

- [Nintendo DSi XL Motherboard](#) (1)

Step 1 — Battery

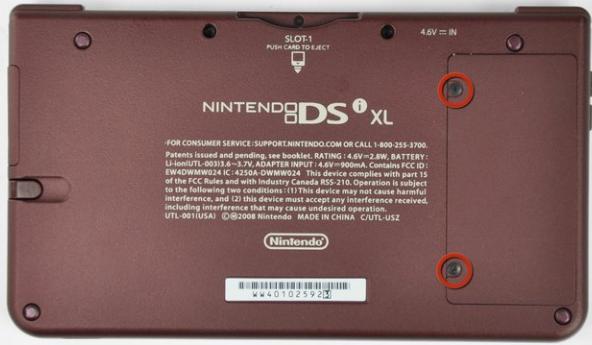

- Remove the two Phillips screws securing the battery cover to the back of the handheld console.
- Lift the battery cover off the back of the DSi XL.

Step 2



- Lift the battery from the DSi XL.

Step 3 — Lower Case



- Remove the four rubber screw covers on the lower case by prying them up with a push pin.

Step 4



- Remove the following seven Phillips screws that secure the lower case to the rest of the DSi XL:
 - Four silver 5.3 mm screws
 - Two black 5.3 mm screws
 - One black 2.5 mm screw


Step 5



(i) Turn the DSi XL over, and open the display.

- Insert a spudger between the upper and lower case at the bottom left corner of the DSi.
- Slide the spudger along the bottom edge of the upper case to release the latches securing the upper case to the lower case.

Step 6

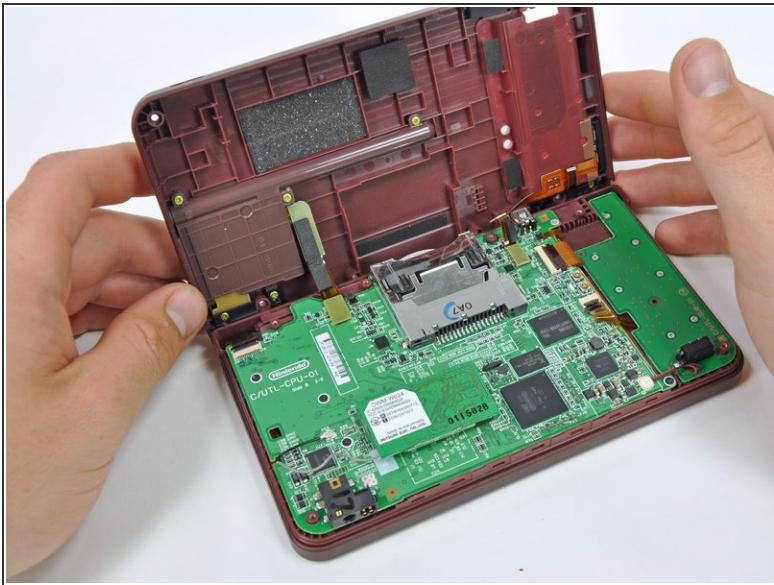


(i) Close the display and turn the DSi XL over.

- Lift the lower case from the front edge.
- Rotate the lower case away from the DSi.


(i) The lower case cannot be completely removed yet, since it is still connected to the motherboard.

Step 7

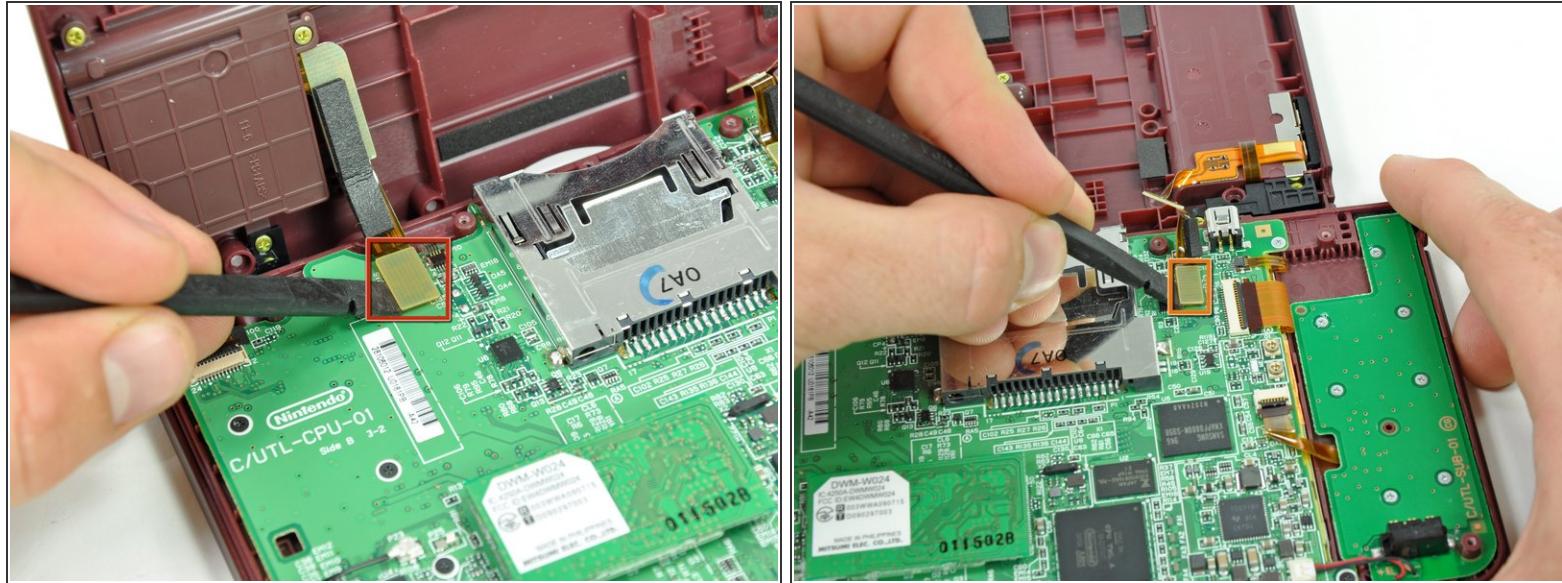

- Using a spudger, pry the SD card/right shoulder button connector off its socket.
- Pry the volume button/left shoulder button connector off its socket on the motherboard with a spudger.


Step 8 — Wi-Fi Board

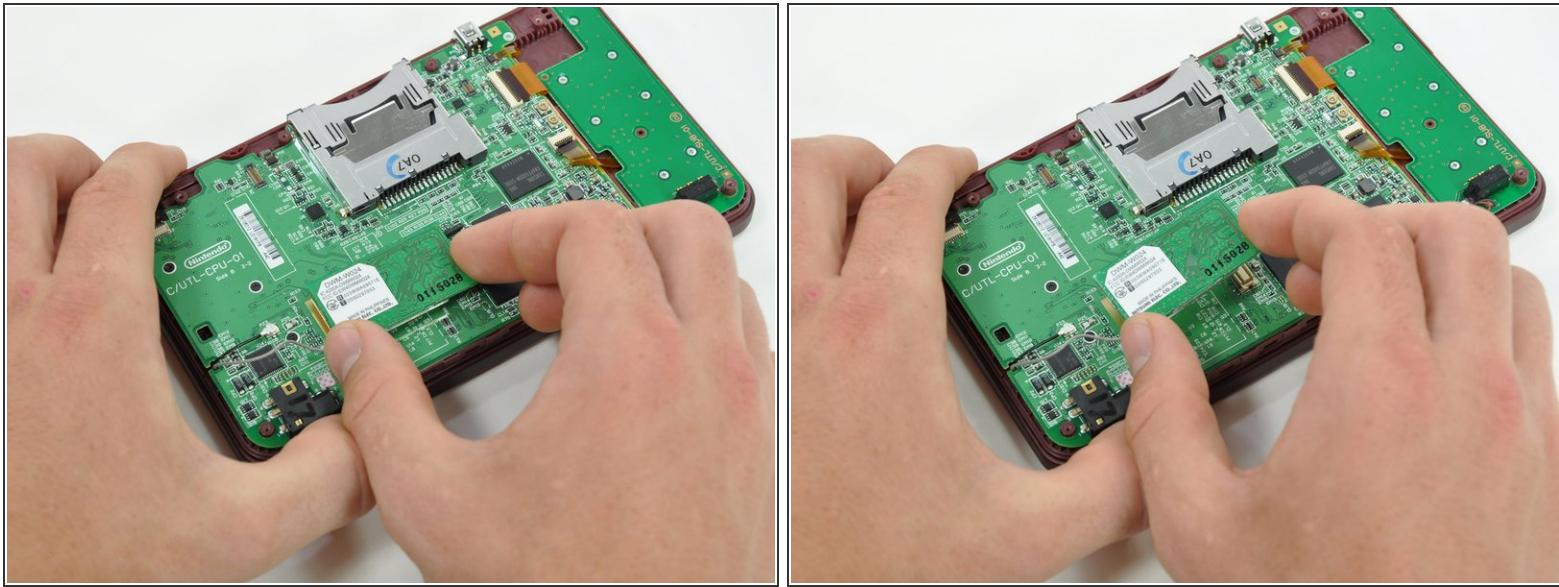

- Lift the Wi-Fi board up off its socket on the motherboard.


⚠ Do not attempt to completely remove the Wi-Fi board yet. It is attached to the motherboard by an antenna cable.

Step 9

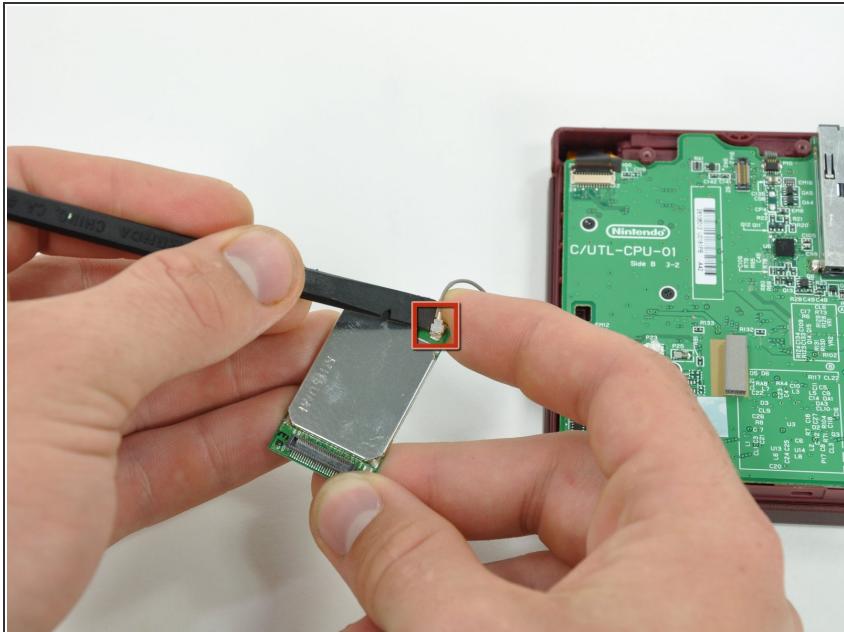



- Use a spudger to pry the Wi-Fi cable off its socket on the underside of the Wi-Fi board.

Step 10 — Motherboard

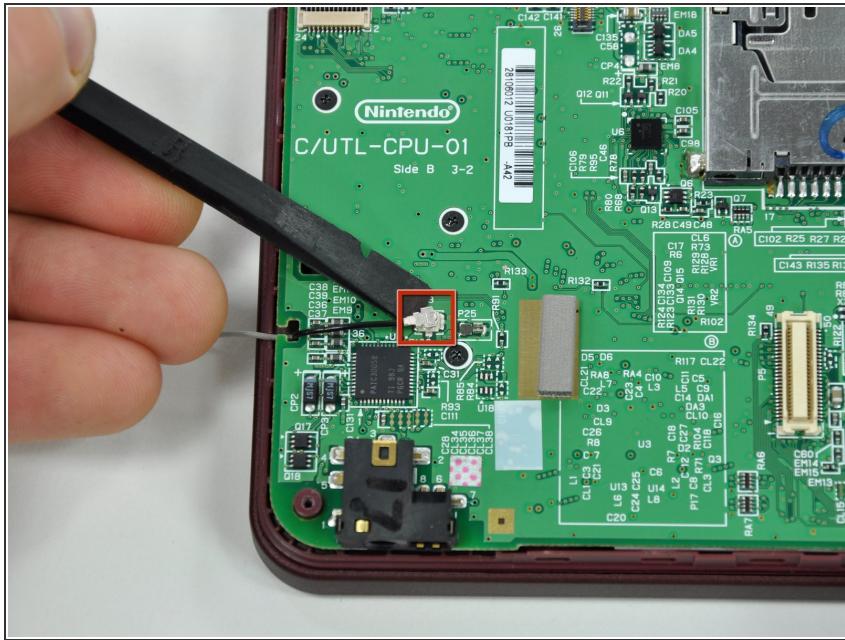


- Use a spudger to pry the microphone cable off the motherboard.
-  Pry from underneath the cable.

Step 11

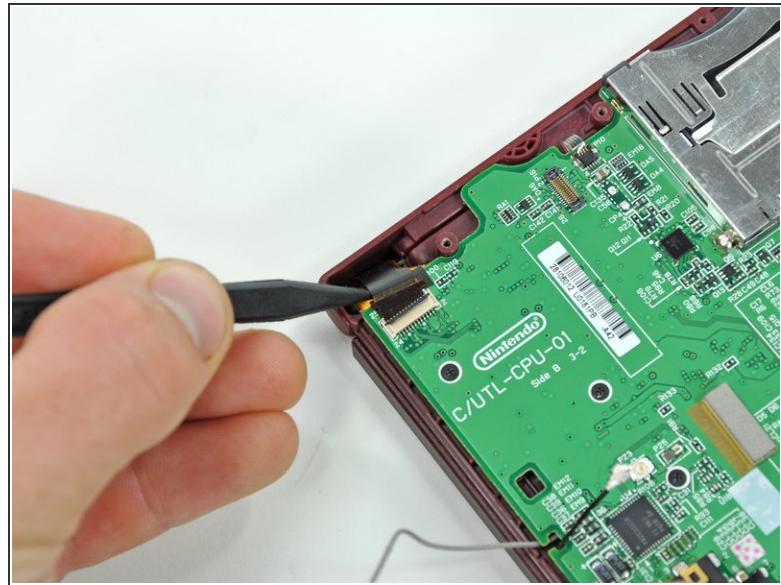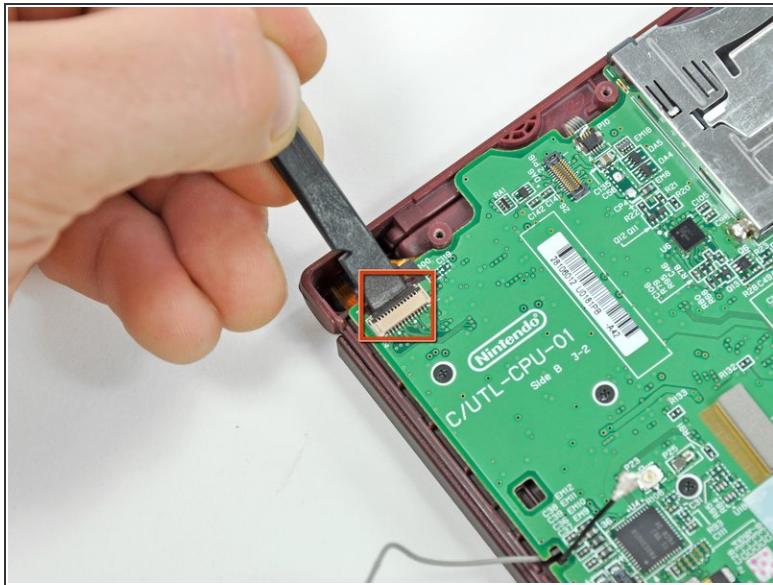


- Using the flat end of a spudger, flip up the retaining flap on the camera ribbon ZIF connector.
- Use the pointed end of a spudger to pull the camera ribbon from the ZIF connector.

Step 12

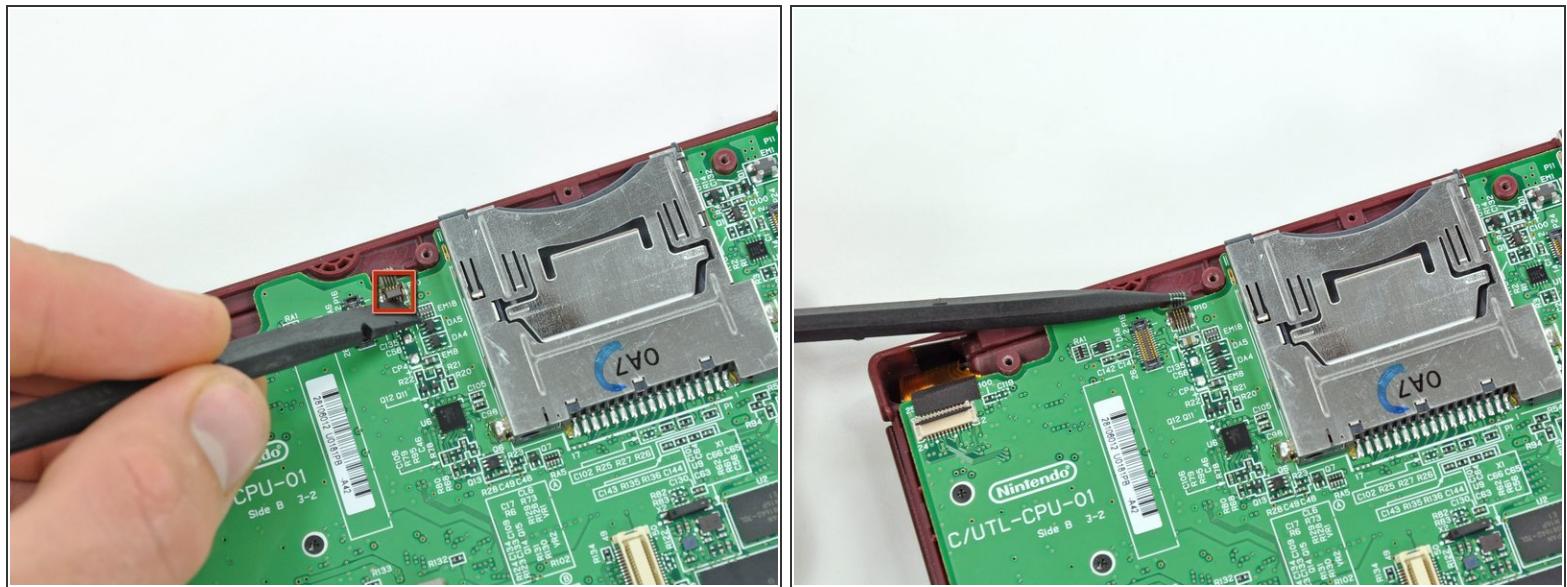


- Using the flat end of a spudger, flip up the retaining flap on the touchscreen cable ZIF connector.
- With the pointed end of the spudger, pull the touchscreen cable from its connector on the motherboard.

Step 13

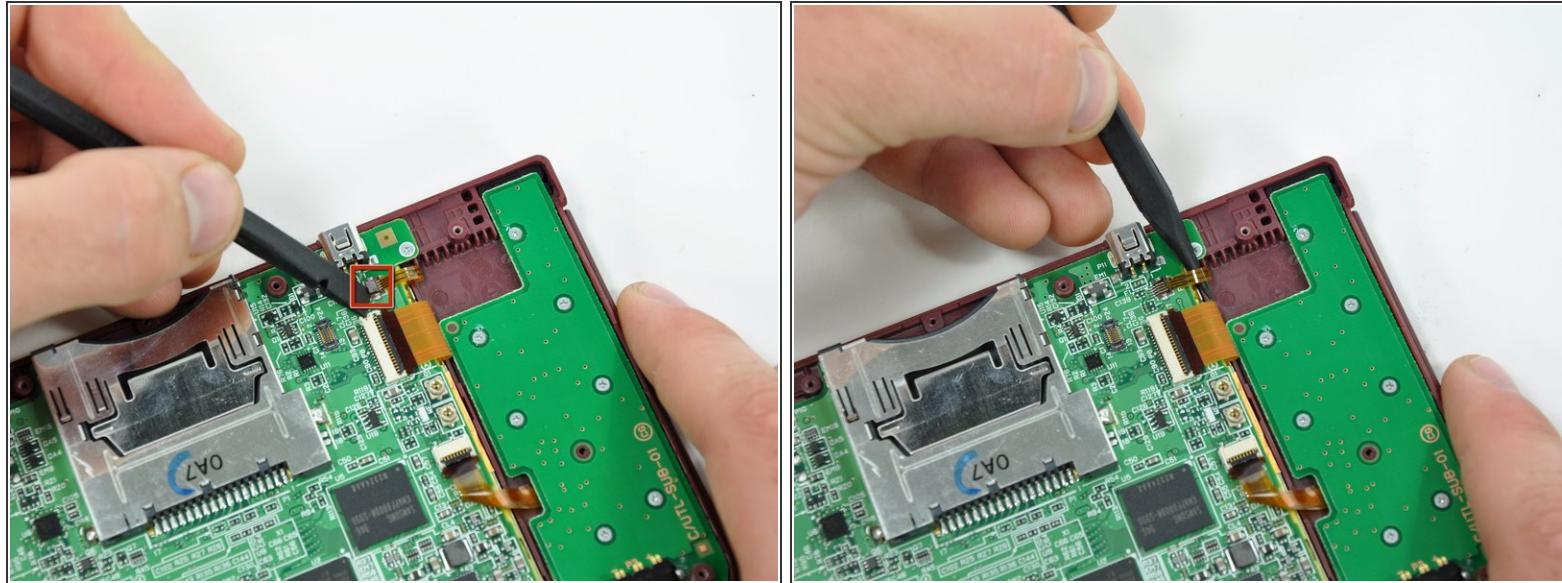


- Using the flat end of a spudger, flip up the retaining flap on the backlight cable ZIF connector.
- With the pointed end of the spudger, pull the backlight cable from its connector on the motherboard.

Step 14

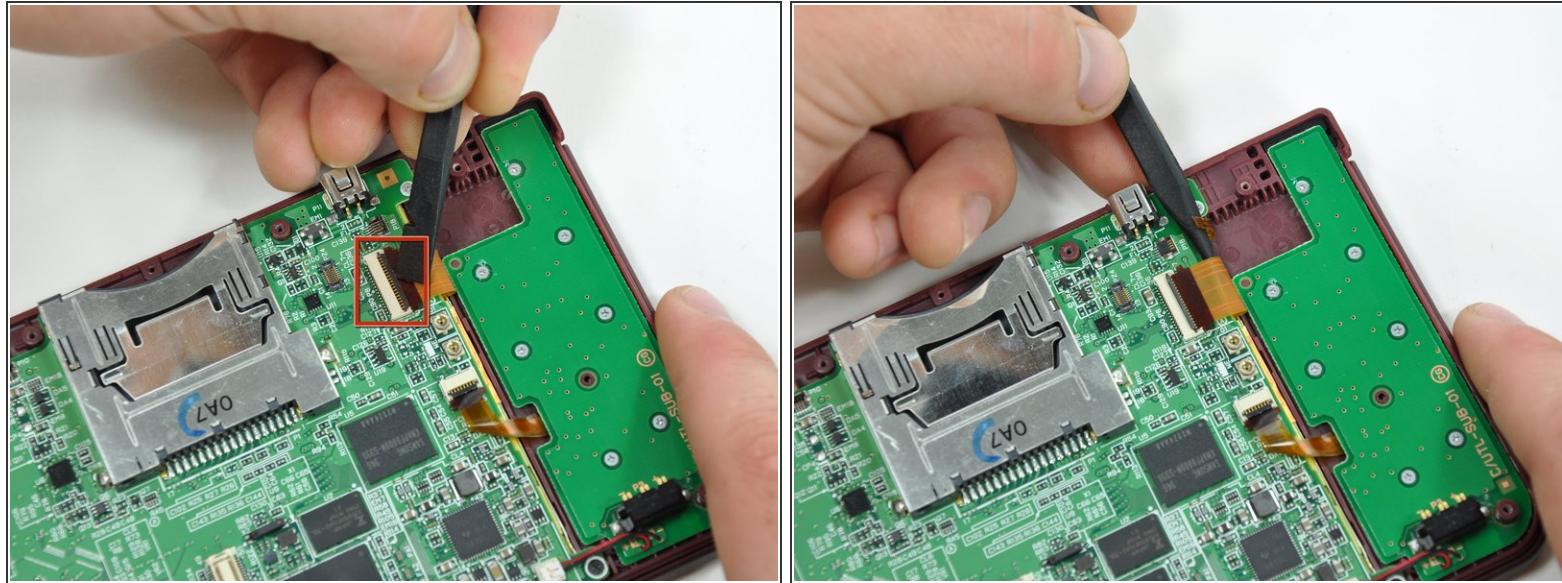


- Using the flat end of a spudger, flip up the retaining flap on the lower display data cable ZIF connector.
- With the pointed end of the spudger, pull the lower display data cable from its connector on the motherboard.

Step 15

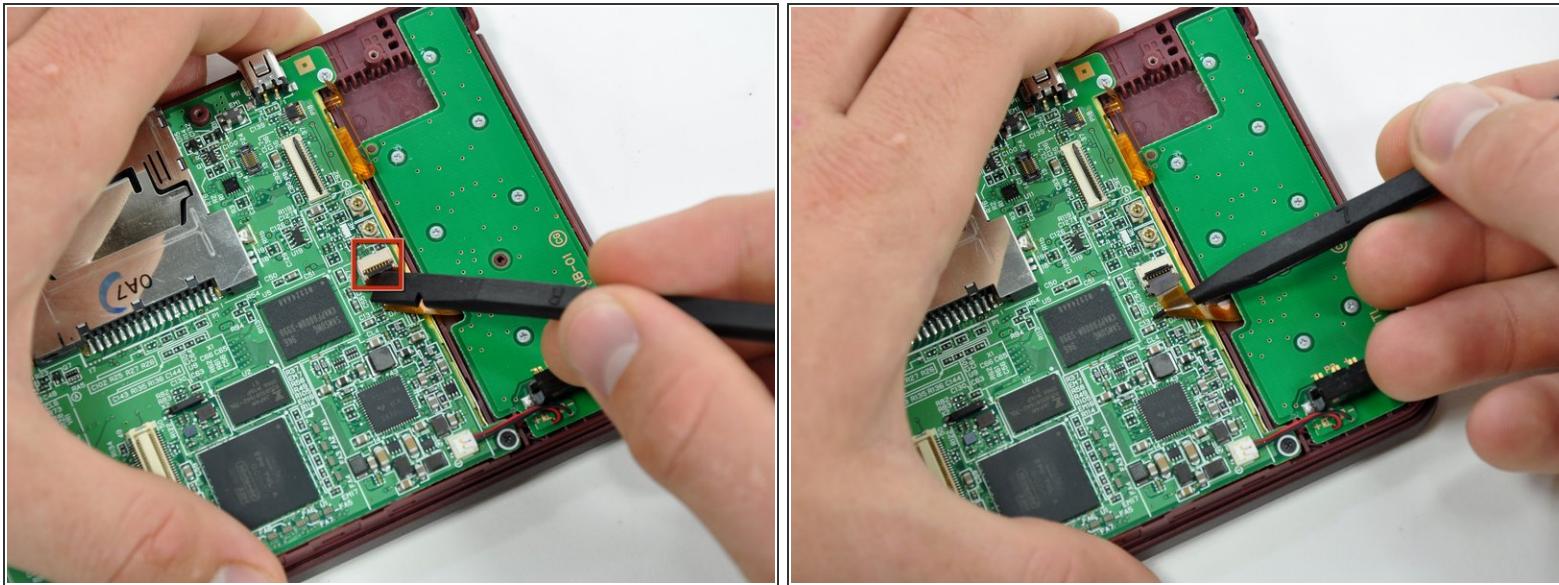

- Using the flat end of a spudger, flip up the retaining flap on the ZIF connector for the D-Pad/power button cable.
- With the pointed end of the spudger, pull the D-Pad/power button cable from its connector on the motherboard.

Step 16

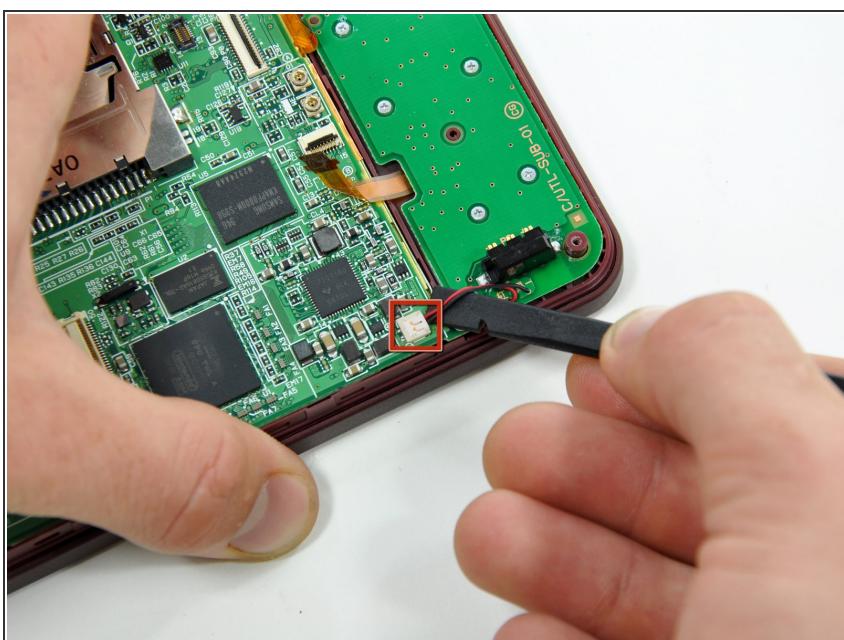


- Using the flat end of the spudger, pry the battery cable up off its socket on the motherboard.

Step 17




- Remove the screws securing the motherboard to the upper case:
 - A single 2.5 mm silver Phillips screw
 - Four 3.7 mm black Phillips screws

Step 18

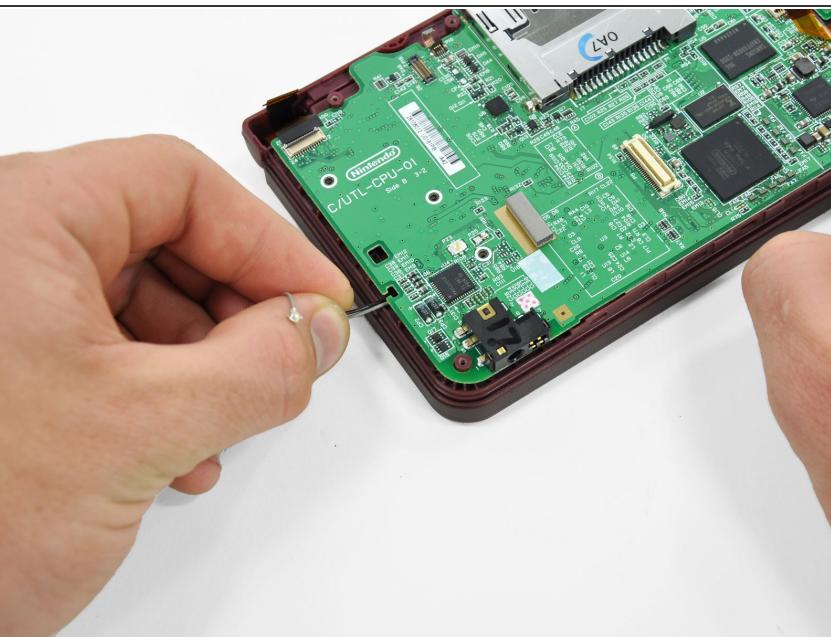

- Deroute the microphone and antenna cables through the slot in the motherboard.


Step 19

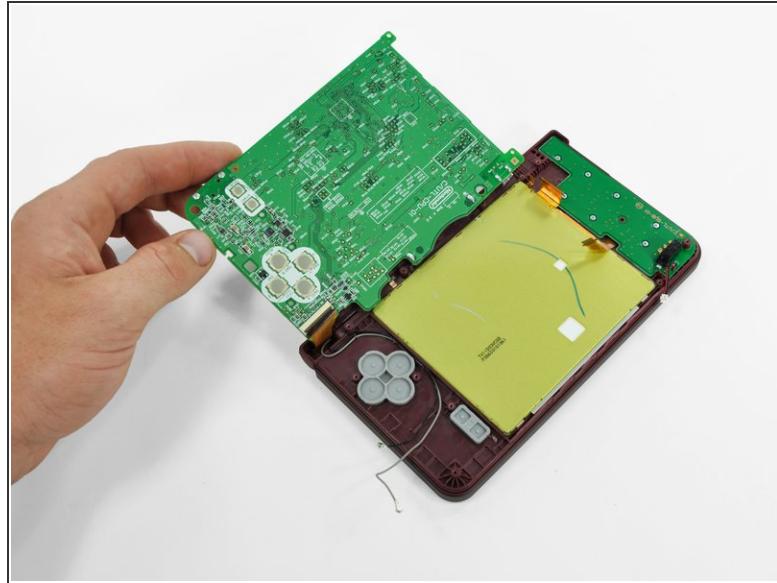

- Rotate the motherboard off the lower case.

(i) The motherboard cannot be completely removed yet. It is still attached by the upper LCD's display data ribbon cable.

Step 20

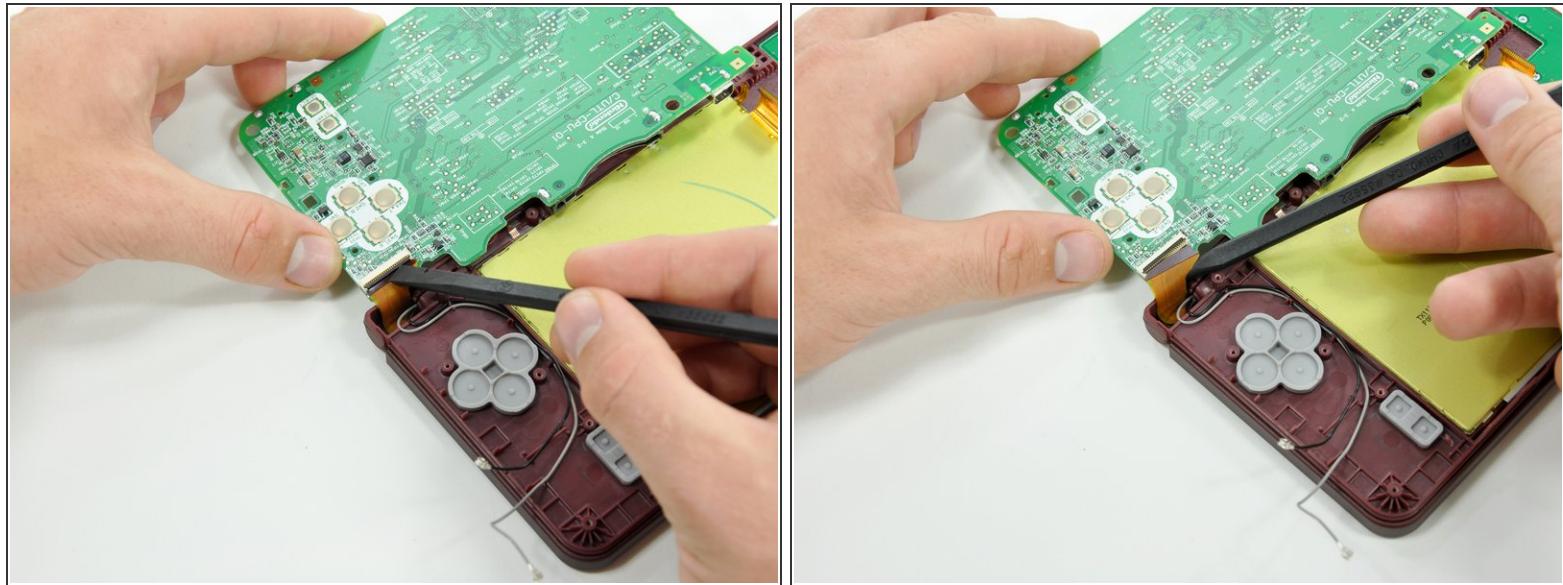

- Using the flat end of a spudger, flip up the retaining flap on the upper display data cable ZIF connector.
- With the pointed end of the spudger, pull the upper display data cable from its connector on the underside of the motherboard.

(i) The motherboard is now free from the upper case.

To reassemble your device, follow these instructions in reverse order.