



# Nintendo DSi XL Wi-fi Board Teardown

Want to Know how to get to the Wifi Board inside the Dsi xl.

Written By: Gabriel Rendon



## INTRODUCTION

Want to Know how to get to the Wifi Board inside the Dsi xl.

### TOOLS:

- Push Pin (1)
- Spudger (1)
- Phillips #00 Screwdriver (1)

### PARTS:

- Nintendo DSi XL Wi-Fi Board (1)

## Step 1 — Nintendo DSi XL Wi-fi Board Teardown




- Remove the two screws at the place of the battery under the Dsi XI.
- Lift the protector from the battery.

## Step 2



- Take the battery off the Dsi XI.

## Step 3

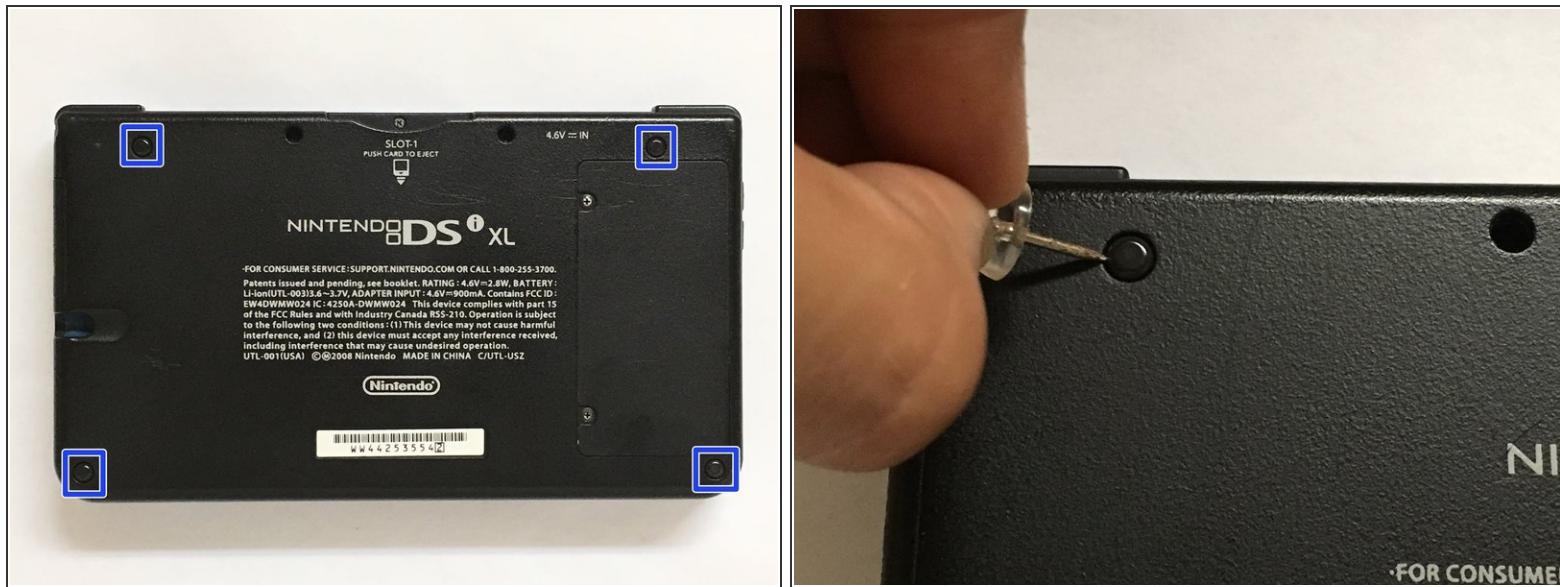


- Remove the rubber blocking the screws on the Dsi XI with a push pin don't hesitate about it.

## Step 4



- Remove the presenting screws in order to take the bottom part of the Dsi XI off.
- x4 silver 5.33m screws
- x2 black 5.3m screws
- x1 black 2.5m screw


## Step 5

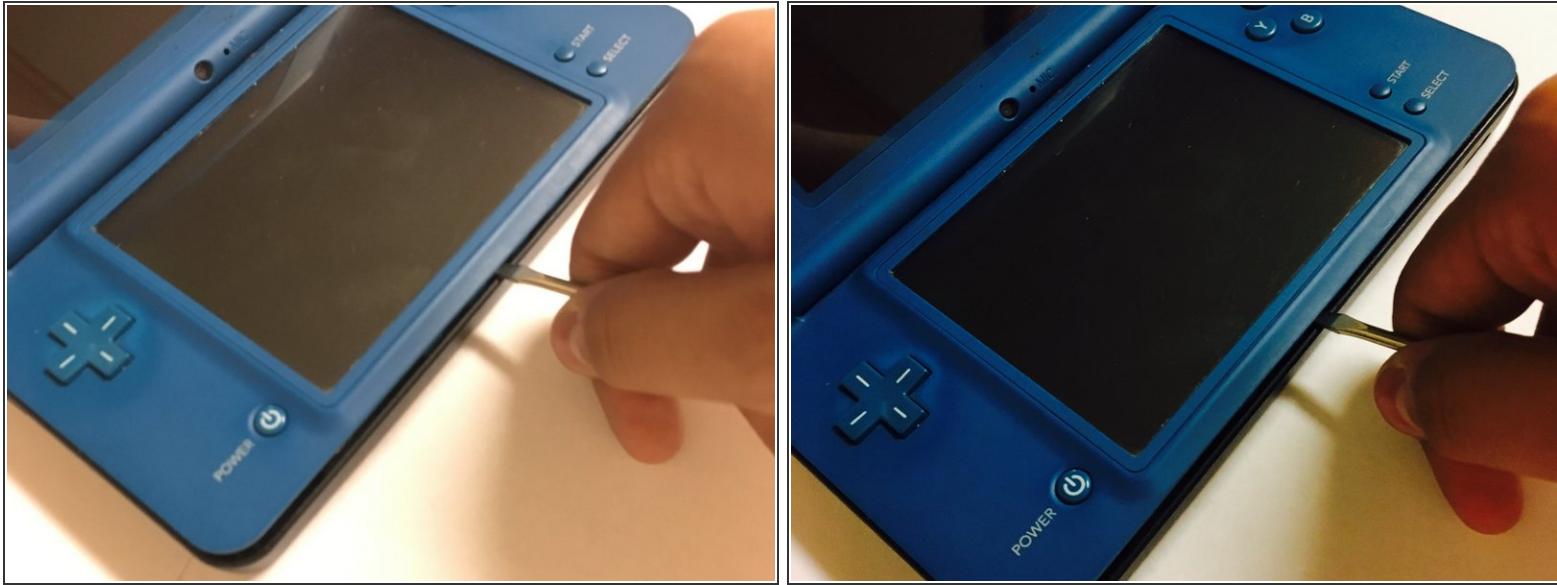

*(i)* Turn the Dsi XI over & open it.

- Insert the spudger (or anything similar to it) between the upper and lower part of the case at the left or right corner it doesn't really matter.
- Keep on doing the same around the case.

## Step 6

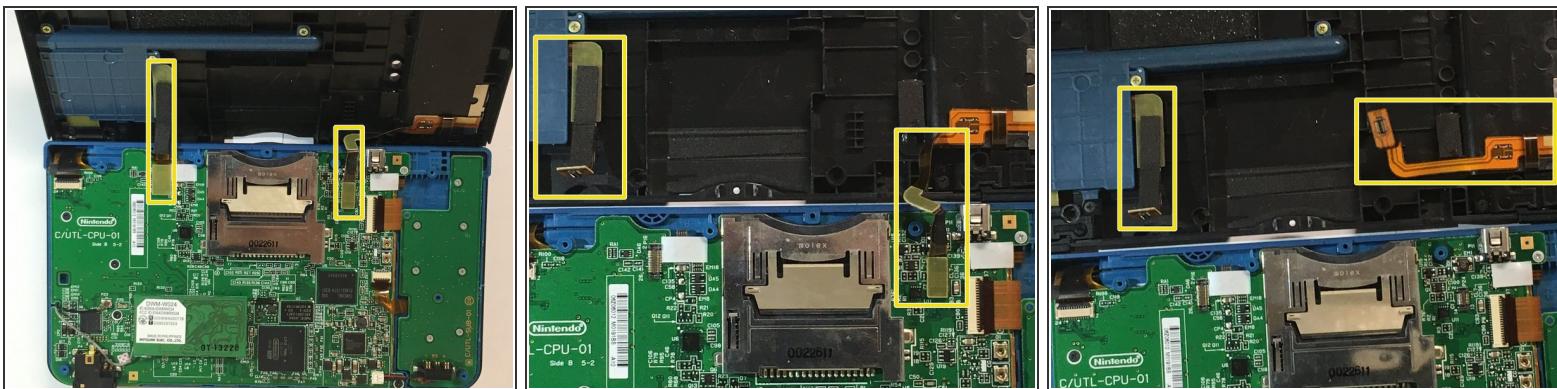


- Using your hands unconnect the connectors from both sides ( you can always put them back.)

## Step 7



- Lift the Wi-fi Board off of its socket.(you can also put this back.)

## Step 8

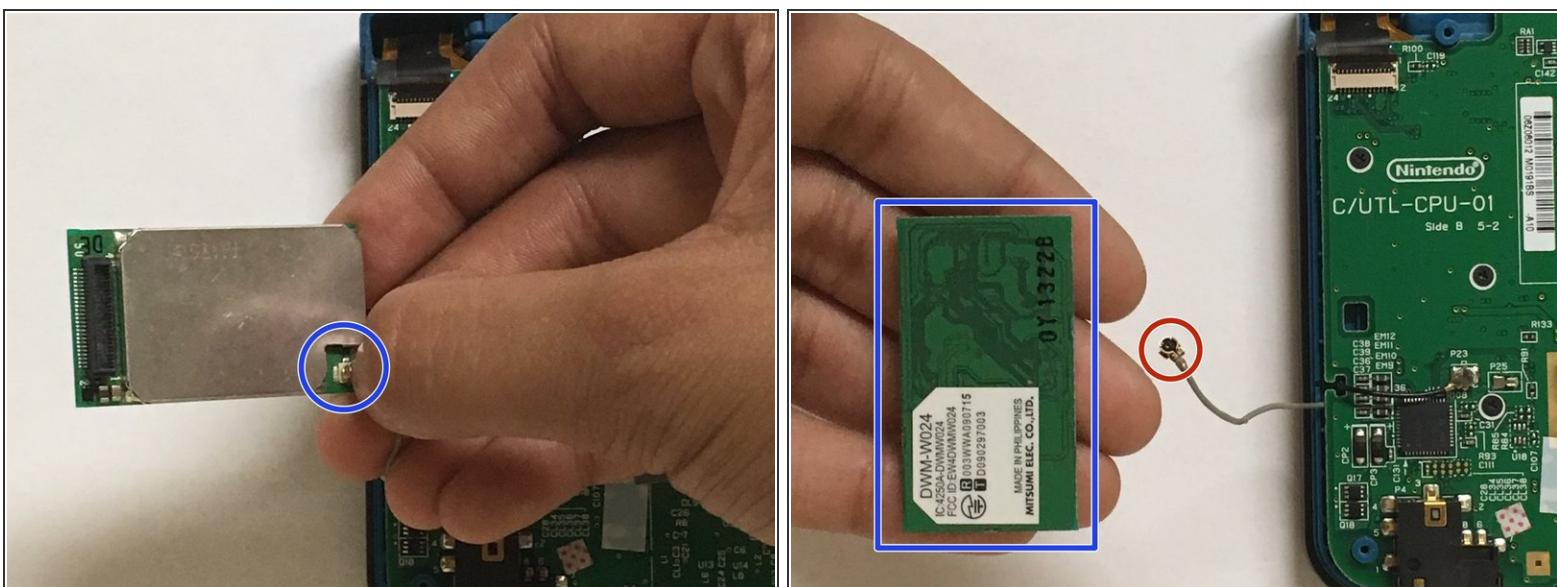

- Pull off the Wi-fi cable from The Wi-fi Board.
- ⚠ Careful while this process in which this peice can easily rip off.
- Finally you've finished and you have Dsi XI Wi-fi Board:)