



Nintendo Wii mini Upper Case Replacement

Prerequisite-only.

Written By: Kristin Anderson



INTRODUCTION

Prerequisite-only.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Nintendo Wii mini Upper Case](#) (1)

Step 1 — Upper Case



- Turn the Wii mini upside down.
- Remove the two rubber feet at the back of the console to reveal the hidden screws.
- Remove the four 6mm Phillips #0 screws.

Step 2

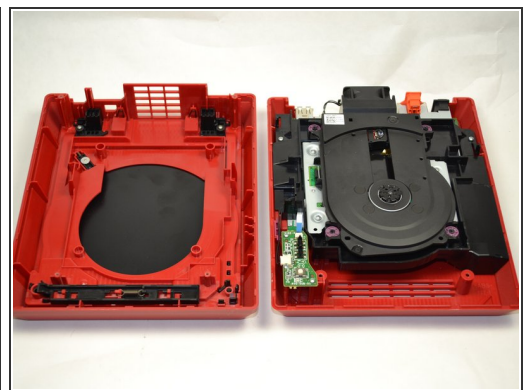

- Turn the Wii mini right-side up.
- Run a plastic opening tool around the middle edge of the console to loosen the top piece.
- Gently lift the top piece of the console and set it aside.

To reassemble your device, follow these instructions in reverse order.